



#### Silo Specifications

Weight (empty) 4,500 Lbs.
Hopper Size 170 Cubic Feet
Hopper Capacity 15,000 Lbs. (7 1/2 tons)
Dimensions 9'H X 8'-6"W X 14' L
Discharge Height 5' to 8'

Conveyor Type 7" Screw Conveyor Conveyor Drive Hydraulic

Power Honda Gas Motor

Control Power 12V DC


Scale Type Electronic Load Cell (4)

Scale Controller Rinstrum 41 I
Batch Software Loss-weight (DSS)

#### Silo Description

SupersaX silo system is a portable self-contained silo designed to store dry bulk products (cement) to be used on job sites or in plant applications. The design has many features that make the SupersaX silo system a must need in applications where simi-bulk or super sacked products are used. The silo can store up to 15,000 Lbs. of bulk product to be metered out using our exclusive loss-weight batching system. This allows the operator the precise control for batching product into a mixer or a process. The silo has adjustable legs to allow for ease of transport and proper discharge height under the conveyor. Filling the silo is done by using a forklift to lift the product over hatches on top of the silo. These hatches are designed for quick access and water tight to prevent moister contamination. The silo has a work platform to allow operator safe access to the top of the silo to assist with bag loading.



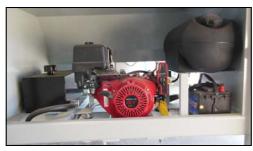



1135 E. Wooley Rd. Ph # Oxnard CA, 93030 Fax #

Ph # 805-247-0418 Fax # 805-247-0246



# 1500SS ("1500SS" has 170 c.f. capacity)

# **Operating Instructions for silo with Rinstrum** To Run Discharge Auger With Hand Held Start/Stop:

Turn Off/Run /Start switch motor to Run position.

- 1. Push **BLACK** button is to start motor, Turn on scale head by flipping the **BLUE** switch to on.
- 2. Push RED button to turn off motor.
- 3. Push GREEN button is to Start the batch.
- 4. Push **BLUE** button is to Pause the Batch.
- 5. Push YELLOW button to JOG the auger

## Checking Gross Weight in Hopper:

Press TARE button on scale until the weight is displayed "Gross Indicator light on". ("Gross" is the weight of the product in the hopper.)

## **Setting Batch Weight:**

Press **SELECT** button, (displays previous weight.)

Press **OK** button to keep weight, or

Key in new batch weight (i.e. 400), then press **OK**, (displays new batch weight)

Press **OK** (System is Ready)

## Starting Batch Cycle:

#### **Auto Mode:**

Turn Off/On/Start switch on panel to On position.

## At the Scale:

Start Batch Cycle - Press START BUTTON

(**Note**: there must be product in the hopper to start batch)

Pause Batch Cycle - Press PAUSE/RESTART Button.

(To restart and finish batch cycle press **SELECT** again, auger will stop at the end of the batch)

**Abort Batch Cycle** – Press **STOP** while auger is in the "**Stop Mode**"

#### End Of Day

- 1. Turn off scale by flipping BLUE switch to off.
- 2. Turn motor key to off.

#### Silo Level

Silo will hold approximately 15,000 lbs. gross weight of cement. (Lighter weight materials, the silo gross weight capacity will be less.)

1135 E. Wooley Rd. Ph # 805-247-0418 Oxnard CA, 93030 Fax # 805-247-0246





Scale Controller:

Power On/Off Switch

Indicator On/ Off Switch



#### **Hand Held Remote:**

- 1. Push **BLACK** button is to start motor,
  Turn on scale head by flipping the
  Power switch to on. Make sure the Key
  to the Honda motor is on.
- 2. HOLD RED button to turn off motor.
- 3. Push GREEN button to start batch.
- 4. Push BLUE button to pause batch.
- 5. Push YELOW button to jog auger.

1135 E. Wooley Rd. Ph # 805-247-0418 Oxnard CA, 93030 Fax # 805-247-0246






1135 E. Wooley Rd. Ph # 805-247-0418 Oxnard CA, 93030 Fax # 805-247-0246



#### **Daily Checks:**

#### **Weekly Service:**

- 1. Motor Oil
- 2. Gasoline
- 1. Check Air Filter (Once a Week)
- 2. Grease Bearings (Once a week 2-5 Pumps in each Bearing)
- 3. Check Hydraulic Fluid Level

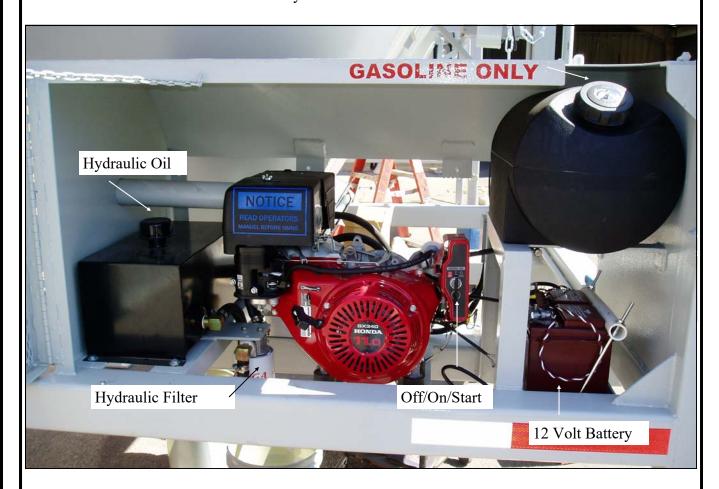

#### **Service**

- 1. Change Hydraulic Oil ever 500 Hours (Hydraulic Oil: AW-32)
- 2. Change Motor Oil ever 100 Hours (Motor Oil: 10W-30)
- 3. Check hydraulic filter change with oil

1135 E. Wooley Rd. Ph # 805-247-0418 Oxnard CA, 93030 Fax # 805-247-0246



#### **PARTS LIST**

Ln # 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30	Qty 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	DSS Part # VAF4 VA3-6 ML-100 4K SC20 ELRL-3 ELTS-4 ELBT-2 ELWI-8 ELWI-9 ELF-3 EL22-7 DPAU5 DPCO1 DPCO1 DPCO112 HY1 HY10 HY11 HY13 HY15 HY17 HY20 HY22 HY20 HY22 HY23 HY24 HY25 HY27 HY29 HY3	Description 20" manway 3" Gate valve 4K Single-Ended Shear Beam Nickel Plated Tool Steel Jun Box W/ Sum Card Stainless Relay DC 10 pos #8 Terminal strip Battery deep cycle 19" 4 Ga Battery Cable 40" 4 Ga Battery Cable For SS In line ATO Fuse Holder Start Stop Switch, momentary, 1black, 1red, 1no, 1nc, 7" x 10' auger for super sax 5016 coupling chain 5016 - 1" chain coupling sprocket 5016 - 1 1/2" chain coupling sprocket Housing 253T-8-8 Brass fitting 2111-08-08-B 11 HP Engine Bracket 2 Bolt flange Char-Lynn 5 gal Reservoir Pump for 11HP SS Hose set assembly for SS One complete set Long Element Filter Spider 1" Love Joy Coupling /4" Love Joy Coupling Relief Valve Solenoid Valve 8.25 Gal Gas Tank with gauge
31 32 33	4 1 1	HY30 HY32 HY4	weld on 1/2" Pipe clamp 3/4" Filter Head Header Block
32	1	HY32 HY4 HY6	3/4" Filter Head
32 33	1	HY32 HY4	3/4" Filter Head Header Block
32 33 34	1 1 1	HY32 HY4 HY6	3/4" Filter Head Header Block 6400-08-12-0 Adapter
32 33 34 35	1 1 1 1	HY32 HY4 HY6 HY7	3/4" Filter Head Header Block 6400-08-12-0 Adapter 6801-08-08-NWO
32 33 34 35 36	1 1 1 1 2	HY32 HY4 HY6 HY7 HY8	3/4" Filter Head Header Block 6400-08-12-0 Adapter 6801-08-08-NWO 3474-NWO-08-08 Adapter
32 33 34 35 36	1 1 1 1 2	HY32 HY4 HY6 HY7 HY8	3/4" Filter Head Header Block 6400-08-12-0 Adapter 6801-08-08-NWO 3474-NWO-08-08 Adapter
32 33 34 35	1 1 1 1	HY32 HY4 HY6 HY7 HY8	3/4" Filter Head Header Block 6400-08-12-0 Adapter 6801-08-08-NWO 3474-NWO-08-08 Adapter
32 33 34 35	1 1 1 1	HY32 HY4 HY6 HY7	3/4" Filter Head Header Block 6400-08-12-0 Adapter 6801-08-08-NWO
32 33 34	1 1 1	HY32 HY4 HY6	3/4" Filter Head Header Block 6400-08-12-0 Adapter
32 33 34	1 1 1	HY32 HY4 HY6	3/4" Filter Head Header Block 6400-08-12-0 Adapter
32 33	1	HY32 HY4	3/4" Filter Head Header Block
32	1	HY32	3/4" Filter Head
32	•	HY32	3/4" Filter Head
	•		
24	1	□∧3∪	wold on 1/2" Ding clamp
	-		
	-		
			, , ,
	1		
25	1	HY23	Spider
24	1		Long Element Filter
	-		
	-		•
	_		
	-		
			· · · · · · · · · · · · · · · · · · ·
_			
12	1		
11	1	EL22-7	Start Stop Switch, momentary, 1black, 1red, 1no, 1nc,
10	1	ELF-3	In line ATO Fuse Holder
9	1	ELWI-9	40" 4 Ga Battery Cable For SS
8	1	ELWI-8	
	1		Battery deep cycle
	-		
	-		
	-		
	-		
			•
	-		
ln#	Otv	DSS Bort #	Description
	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30	1 1 1 1 1 3 4 4 4 1 1 5 1 1 8 1 9 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 VAF4 2 1 VA3-6 3 4 ML-100 4K 4 1 SC20 5 1 ELRL-3 6 1 ELTS-4 7 1 ELBT-2 8 1 ELWI-8 9 1 ELWI-9 10 1 ELF-3 11 1 EL22-7 12 1 DPAU5 13 1 DPCO 14 1 DPCO1 15 1 DPCO1 15 1 HY10 18 2 HY11 17 1 HY10 18 2 HY11 19 1 HY13 20 1 HY15 21 1 HY17 22 1 HY2 23 1 HY20 24 1 HY22 25 1 HY23 26 1 HY24 27 1 HY25 28 1 HY27 29 1 HY29



#### **PARTS LIST**

Ln # 40 41 42 43 44 45 46 47	Qty 1 3 5 1 1 1 1	DSS Part # FLV-2 H14F SC2 SC-R 411 DPM11G GX390 ELPN-3 ELPN1214P ELPN1214SW ELPN14128W	Description 1/4" in Line Fuel Filter 1/4" Fuel Line 4 Conductor Load Cell Cable Rinstrum 411, 16 HP Honda motor (QAE2) 10" x 8" metal backing for box 14" x 12" back panel 14" x 12" box swing panel kit 14" x 12" x 8" window panel box
_	1		·
50	1	HY41	Coil for solinoid
51	1	EL22-21	Operator, black, plastic, zb5, nonilluminated, booted, momentary
52	1	EL22-22	Operator, green, plastic, zb5, nonilluminated, booted, momentary
53	1	EL22-23	Operator, red, plastic, zb5, nonilluminated, booted, momentary
54	1	EL22-24	Operator, yellow, plastic, zb5, nonilluminated, booted, momentary
55	4	EL22-47	Contact block, push button station, 1 normal open
56	1	EL22-49	Operator, white, plastic zb5, nonilluminated, booted, momentary
57	1	EL22-5	Button enclosure 5 hole
58	4	FI112-WC	1 1/2" cap weld
59	2	HCQ8	2-10" clamps Bag House Quick Release
60	1	ELP-52	Blue lighted toggle switch 12volt
61	10	OIL3	Hydraulic Oil