BLIND CORNER OPTIMISER - 900/1000mm LH

Assembly and fitting instructions






Do not attach door until Corner Optimiser has been fully assembled and fitted.




IMPORTANT - The unit has a maximum loading limit of 60kg. Load should be evenly distributed across all baskets with maximum load capacity for each basket not exceeding 15kg.


All fixings supplied must be used for installation.

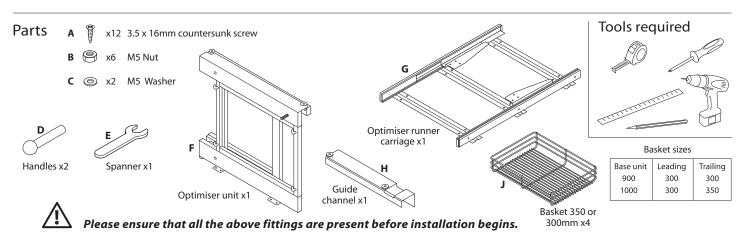


Base unit and door sizes.

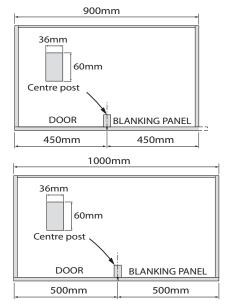


2 Fit 2 handles.

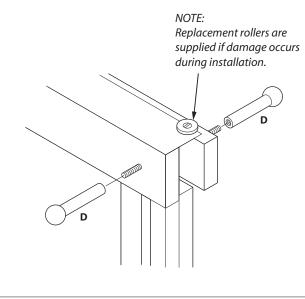


3 Locate and fit Optimiser runner carriage to base unit.

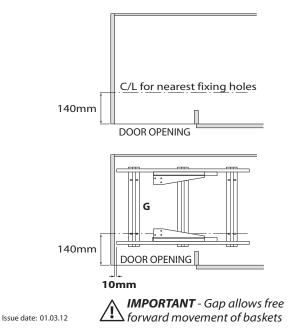


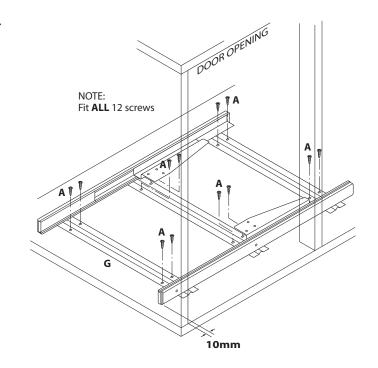


4 Lower unit onto runner carriage and attach the 6 nuts.

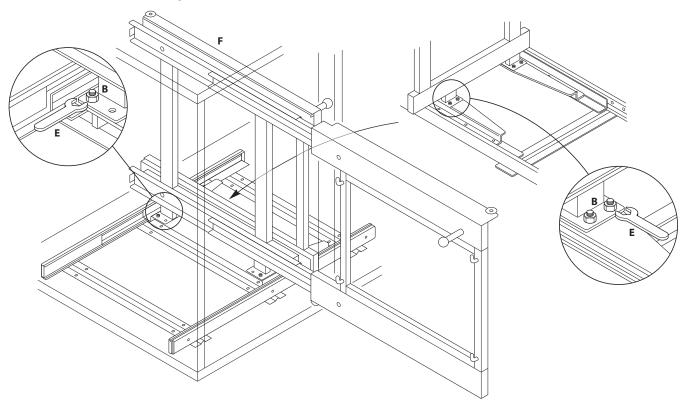

5 Push unit to far left and fit guide channel to right/front of runner carriage. See details if fine adjustment is needed.

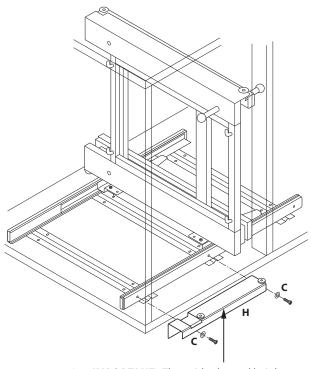


IMPORTANT: The guide channel height must be carefully adjusted to allow unrestricted forward movement of the Optimiser and to ensure the limit stop is held by the nylon wheel.

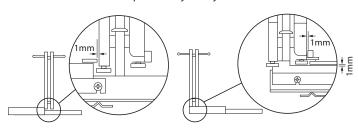

Issue date: 01.03.12

6 Attach baskets

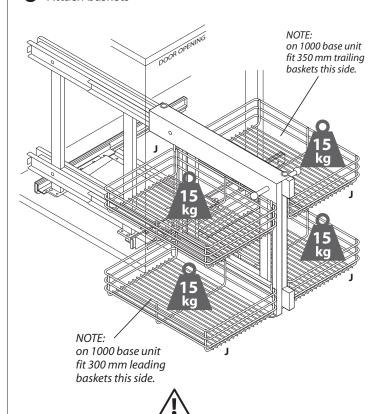

IMPORTANT - The unit has a maximum loading limit of 60kg. Load should be evenly distributed across all baskets with maximum load capacity for each basket not exceeding 15kg.

Basket sizes

Base unit	Leading	Trailing
900	300	300
1000	300	350

BLIND CORNER OPTIMISER - 900/1000mm RH

Assembly and fitting instructions









Do not attach door until Corner Optimiser has been fully assembled and fitted.

IMPORTANT - The unit has a maximum loading limit of 60kg. Load should be evenly distributed across all baskets with maximum load capacity for each basket not exceeding 15kg.


All fixings supplied must be used for installation.

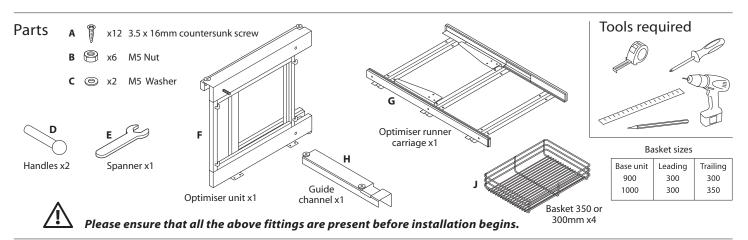


Base unit and door sizes.

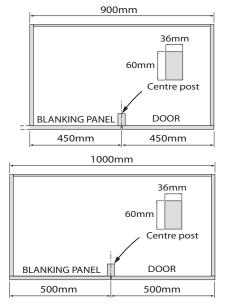



2 Fit 2 handles.

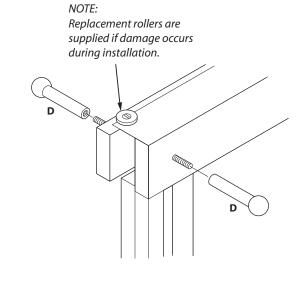


3 Locate and fit Optimiser runner carriage to base unit.

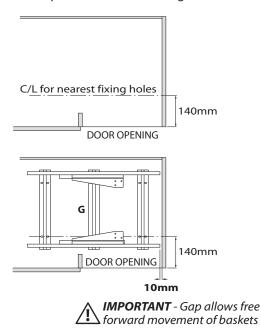


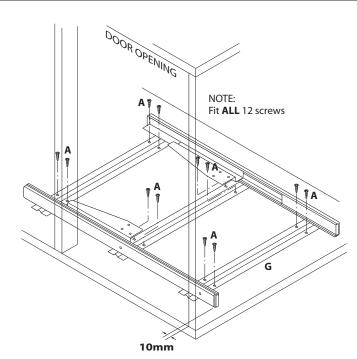

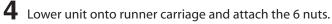


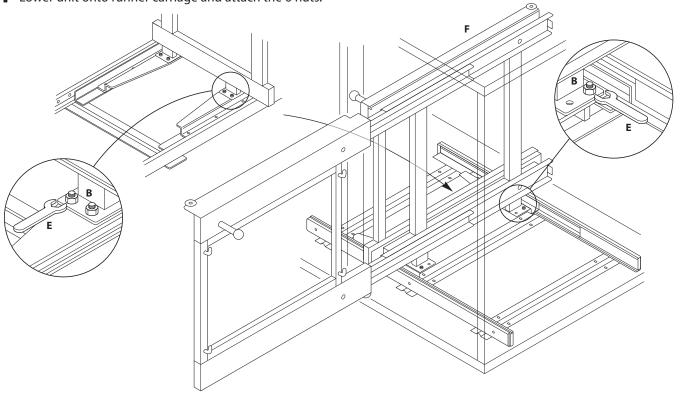


5 Push unit to far left and fit guide channel to right/front of runner carriage. See details if fine adjustment is needed.

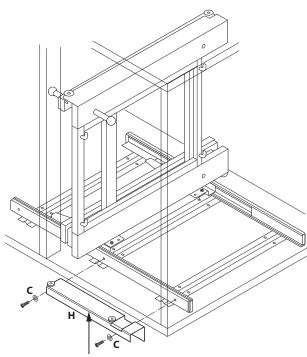

IMPORTANT: The guide channel height must be carefully adjusted to allow unrestricted forward movement of the Optimiser and to ensure the limit stop is held by the nylon wheel.

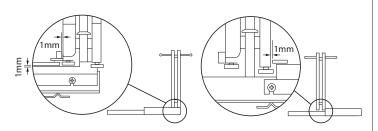

6 Attach baskets

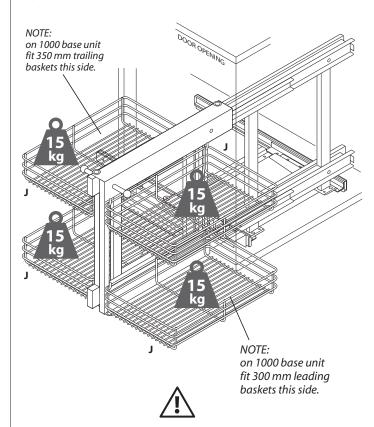

IMPORTANT - The unit has a maximum loading limit of 60kg. Load should be evenly distributed across all baskets with maximum load capacity for each basket not exceeding 15kg.

Basket sizes

Base unit	Leading	Trailing
900	300	300
1000	300	350

BLIND CORNER OPTIMISER - 800mm LH

Assembly and fitting instructions






Do not attach door until Corner Optimiser has been fully assembled and fitted.




IMPORTANT - Lower door hinge must be fitted 48mm from door bottom to allow free opening of Optimiser.

The unit has a maximum loading limit of 60kg. Load should be evenly distributed across all baskets with maximum load capacity for each basket not exceeding 15kg. All fixings supplied must be used for installation.

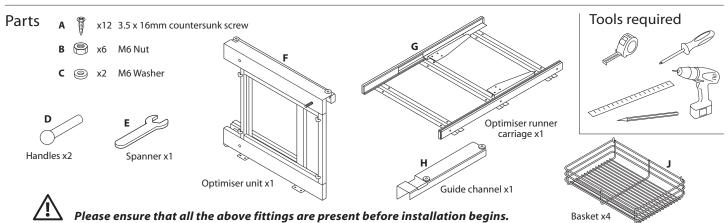


Fit 36 x 60mm centre post centrally. Use 400mm door.

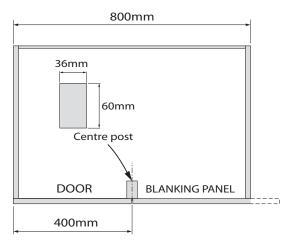



2 Drilling door 100mm

IMPORTANT - Lower door hinge must be fitted 48mm from door bottom to allow free opening of Optimiser.

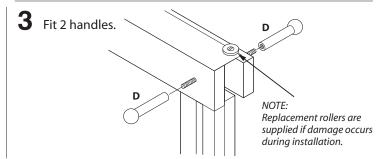


4 Locate and fit Optimiser runner carriage to base unit.

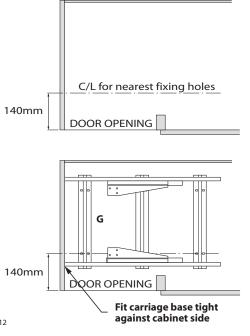


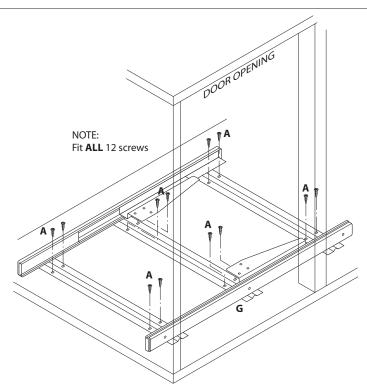


Issue date: 01.03.12

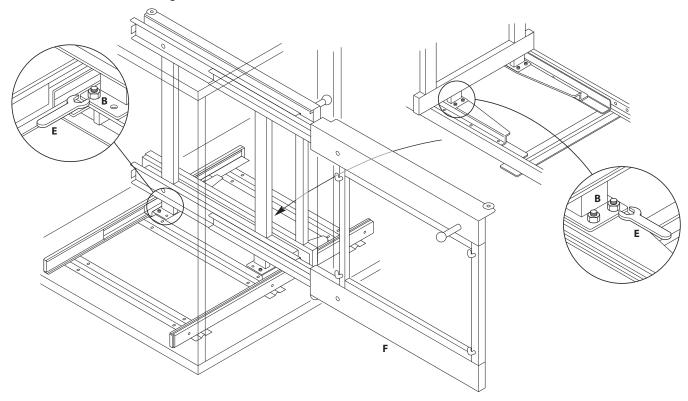


6 Push unit to far left and fit guide channel to right/front of runner carriage. See details if fine adjustment is needed.

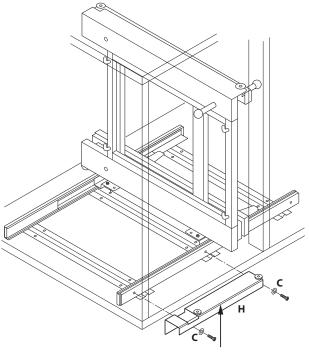

IMPORTANT: The guide channel height must be carefully adjusted to allow unrestricted forward movement of the Optimiser and to ensure the limit stop is held by the nylon wheel.

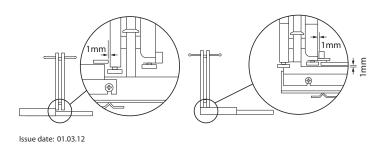

7 Attach baskets

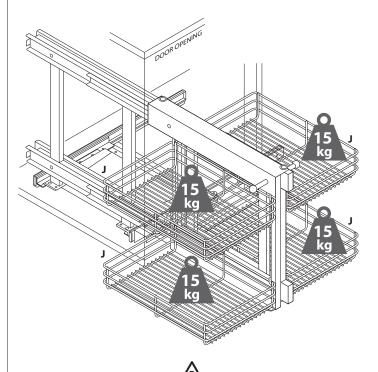

IMPORTANT - The unit has a maximum loading limit of 60kg. Load should be evenly distributed across all baskets with maximum load capacity for each basket not exceeding 15kg.

BLIND CORNER OPTIMISER - 800mm RH

Assembly and fitting instructions






Do not attach door until Corner Optimiser has been fully assembled and fitted.




IMPORTANT - Lower door hinge must be fitted 48mm from door bottom to allow free opening of Optimiser.


The unit has a maximum loading limit of 60kg. Load should be evenly distributed across all baskets
with maximum load capacity for each basket not exceeding 15kg. All fixings supplied must be used for installation.

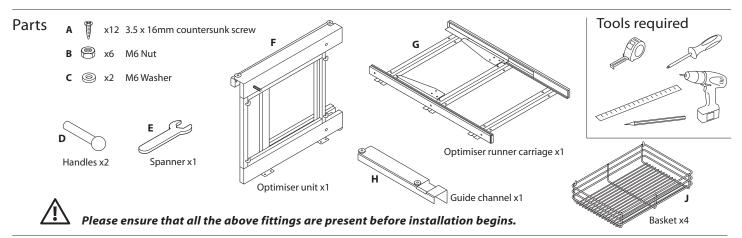


Fit 36 x 60mm centre post centrally. Use 400mm door.

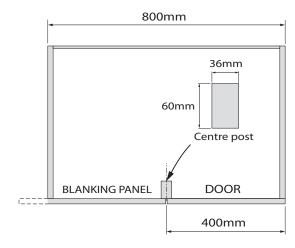



2 Drilling door

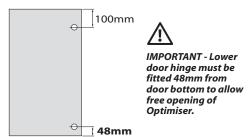


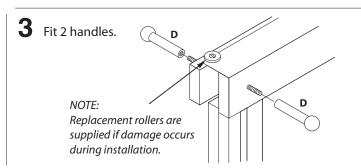


4 Locate and fit Optimiser runner carriage to base unit.

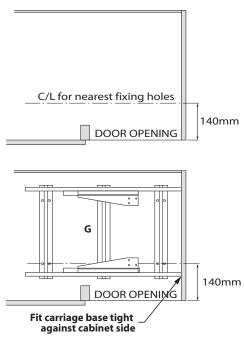

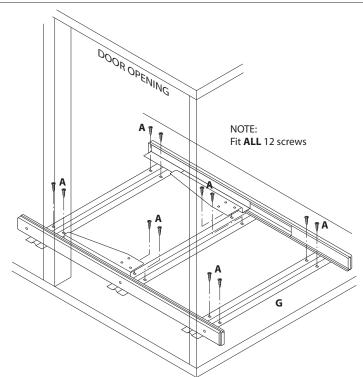


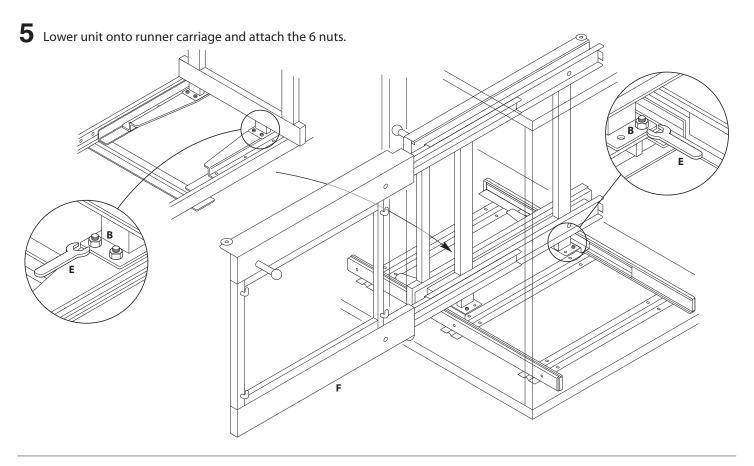


6 Push unit to far left and fit guide channel to right/front of runner carriage. See details if fine adjustment is needed.

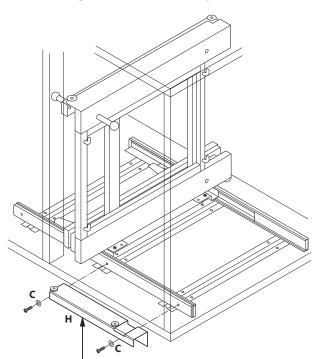

IMPORTANT: The guide channel height must be carefully adjusted to allow unrestricted forward movement of the Optimiser and to ensure the limit stop is held by the nylon wheel.

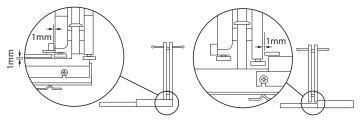

7 Attach baskets

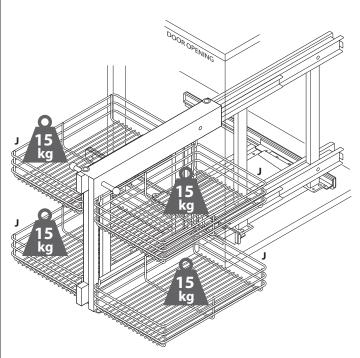



IMPORTANT - The unit has a maximum loading limit of 60kg. Load should be evenly distributed across all baskets with maximum load capacity for each basket not exceeding 15kg.