



LET'S GET SEWIN'

www.Letsgetsewin.com

351-201-0708



Thank You for Downloading the Sewing Machine Problems and Fixes Cheat Sheet!

We're so glad you've decided to grab this handy guide. Whether you're a seasoned sewer or just starting your sewing journey, this cheat sheet is here to help you overcome common sewing machine challenges with ease and confidence.

How to Use This Cheat Sheet

1. Identify the Problem

Start by matching the issue you're experiencing with the listed problems in the cheat sheet. For example, if your thread is bunching under the fabric, locate the corresponding section titled **Thread Bunching Under Fabric**.

2. Understand the Cause

Check the "Cause" column to pinpoint what might be creating the issue. Knowing the root cause helps you avoid similar problems in the future.

3. Follow the Fix

Use the detailed steps in the "Fix" column to resolve the problem. Each fix is crafted to be clear and actionable, guiding you to get your machine back on track.

4. Prevent Future Issues

The notes provided for each problem offer helpful tips to maintain your sewing machine and prevent recurring problems. Incorporate these tips into your sewing routine for smoother projects.

We're Here for You!

Your sewing journey is important to us, and we want you to know you're never stitching alone! Whether you're tackling a tricky project, exploring new techniques, or just need a little advice, we're here to help every step of the way. Have a question, need guidance, or simply want to share your creations? Don't hesitate to reach out! You can contact us anytime—we love connecting with our sewing community and supporting your creative journey.

Let's keep making magic together!



letsgetsewin.com/contact-us

Happy Sewin'
The Let's Get Sewin'



© 2025 Let's Get Sewin'. All rights reserved.

This document is for personal or educational use only. Unauthorized reproduction, distribution, or commercial use is prohibited without prior written permission.

SEWING MACHINE PROBLEMS AND FIXES

CHEAT SHEET

Problem	Cause	Fix	Notes
Thread Bunching Under Fabric	Incorrect threading or bobbin placement	Remove the thread and re-thread the machine, ensuring the presser foot is up. Check that the bobbin is wound evenly and placed correctly in its case. Clean the bobbin area to remove lint or stray threads.	Always thread the machine with the presser foot up for proper tension.
Skipped Stitches	Incorrect needle or damaged needle	Replace the needle with a new one appropriate for the fabric type. Ensure the needle is fully inserted and tightened in the machine. Check the machine's threading and tension settings.	Universal needles work for most fabrics; use ballpoint for knits and sharp for wovens.
Needle Breaking	Bent needle, pulling fabric, or incorrect needle	Replace the needle with a straight, new one. Avoid forcing or pulling the fabric—let the feed dogs move it. Use a needle that matches the fabric weight and type.	Heavier fabrics require stronger needles like denim or leather needles.
Uneven or Loose Stitches	Incorrect tension settings or threading issues	Adjust the upper tension dial to a medium setting and test on scrap fabric. Re-thread the machine, ensuring the thread passes through all tension guides correctly. Check the bobbin tension by gently pulling the bobbin thread.	Always test tension adjustments on similar fabric scraps.
Machine Making Strange Noises	Lint buildup or loose screws	Turn off the machine and remove the throat plate. Use a lint brush to clean around the feed dogs and bobbin case. Check for loose screws or parts and tighten as needed.	Regular cleaning prevents major issues; follow the manual for guidance.
Fabric Not Moving	Feed dogs lowered or dirty	Ensure the feed dogs are raised (check the machine settings). Clean the feed dogs with a lint brush to remove buildup. Avoid fabric that's too thick for the machine without proper settings.	Use a walking foot for thick or layered fabrics.
Thread Keeps Breaking	Incorrect thread type, tension too tight, or old thread	Use a high-quality thread that matches the fabric type. Loosen the upper tension slightly and test the stitch. Replace old or brittle thread.	Polyester threads are stronger than cotton for most uses.

© 2025 Let's Get Sewin'. All rights reserved.

This document is for personal or educational use only. Unauthorized reproduction, distribution, or commercial use is prohibited without prior written permission.

Problem	Cause	Fix	Notes
Machine Not Sewing	Presser foot not down or thread tangled	Lower the presser foot before sewing. Remove the fabric and inspect for thread tangles; cut and remove them. Re-thread the machine and bobbin carefully.	Always check the threading to ensure it is correct and that the bobbin is seated properly and wound tight an even.
Bobbin Thread Not Catching	Incorrect threading or needle position	Re-thread both the top thread and the bobbin, ensuring the bobbin case is properly inserted. Check that the needle is fully inserted and in the correct position.	Refer to your machine manual for threading diagrams.
Puckered Fabric	Tension too tight or incorrect needle size	Loosen the upper tension gradually and test on scrap fabric.(lowwer number loosen tension – Higher number tighten the tension Use the correct needle size and type for the fabric. Consider using a stabilizer for delicate fabrics like silk.	A walking foot or zigzag stitch can also help reduce puckering.
Stitches Not Forming Properly	Incorrect threading or bobbin winding	Re-thread the machine, ensuring the thread follows the correct path. Wind the bobbin evenly and insert it correctly. Check for debris in the bobbin case and clean it.	Balanced thread tension is critical for proper stitches.
Machine Running Slowly	Dirt, lint, or insufficient oiling	Turn off the machine and clean all accessible parts with a lint brush. Apply a drop of sewing machine oil to moving parts as directed by the manual. Check the power cord and pedal for damage.	Over-oiling can attract lint, so use sparingly.
Needle Hitting the Throat Plate	Bent needle or incorrect insertion	Replace the needle with a straight one, ensuring it is inserted fully and facing the correct direction. Check for misalignment in the needle plate or presser foot.	Align fabric properly to avoid needle deflection.
Presser Foot Won't Lift	Broken lever or stuck mechanism	Inspect the presser foot lever for damage or debris. Clean the area around the lever mechanism. If broken, seek professional repair.	Lubricating the mechanism may help if it feels stiff.

Visit Us at www.LetsGetSewin.com

At Let's Get Sewin', we're passionate about all things sewing and embroidery!
Here's what we offer:

- **Sewing Classes**: Learn the art of sewing from scratch or enhance your skills with expert guidance in a friendly, supportive environment.
- **Tailoring Services**: Perfectly tailored garments to fit your unique style and needs.
- **Embroidered Products**: Discover our exclusive line of beautifully embroidered items, from tea towels to apparel and beyond.
- **Custom Embroidery**: Bring your creative vision to life with personalized embroidery projects designed just for you.

Let's make sewing fun, creative, and stress-free!

Visit us now at www.LetsGetSewin.com!

Your feedback is incredibly important to us—it helps us grow, improve, and continue offering the best services possible. If you've enjoyed your experience we'd be thrilled if you could take a moment to leave us an honest review on Google.

Here's a quick link to share your thoughts or just scan the QR code below:

<LEAVE A REVIEW HERE>



It only takes a minute, and your words can make a huge difference. Plus, we love hearing about how our work has brought a little extra joy to your life!

Thank you again for your support and for being a part of the Let's Get Sewin' community. If there's anything more we can do for you, don't hesitate to reach out.

Happy Sewin'!

Warm regards,

Let's Get Sewin'

© 2025 Let's Get Sewin'. All rights reserved.

This document is for personal or educational use only. Unauthorized reproduction, distribution, or commercial use is prohibited without prior written permission.