

To verify the capacity and amount of equipment follow the sequence below:

- On the 7 Segment display use PSW 2 and PSW 3 to maneuver through the menu.
- To start the checking mode: Press PSW2 for 3 seconds
- To move the checking item forward: Press PSW2
- To move the checking item backward: Press PSW3
- To cancel the checking mode: Press PSW2 for 3 seconds
- Navigate to line 38/CP (Total capacity of connected ID units): *This will show the total ID unit capacity*
- Navigate to line 39/AA (Connected ID unit number) : *This will show number of ID units*

For example: there are 3 -1/2 ton ID units and 2-1 ton ID units in a system.

Line 38/CP should say 42

Line 39/AA should say 5

