

# Instructions for Obtaining Connected Indoor Connected Capacity


1. Press PSW1 for more than 3sec to enter the **Checking Mode**
2. will be displayed on the 7 segment display this section is called **(A)**

## Connection Information


3. Press PSW4 to navigate down to Items 3 and 4 on table below (see instructions below in red).

Item	7-Segment Display		Details
	SEG2	SEG1	
1	o	CP	Total Capacity of O.U. Combination Refer to "Outdoor Unit Capacity Table".
2	o	AA	Constitution Quantities of O.U. Combination
3	i	CP	Total Capacity of Connected Indoor Units
4	i	AA	Connected Indoor Unit Number
5		CR	Refrigerant Group Number
6		oP	Total Capacity of Operated Indoor Units Refer to "Indoor Unit Capacity Table".
7		Ht	Unit: Hz
8		UU	Unit: Hour (Indication x 10 Hours)

Arrangement of Push Switches

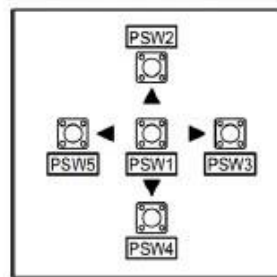

Note: To **Exit** press and hold PSW1 until the 7 segment goes blank

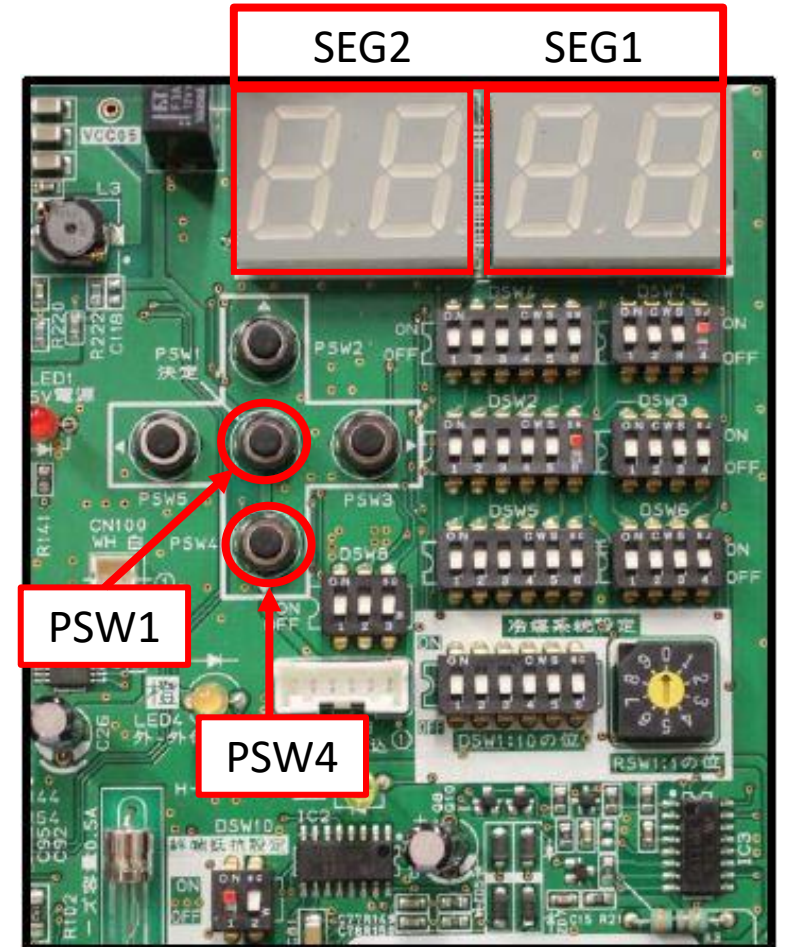

- **Press PSW4 repeatedly to move down the list until you see "i CP" in the segmented screen (Item #3 on the table). Pressing PSW4 again will display the value of the Total Capacity of Connected Indoor Units.**
- **Next you will need to press PSW4 again until you see "i AA" in the segmented screen (Item #4 on the table). Pressing PSW4 again will display the value of the Connected Indoor Unit Number (how many indoor units are connected).**
- **To exit this "Checking Mode" press and hold PSW1 until segmented display clears.**