

Updating SSE Firmware Instructions

1. Connect the USB flash drive to the USB port on the unit control board (UCB).

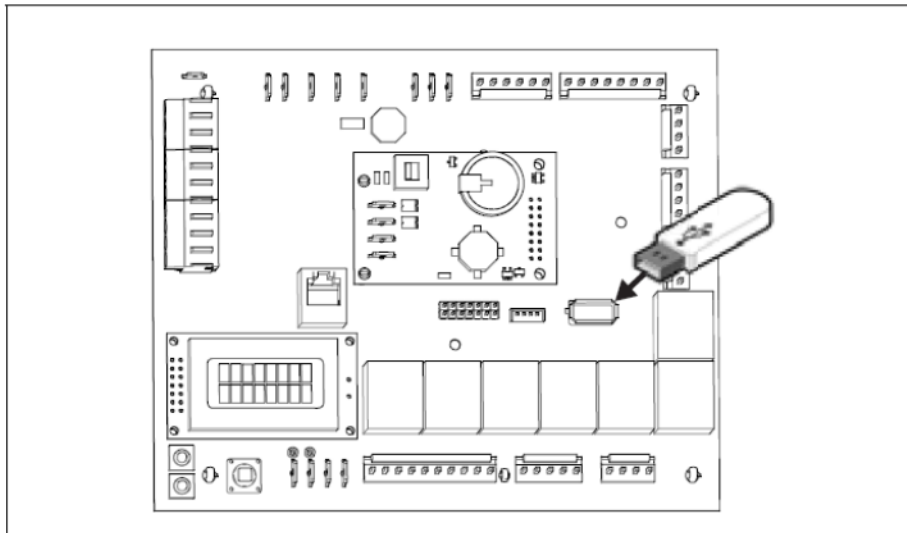


FIGURE 2 - Connecting the USB flash drive

2. When **USB OK** appears on the LCD screen, use the joystick on the UCB to select **Update** and press ENTER.
3. Select **Backup** and press ENTER. When **BKP:OK** appears on the LCD screen, press CANCEL to go back to the main menu.
4. Select **Update** and press ENTER.
5. Select **LoadFirm** and press ENTER. The list of firmware versions appears on the LCD screen, select **3.3.1.186.secusb.pkg** and press ENTER.
6. When **Confirm?** appears on the LCD screen, press ENTER.
The firmware may take 5 to 15 minutes to load, **FWU WAIT** appears on the LCD screen. The UCB reboots during the process and the LCD screen goes blank. When the LCD screen displays the main menu and the startup timer ends, the upload is finished.
7. Repeat steps 1 through 6 if required.
8. Use the joystick on the UCB to select **Update** and press ENTER. Select **Restore** and press ENTER.

9. Select **serialflash/BackupConfig.csv** and press ENTER. When `Confirm?` appears on the LCD screen, press ENTER.

The LCD screen displays `RTR: OK` and reboots. When the startup timer ends, the configuration is restored.

When the firmware update is complete, proceed with parameter checks and configuration.