


## Quick Start Guide

### 1. Turn on your BLADE Handheld.

When turning on your system for the first time, press and hold down the (Power) button for 2 seconds. When the power comes on, the red LED on the back of the device will light up.

### 2. Adjust Volume

Use the (+) and (-) to adjust the volume. Music can be disabled by pressing (Start), navigate with the directional pad to **Sound Settings** and turn off **Frontend Music**.

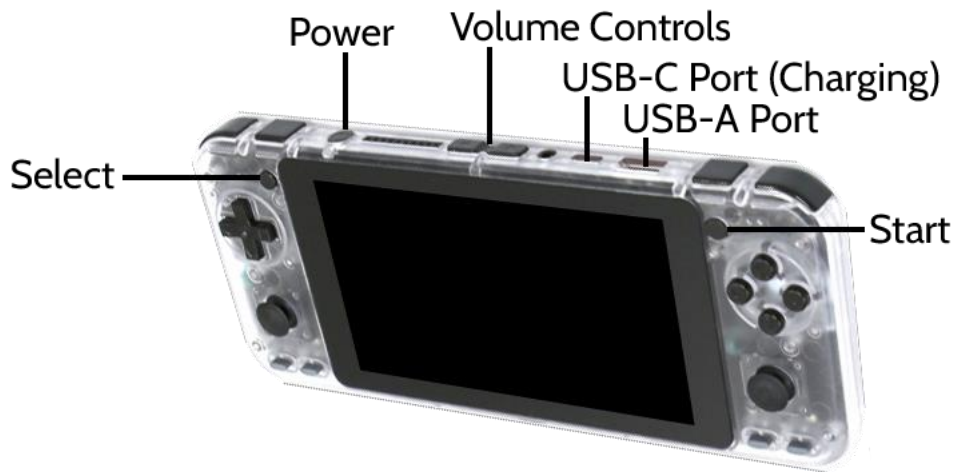

### 3. Menu and User-Interface Navigation

Use the D-Pad or the Left Joystick to navigate between game systems and menu items. Select menu items using the (B) button, and back out of menu items using the (A) button. These controls can be reversed by pressing (Start), navigate to **System Settings > Developer > Switch A/B Buttons in EmulationStation**.

### 4. Charging

To charge your BLADE Handheld, plug in the included USB-C charging cable to the USB-C port on the top of the BLADE Handheld. Plug the USB-A end into any 5W USB Power Adapter. iPhone/Android Power Adapters will work. Nintendo switch charging cables will also work for the BLADE Handheld.

*\*\*Note: The USB-C port is designated only for charging, and will not function in any other capacity.*

### 5. Starting and Exiting Games

Select a game system and game using the (B) button. The game will launch, and you will have to use the controls for each system per their specific configuration. To exit any game, you must press both the (Start) and the (Select) button at the same time. Doing so will take you back to the game system selection screen.