


Set a New Control Point – Radial Angle


NOTE: Verify the move was correct by shooting a point which was previously shot from CPI

TAP
Set New CP

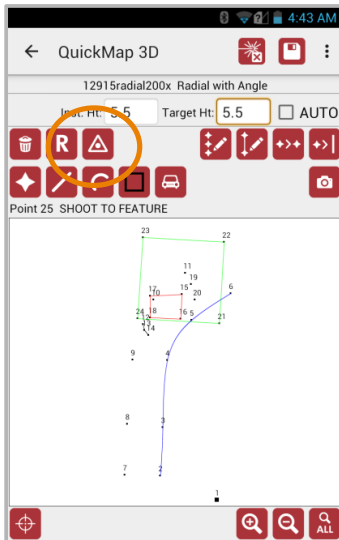


Shoot in the point you want to move to if it doesn't already exist in the survey.

ENTER
Point Number
you are moving to and
tap Next

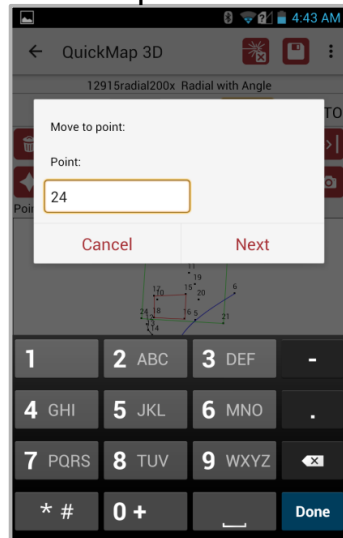


Leave a target for the current CP & move equipment to the new CP.

ZERO
TruAngle
At previous CP and tap
OK

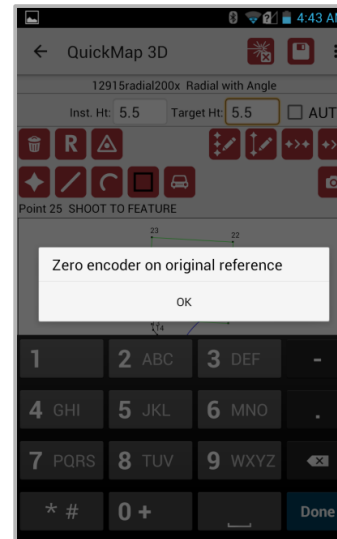

To zero the TruAngle, aim the laser at the original CP, tighten down the brake, and press the Zero button on the TruAngle. The TruAngle display will show 0.00.

NEW CP
Displays
with a larger square than
the rest of the points

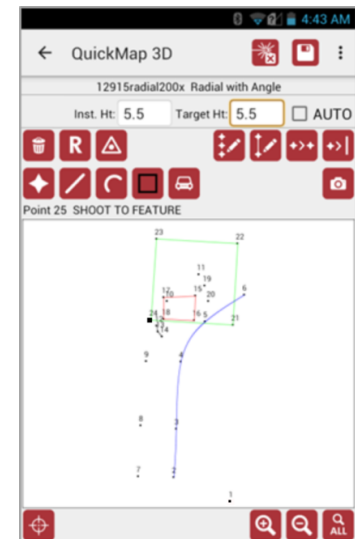

Verify the instrument height in the new position, and edit the Inst. Ht: field, if necessary, before continuing to take measurements.