

<b>ACS</b>
AD= data point - delta ACS
AX= data point - absolute ACS
PX= delete ACS
RX= Select ACS
SX= Save ACS
<b>Cells</b>
AC= Active Cell
AR= Active cell; place Relative
CC= Create Cell
CD= Delete Cell from library
CM= place active Cell Matrix
CR= Rename Cell
PT= active Point
RC= attach Cell library
<b>Color</b>
CT= attach
<b>Color Table Database attribute</b>
AE= define Active Entity
DA= active Displayable Attribute type
DB= attach control file to design file
DS= Fence Filter
FI= database row as active entity
RA= attribute review selection criteria
RS= name Report table
<b>Element attribute</b>
AA= Active Angle
CO= active Color
LC= active Line style
WT= active Line Weight
<b>Files</b>
EL= create element list file
FF= copy Fence contents to dgn File
RD= open Design file
RF= attach Reference File
SF= move fence contents to design file
XD= open design file; keep view conf.

<b>Grid</b>
GR= Grid Reference spacing
GU= horizontal Grid spacing
UR= Unit Distance
<b>Menu</b>
AM= Activate Menu
AT= Activate Tutorial
<b>Patterns</b>
AP= Active Pattern cell
PA= active Pattern Angle
PD= active Pattern spacing
PS= active Pattern Scale
<b>Precision Input</b>
DI= data point - Distance direction
DL= data point - Delta coordinates
DX= data point - Delta view coordinates.
GO= Global Origin
KY= Snap Divisor
TV= dimension tolerance limits
XY= data point - absolute coordinates.
<b>Scale</b>
AS= Active Scale factors
XS= active X Scale
YS= active Y Scale
ZS= active Z Scale
<b>Stream digitizing</b>
SD= active Stream Delta
ST= active Stream Tolerance
<b>Terminator</b>
LT= Active Terminator
TS= active Terminator Scale

<b>Text</b>
DF= open Fonts settings box
DR= Display text file
FT= active Font
LL= active text Line Length
LS= active text node Line Spacing
NN= active text Node Number
TB= Tab spacing for importing text
TH= active Text Height
TI= copy and increment value
TW= active Text Width
TX= active Text Size - Height/Width
<b>User Commands</b>
OX= retrieve user command index
UC= activate User Command
UCC= Compile User Command
UCI= activate User Command Index No.
<b>Views</b>
AZ= set Active depth
DD= set Display Depth relative
DP= set Display depth
DZ= set active Depth relative
DV= Delete saved View
RV= Rotate View relative
SV= Save View
VI= attach named View
WO= Window Origin