

# **AUTO MAINTENANCE**

## **CHECK THE FOLLOWING:**

### **MOTOR OIL:**

Check motor oil twice monthly  
Check coolant twice monthly

**HYBRID'S BATTERY COOLANT:** Check high-voltage battery coolant at the same time as oil change & have coolant changed with proper type coolant by an authorized mechanic.

### **ENGINE MOTOR OIL CHANGE:**

Full synthetic: 7.5K miles to 10K miles  
Blended synthetic: 5K to 7.5K  
Standard: 3K to 5K

**ENGINE AIR FILTER:** Check at every oil change & change the engine air filter every 15K to 30K or sooner if needed.

**CABIN AIR FILTER:** Same as engine air filter.

### **TRANSMISSION FLUID CHANGE:**

Normal driving: 150K  
Severe driving: 30K to 60K

**SHOCKS/STRUTS:** 50K TO 100K

**BRAKES:** 30K to 70K or lower mileage at least every 5yr.

**SPARK PLUGS** should be changed:

Iridium plugs: Every 100K  
Platinum plugs: Every 60K  
Copper plugs: Every 20K to 30K

**TIRE ROTATION:** Every 5K to 7.5K

**TIRE PRESSURE:** Once a month.

**WHEEL ALIGNMENT:** Should be checked every 15K to 30K miles or when:

1. Uneven wear appears on the tires.
2. The car is pulling to one side.
3. When vibrations are felt in the steering wheel or car, tire balance may need to be checked.
4. Steering wheel is off center.

**WIPER BLADES:** Change once a year or as needed.

**WINDSHIELDS WASHER FLUID:** Top off at the same time as the oil change.