

INSTRUCTION FOR SIX DIGITS DISPLAY TIMENN WATER RESISTANT SPORT WATCH



Remark: Different models follow the same instruction.


Alarm on **A/AM:** Morning time **P/PM:** Afternoon time

FUNCTION DESCRIPTION


1. Standard display: Hour, Minute, Second, Month, Date, Week.
2. EL Back Light
3. Stopwatch stage timekeeping function
4. Alarm and hourly chime
5. Time accuracy: +/-60S/month (T=25°C)

MODE SWITCH


(Remark: The screen is not flashing and "Second" is normal running, indicating access to the time display mode.)

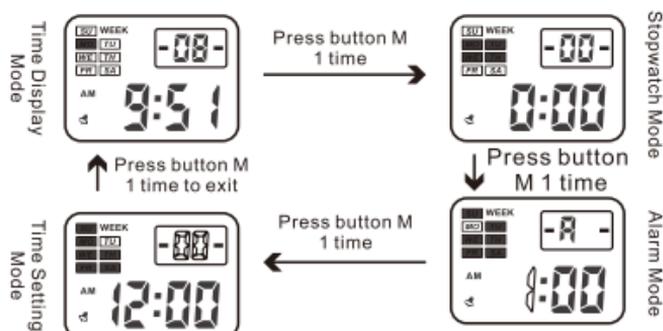


TIME, DATE, WEEK SETTING

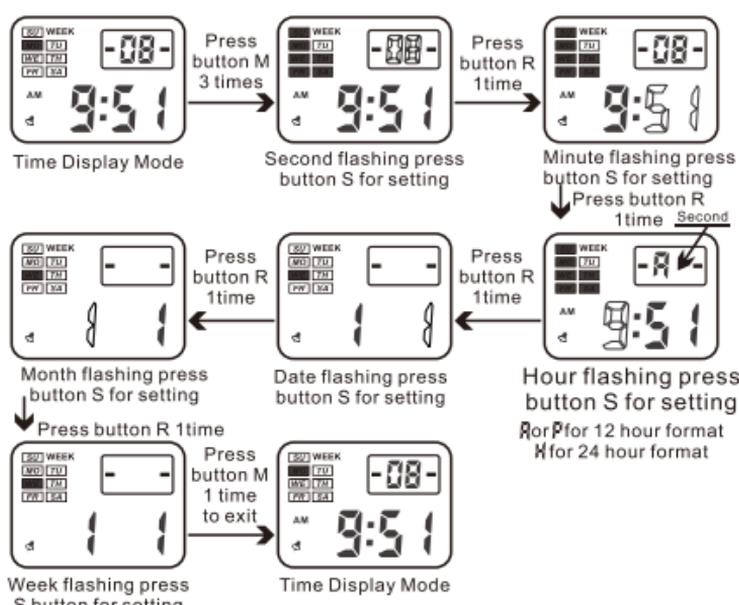


STOPWATCH MODE

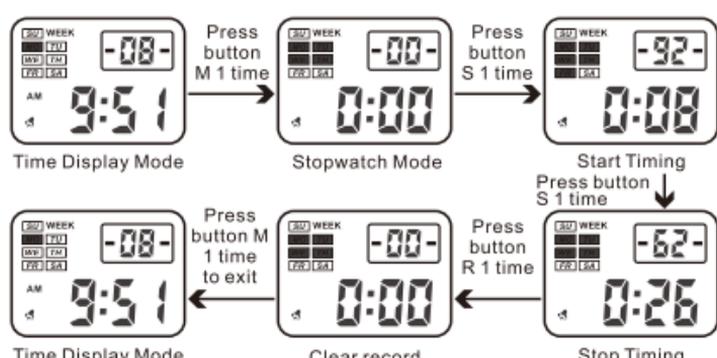


ALARM MODE

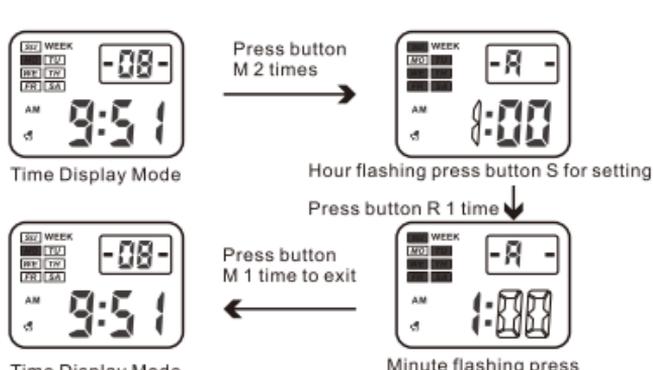


Alarm ON/OFF

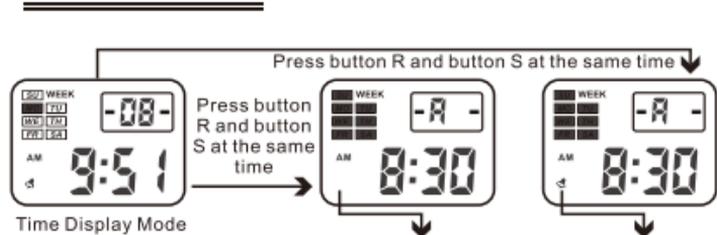


HOURLY CHIME ON/OFF

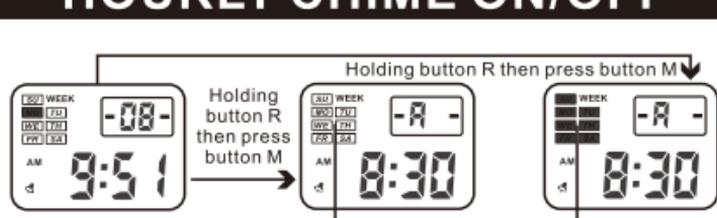

ALARM TIME AND DATE MODE

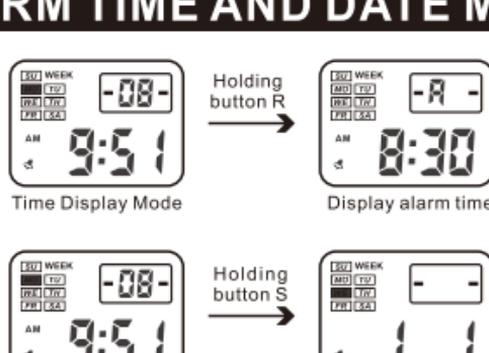

INSTRUCTION FOR ANALOG-DIGITAL WATCH AND QUARTZ WATCH

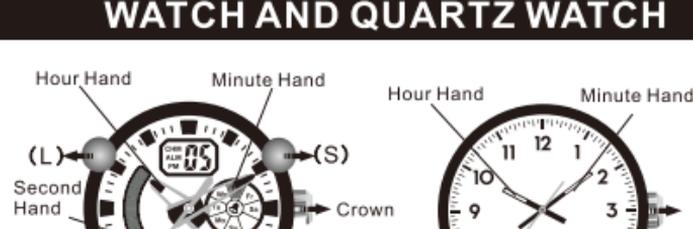

Remark: Different models follow the same instruction.

Operating instructions:

1. Gently pull out the crown, push the crown back after finishing the adjustment.
2. Other function operations can refer to the instruction of six digits display watch.

INSTRUCTION FOR SEVEN COLORS BACKLIGHT SPORT WATCH



Remark: Different models follow the same instruction.

Operating instructions:

1. Hold the function L to change the color of backlight.
2. Other function operations can refer to the instruction of six digits display watch.

MAINTENANCE INSTRUCTION AND NOTICE

1. Avoid wearing it in broiling, freezing or vibrative environment.
2. Avoid wearing it in an environment with intense electric fields, static electricity, high-frequency signals, etc.
3. Keep it away from gasoline, detergent, spraying agent, adhesives, and paint.
4. Clean the surface with soft cloth and clean water. Do not clean the surface with chemicals.
5. The watch is made up of precision electronic parts, only professionals are permitted to open the rear cover.
6. Do not press any buttons during the water.