



Care and Maintenance for Apollo Retractable Screen Doors

For years of worry-free operation of your retractable screen system(s), please follow the recommended maintenance tips below.

1. Keep tracks free of dirt and debris by performing a monthly cleaning (or as needed). Use a clean cloth and mild (non-abrasive) detergent to wipe down the entire tracks, both top and bottom.
2. After cleaning the tracks, apply a thin, even coat of **100% pure silicone spray** to both the top and bottom tracks. Wipe off any overspray. (Ace Hardware has a great option.) **Food-grade** silicone spray also works well.

WARNING: Do NOT use WD-40! Your WARRANTY is VOID if you use WD-40!

3. The main housing unit can be wiped down with a clean cloth and mild, non-abrasive detergent.
4. To protect screen material, always keep the screen rolled up into the housing when not needed for ventilation.
5. You may clean the screen by wiping it down with a dry towel or by vacuuming with an upholstery brush. Carefully vacuum the outside, then the inside, taking care not to snag the screen.
6. Keep pets from clawing or scratching at the screen mesh.
7. Avoid pressing on the screen to open the unit, as this can lead to damage over time and is discouraged.

RETRACTABLE SCREEN SYSTEMS ARE NOT DESIGNED OR INTENDED TO PROVIDE SECURITY FOR OR RETAIN PERSONS, ANIMALS, OR OBJECTS EITHER IN OR OUT OF YOUR HOME.



6000 W Executive Drive, Suite G

Mequon, WI 53092

262-665-6711