

Pacific Husky DX2000
Rechargeable and Waterproof
Remote Dog Training Collar
Operation Guide

Please Read this Manual Before Use

⚠ WARNING: Choking hazard. Keep away from children. This device is not intended to be used on human. Adjust levels in ascending order. In case of dogs discomfort, stop using immediately. Consult with your dog's vet and trainer prior to use.

Contents

- Features
- How does the Training Collar work
- Precautions
- Components
- Key Definition
- Operation Guide
 - Step 1 Preparing the Remote Control
 - Step 2 Preparing the Receiving Collar
 - Step 3 Pairing the Remote Control and the Receiver
 - Step 4 Testing the Training Collar
 - Step 5 Fitting the Receiving Collar
- Frequently Asked Questions
- General Tips for Training Your Dog
- Common Weights of Different Dog Breeds
- Indicator & Display
- Terms and Disclaimer
- Few Training Tips

Pacific Husky Training collar 1

Features

- Rechargeable and Waterproof Receiving Collar with Reflective Stitching
- Rechargeable and Waterproof Receiving Collar with Reflective Stitching
- 2000 feet/610 meters control range between Remote and the Receiving Collar
- Beep Mode activates a correcting tone on the Receiving Collar
- Adjustable vibration intensity levels from 1-8 level
- Adjustable static shock intensity levels from 1-8 level
- Power saving modes:
 - The Receiver will go into Standby Mode if it's idle for more than 5 mins. Any movements will activate the Receiver.
 - The Remote will go into Standby Mode (icon) will be turn off within 30s, flight will be off within 1min.
- Press button to re-activate.
- The Remote can be used to control up to 4 Receiving Collars.
- 2 pairs of metal contacts (1 short and 1 long) are included, to suit the length of your dog's fur, as well as matching protective rubbers.
- The Remote has key lock function.

How does the Rechargeable and Waterproof Dog Training Collar Work

The Rechargeable and Waterproof Training Collar has been proven to be a safe, comfortable, and effective training system for all dogs weighing over 15lbs/7kg, when used properly. This system allows you to communicate with your dog within a range up to 2000 feet. By using the Training Collar, you could correct much of your dog's undesired behaviour but also teach basic and advanced commands.

2

Important: the Training Collar has an effective range up to 2000 feet. Hold the Remote horizontally away from your body to achieve the optimum range. Terrain features, weather, vegetation, transmission from other radio devices and other environmental factors may affect the range of the Remote.

Precautions

DO NOT use this product on aggressive dogs or vicious animals.

Risk of skin damage


It's important to fit the collar properly. A collar that is fitted too tightly or worn for too long may harm your dog's skin. This condition, which ranges from redness to pressure ulcers, is commonly known as bed sores.

CAUTION

- Do not let your dog wear the collar for more than 12 hours per 24-hour period.
- If possible, gently reposition the collar on your dog's neck every 1 or 2 hours.
- Never attach a lead to the Receiver Collar, as this would cause excessive pressure on the contact points.
- When using a separate collar to connect a leash, make sure that it does not put excessive pressure on the electronic collar.
- Examine your dog's neck daily for signs of chafing or soreness.
- If a rash or sore is found, stop using the collar till the injured skin has been healed completely.
- If the condition persists for more than 48 hours, consult your veterinarian.
- If possible, use the Beep Mode or Vibration Mode rather than Static shock function.
- Remove the Charging Cable, and put back the rubber cover in place.
- Use fully charge both the Receiver and the Remote Control before first use.
- To extend the battery life of this product, charge it once a month if you do not intend to use it for a long period of time.

3

Components

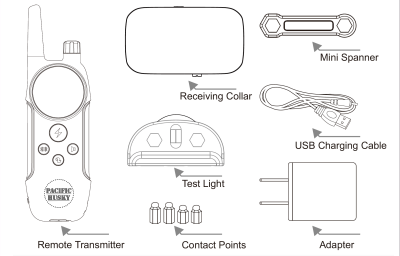


How to change the contact point to the Receiver Collar

Note: Do not tighten the bolts on screws aggressively.



4


Key Definition

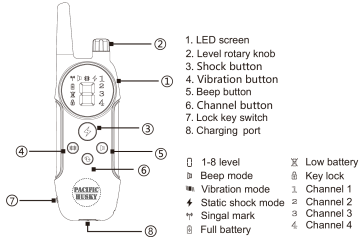

- LED Screen:
 - Beep mode: When this symbol is displayed, press the button to activate a Beep tone on the Receiver.
 - Vibration Mode: When this symbol is displayed, press the button to activate Vibration. Rotate the knob to adjust the intensity of the vibration from 1 to 8.
 - Static Shock Mode: When this symbol is displayed, press the button to activate Static Shock. Rotate the knob to adjust the intensity of the shock from 1 to 8.
 - Signal mark means that the transmitter is launching signal.
 - Full battery: When this symbol is displayed, it means the battery is full.

5

- Low battery: when this symbol is displayed, the remote control needs to be recharged.
- Key lock: when this symbol is displayed, it means that the remote is locked. Turn off Key Lock to unlock.
- Channel 1/2/3/4: select 1/2/3/4 channel to pair the Receiving Collar 1/2/3/4
- Level rotary knob: rotate the knob to adjust the intensity of the Vibration or Shock from the lowest level 1 to the highest level 8.
- Shock/Vibration/Beep button: Press this button to launch the correct signal.
- Channel button: Press this button to change between the 1-4 Receiving Collars (if applicable).
- Key Lock switch: Push up/down the switch to lock/unlock the keys function.
- Charging port: Plug the USB charging cable into the port to charge the Receiver.
- Lithium battery: 3.7V 500mAh for the Remote Transmitter, 3.7V 250mAh for the Receiver
- Operating Frequency: RF433 MHZ
- Contact points: 2 pairs of metal contacts to be chosen to suit the length of your dog's fur.
- Mini Spanner: a tool to screw/uncrew contact points on the electrodes.

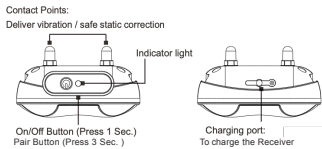

6

Operation Guide

Step 1 Preparing the Remote Control:

- Charging the Remote**
- Plug the USB Charging Cable into the Charging port.
 - Plug the Adapter into a standard outlet.
 - The number on LCD screen will be fully circularly when charging.
 - The LED screen will show once its fully charged within 2.5 hours. Remove the USB Charging Cable.
- Low battery indicator:** The LED screen will show and flash 30seconds, then Remote will be turned off automatically.

How to use the Remote Control

- Push down the key lock switch, the LED screen will light up.
- Press Shock/Vibration/Beep button, the LED screen will display (), which means the corresponding mode is activated.
- Rotate the knob to set the desired intensity.
- Select different channels for 1 - 4 Receiving Collars.

Power Saving Mode: the Remote Control will go into Standby Mode if it is idle for 1 min. The LED screen on the Remote Control will not display anything in this case. Light turns off with 30s, lights will turn off within 1min, press any button to re-activate it.

Lock Key function: Push up the lock switch, the will flash for 6 seconds, then it goes into key lock mode, and it won't be activated anymore, the will flash for 6 seconds again if any button be pressed. Push down the lock switch, the Remote will unlock.

Step 2 Preparing the Receiving Collar:

- Charging the Receiver**
- Remove the rubber cover and plug the USB Charging Cable into the charging port.
 - Plug the Adapter into a standard outlet.

7

- The red LED will keep lighting when the Receiver is charging.
- The green LED will be lighting once it's fully charged with 1.5 hours.
- Remove the Charging Cable, and put back the rubber cover in place.

Low battery indicator: The red LED will flash for 30seconds, then the Receiver will turn off automatically.

How to use the Receiving Collar:

Press the On/Off button to turn the Receiver on, the green indicator light will blink.

Power Saving Mode: The Receiver will go into Standby Mode if it is idle for more than 5 mins. Any movements will activate the Receiver.

If the Receiver does not activate when you press any button on the Remote, and the Green LED on Receiver is not on, then gently shake the Receiver, the Receiver will be activated again and the Green LED light will illuminate.

Step 3 Pairing the Remote Control and the Receiver:

- Push down the lock switch to make sure the Remote is unlocked and in work status.
- Press the button to choose Channel 1 or 2 or 3 or 4.
- Press the On/Off button to turn on the Receiver, the green indicator light will blink.
- Press and hold the On/Off button until the red and green indicator light blink alternately, then press Beep/Vibration/Shock button to pair, when the green indicator light blinks, they are Paired successfully.
- Press Beep/Vibration/Shock to launch signal.
- Repeat steps 3-5 to pair additional receivers on different channels. Please wait at least ten seconds to pair other receivers.


8

Note: Most of our Training Collars have already been paired before leaving the factory. If so, press any button on the Remote control to activate, then press power button for 1 sec on the Receiver to turn it on, now you can test the functions. Refer to step 4. (Page 9)

Step 4 Testing the Training Collar:


Testing the Static Shock
 The static impulse generated by the Receiver cannot be seen with naked eyes. Test whether the Static Shock Function works by following the procedure below:


- Remove the Test Light from the package and place it on the contact points on the Receiver.
- Press the button on Remote Control to launch Static Shock signal, if the Test Light flashes, the Static Shock Function is working correctly.
- The intensity of the Static Shock can be adjusted by rotating the rotary knob from level 1-8.

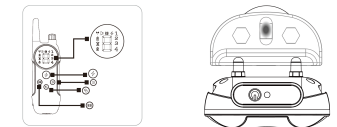


9


Testing the Vibration Function

- Press the  button on Remote Transmitter to launch a vibration signal, if the Receiver vibrates, the Vibration function works correctly.
- The intensity of the vibration can be adjusted by the rotary knob from level 1-8.

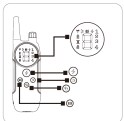

Testing the Beep Function

- Press the  button on Remote Control to launch beep signal, if the Receiver beeps, the Beep Function works correctly.

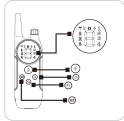

10

Step 5 Fitting the Receiving Collar on your dog:

- Center the Contact Points under your dog's neck(A).



- The Receiving Collar should be positioned snugly around your dog's neck. **Important:** Make sure that you can fit one finger between the strap and your dog's neck(B).



Note: Choose the correct Contact Points to suit the length of your dog's fur. If your dog has long hair or a thick coat, use the longer Contact Points.

Note: Do not tighten the bolts on screws aggressively.

11

Frequently Asked Questions

Q1: How old does my dog have to be before I start using the Training Collar?

A: We recommend for dogs above 20 lb (10 kg) and not less than 15 lb (7 kg) older than 6 months. Your pet should be readyable to recognize basic commands such as "Sit!" and "Stay!"

The Receiving collar is adjustable in length from 9.5 to 26 inches. If your dog's neck is smaller than 26 inches, please cut the redundant part. This product is not suitable for dogs with necks larger than 26 inches.

Q2: Once my dogs learns to respond and eliminate the bad behaviour, does it have to continue wearing the Receiving Collar?

A: Probably not, although you may need to reinforce the training with the Receiving Collar from time to time.

Q3: Is the Receiver waterproof?

A: Yes, up to 1 meter depth for up to 30 minutes. Must seal the charging port tightly, and keep it dry after it gets wet. It is also dust-proof.

Q4: What is the lifespan of the lithium batteries?

A: The Lithium battery in the Remote Control and the Receiver can be charged for more than 400 times.

Q5: How long should the training session for my dog be?

A: The training sessions should be kept short for maximum effectiveness. It's advised not to train your dog for more than 10-15 mins at a time.

12

Q6: I have fitted the Rechargeable and Waterproof Training Collar correctly, but my dog is not responding.

- Ensure you are using the correct Channel. You need to charge both the Remote Control and the Receiver for about 2.5 hours before they can be used for the first time.
- Check the Remote Transmitter levels and adjust the intensity level of the vibration or static to a higher level than level 1.
- Restart the Receiver by pressing the On/Off button.
- Test the 3 functions (Beep, Vibration and Static Shock) before using the Receiver for the first time. Please refer to "Step 4" (page 9) for instructions on how to do this.
- The Receiver will go into Standby Mode if it is idle for more than 5 minutes. Any movements will re-activate it.
- Make sure that the Contact Points are touching your dog's skin.
- Trim your dog's fur where the Contact Points touch the neck. Ensure that you are using the correct set of Contact Points suitable for the length of your dog's fur.
- If none of the above works, Pair the Remote Transmitter and the Receiving Collar again. See "Step 3" (Page 9) for instructions on how to do this.

Q7: How long is the collar on this device?

A: It is 24in/63cm long, suitable for dogs with (9.5-26)in(24.2-66)cm necks. This product is not suitable for dogs with necks thicker than 26 inches.

Q8: The Receiver is broken. It has not worked since I dropped it.

- The Receiver is not designed to be drop-proof. Please do not drop the Receiver, this will damage the interior circuits

13

Q9: The Remote Control does not work

- You must charge the Remote Control before using it for the first time. Charging time is typically 2.5 hours.
- Make sure that the Remote is unlocked and set on the correct Channel.
- Remote Transmitter will automatically go to Standby Mode if it is idle for 1 min. No LED light will be illuminated at this time. Press any button to re-activate the Remote Control.

General Tips for Training Your Dog

- Eliminate one behavioural problem or teach one command at a time to avoid confusion for your dog.
- Majority of dogs can be trained with Beep or Vibration mode alone, and shock mode is not necessary most of the times but only optional.
- Do not over-correct your dog. Keep your training sessions as short as possible. Check your dogs skin regularly.
- This device is meant to be used as a communication tool in training sessions in order to grab dog's attention. Make sure intensity levels are not discomforting. Adjust levels in ascending order starting from 01 level when put on your dog's neck.
- If your dog reacts to the training by hiding or acting fearfully, redirect its attention to a simple and appropriate behaviour, such as the "Sit!" command. Reward your dog with treats to help achieve better results.

14

Common Sizes of Different Dog Breeds

Size	Neck (cm)	Chest (cm)	Back Length (cm)	Type
Mini	20-22	25-30	19	Chihuahua, Yorkshire Terrier
Small	20-24	29-36	23	Chihuahua, Yorkshire Terrier, Poodle, Pomeranian
Medium	23-28	35-42	28	Maltese Dog, Shin Tzu
Large	27-31	41-47	31	Miniature Schnauzer, Pekingese
Large	30-34	46-53	35	Schnauzer, English Cocker Spaniel
Large	33-37	52-59	40	Beagle
Huge	43-48	76-84	60	Husky
	47-52	88-97	65	Labrador Retriever
	52-62	92-100	70	Golden Retriever, Old English Sheepdog

Common Weights of Different Dog Breeds

Large Dogs(Body height over 61cm, weight over 88lbs)
 Medium Dogs(Height 40.7-61cm, Weight 24-86lbs)
 Small Dogs(Height 25.5-40.7cm, Weight 8-22lbs)
 Mini Dogs(Height under 25cm, Weight under 8lbs)

15

Indicator & Display

Receiving Collar Indicator				
stands on	Blink	stands on	Blink	blink alternately
Charging	Low Battery	Full Charge	Work	Encoding

16

Terms & Disclaimer

- Do not open the receiver, doing so will void the warranty and will likely compromise the waterproof feature.
- This remote will only pair with same model receivers.
- To avoid accidental injuries, do not test shock mode with hands, use the provided test bulb kit instead.
- Wipe dry before charging.
- We only recommend this device for dogs heavier than 20lb(10kg) and older than 6 months.
- We do not recommend attaching leash to receiver collar and walking the dog since the electrodes on the receiver might hurt dogs skin.
- Do not leave the collar around dog neck for more than 12 hours to avoid irritations on skin.
- Keep away from children.
- Insert the rubber cap on the receiver back in place when finished charging for waterproof feature.
- Avoid dropping this device on hard surfaces.
- This device is a professional dog training tool. It is not intended to be used for any other activities. When in doubt, consult with certified dog trainers or your dog's veterinarian. Learn about state/province laws before use.
- Interference from the environment might cause the product to not work properly such as thunderstorm, large buildings, communication towers, etc.
- We bear no liability for direct or indirect losses caused by use or misuse of this product. All the risks of using this product shall be borne by user.
- By using this product, you agree to the terms mentioned above.
- We reserve the right to change these terms at any time in future.

17

Few Training Tips

- Reward your dog with food and treats to help achieve better results.
- Do not use on dogs younger than 6 months old, pregnant, easily frightened, aggressive, left in heat, old, and dogs with not best of health.
- Command verbally first, then supplement with corrective stimulus if needed. Be consistent with commands by using same words every time. Work on one single behaviour at a time to avoid frustration or confusion for your dog.
- As an example, vibration could be used to be associated with warning, so the dog will be conditioned to respond and recognize vibration along with verbal command as a sign of warning.
- Each dog skin is different, and each breed varies. Dog skins are different from human in terms of sensitivity; therefore, try to find the best feel suitable for individual dogs by adjusting levels from 01 in ascending order to set on a comfortable level. All modes are meant to communicate with dog only.
- Observe your dog's behaviour and respond accordingly. If dog shows signs of growling, aggression, biting, snarling while using the collar, stop using immediately and contact professional trainer for consultation.
- Some dogs are easier to train and some are harder. Having a training collar does not guarantee the desired result on every single dog. It is meant to supplement general training of the dog.

Pacific Husky Training Collar

18

