



# Clay Target Thrower Instructions

**Treat this launcher with the same caution that you would treat a loaded gun.**

**This machine is easily capable of removing appendages and shattering bone**

**ALWAYS** disarm the machine before any loading, adjustment or maintenance.

**ALWAYS** load clays from rear and **ONLY** if the machine is disarmed and safe.

**NEVER** approach the machine from the front or sides. **ALWAYS** from the rear.

**NEVER** allow children or untrained persons to approach or touch the machine.

## Disarming Procedure


1. Push the toggle switch on the rear of the machine upwards to the (DISARM) position and hold only long enough for the trap to fire then release before the trap can rearm.
2. Disconnect the battery.

If the machine is broken or malfunctioning please do not attempt to adjust or "fix" it.  
Send us an email or drop a note in the silver box to let us know



## Using the machine

1. Ensure you are behind the machine
2. Ensure the toggle switch on the rear of the machine is in the center (OFF) position
3. Connect the red cable connector to the positive (+) terminal and the black cable connector to the negative (-) terminal.
4. When disarmed, the throwing arm should be at the 9 o'clock position.
5. Gently pull the throwing arm counter clockwise until the irises close

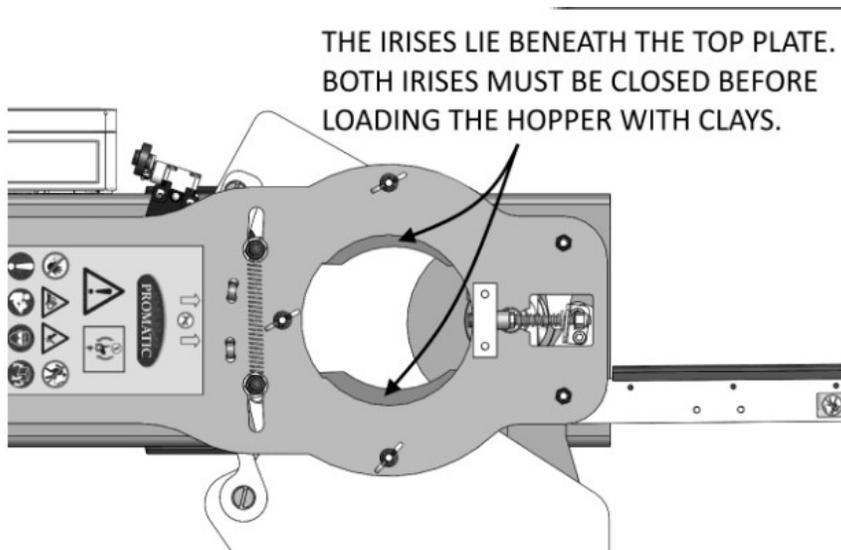

6. **Important!** Place a clay onto the casting plate beneath the hopper and close to the back rail. This is to avoid 'Dry Firing' which can lead to broken clays in the hopper due to excessive recoil.
7. Load the hopper with clays.
8. Push the toggle switch at the rear of the machine down to the (ON) position. The machine will move automatically and arm itself ready to launch a clay.
9. Depress the foot switch to throw a clay.
10. The machine will automatically rearm itself after each clay thrown, until disarmed and turned off.
11. Simply turning off the machine does not make it safe—always disarm after use, before reloading or moving it.
12. When you're done please clean up any broken targets in the vicinity of the machine, disarm the machine, disconnect the battery, and replace the cover