

# ***OWNER OPTIONS USER GUIDE***



# ***OWNER OPTIONS – CONTENTS (11-11-2025)***

Page.

4. OWNER OPTIONS OVERVIEW.

6. OWNER OPTION MENU.

8. IMPORT & EXPORT DATA.



*OWNER OPTIONS CONTENTS*

*OWNER OPTIONS OVERVIEW*





# ***OWNER OPTIONS OVERVIEW***

The ***OWNER OPTIONS*** menu allows the owner to set various parameters on the ***ONIS*** which will provide the users with a consistent secured device across the fleet.

Most options are a “check box” to enable / disable and each option has an adjacent help option with the “ ? ”



***OWNER OPTIONS OVERVIEW***


***OWNER OPTIONS MENU***





START HERE

# OWNER OPTIONS MENU

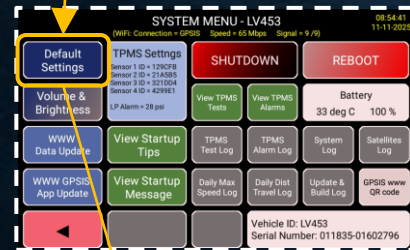

Open Import / Export Menu.



Exit to the settings menu document.

Select on ? description buttons to display explanations.

Set check box's to enable / disable options.



***OWNER OPTIONS MENU***

***IMPORT GEOFENCE SPEED ALERTS***





# ***IMPORT GEOFENCE SPEED ALERTS***

The “Import Geofence Speed Alerts” allows the owner to import data that has been configured on a PC.



Typically, this data will have been configured using the PC version of **OziExplorer** and then saved in the OziExplorer waypoint format.

The owner can then import this waypoint data and the **ONIS** will then perform the calculations to convert the waypoint data into the CSV format required by the **ONIS**. The owner has the choice of either appending the data to the existing data set, or replacing the data entirely.

Each option has a “ ? ” which outlines the requirements of the import data file.



# IMPORT & EXPORT DATA

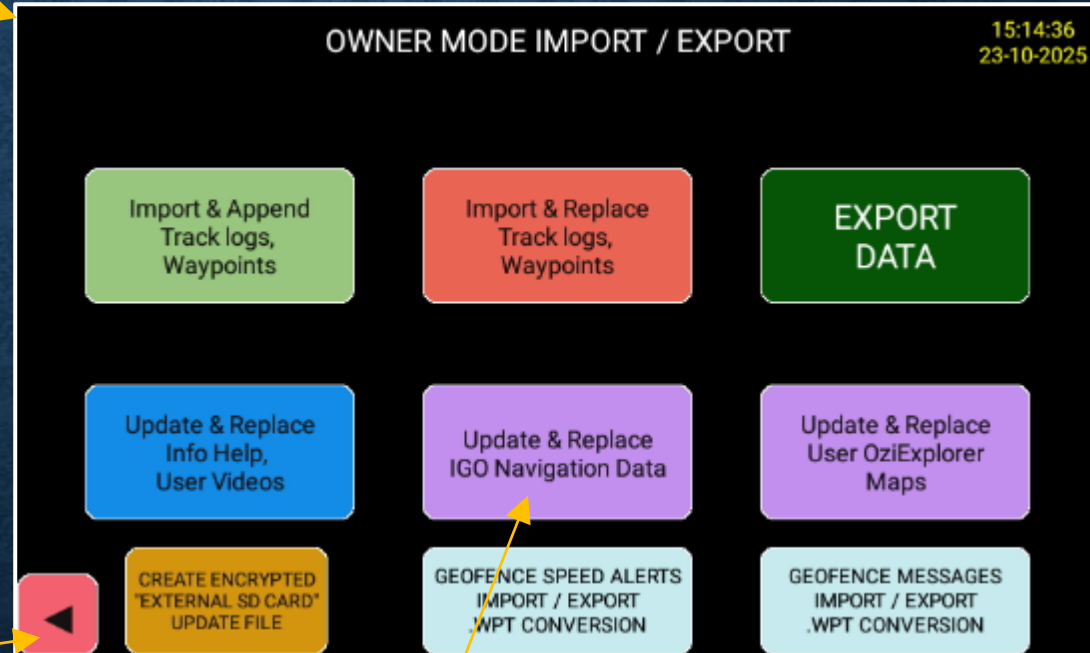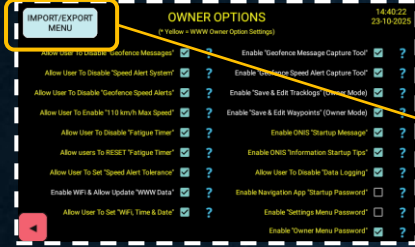

Exit back to  
Owner Options.

Select on ? description buttons  
to display explanations.