

SYSTEM & SETTINGS
USER GUIDE
(Owner Mode)



SYSTEM MENU – CONTENTS (23-02-2026)

Page.

3. SYSTEM MENU OVERVIEW.

4. SYSTEM MENU SCREEN.

6. ADJUST VOLUME / BRIGHTNESS MENU.

8. DEFAULT SETTINGS (inc Owner Options).

21. TPMS SETTINGS.

24. VIEW TPMS TESTS.

26. VIEW TPMS ALARMS.

28. VIEW TPMS TEST LOG.

30. VIEW TPMS ALARM LOG.

32. VIEW DAILY MAXIMUM SPEED LOG.

34. VIEW DAILY DISTANCE TRAVELLED LOG.

Page.

36. VIEW STARTUP TIPS IMAGE GALLERY.

40. VIEW STARTUP MESSAGE.

43. VIEW GPS SATELLITES & LOG.

47. HOW TO VIEW TERMS & CONDITIONS.

50. WWW UPDATE APPS.

53. WWW & EXT SD CARD DATA UPDATE.

57. INSTALLATION REQUIREMENTS.

60. OPERATIONAL REQUIREMENTS & INFO.

66. FAQ, KNOWN ISSUES, FAULTS & BUGS.

71. BUILD INFORMATION.

SYSTEM MENU OVERVIEW

The **SYSTEM MENU** allows the user to perform **Outback Navigation Information System (ONIS)** configuration settings and view **ONIS** system information and log data.


Configuration of the **Tyre Pressure Monitoring System (TPMS)** sensor Bluetooth binding and the alarm setpoints are performed from the **TPMS Configuration** app in the **Main Menu**.

FAQ, known issues, faults & bugs are listed at the end of this document.

NOTE:

Geofence Speed Alerts, Geofence Messages and WWW data updates are N/A in “Personal Mode”

Every **ONIS** device has it's own unique serial number.

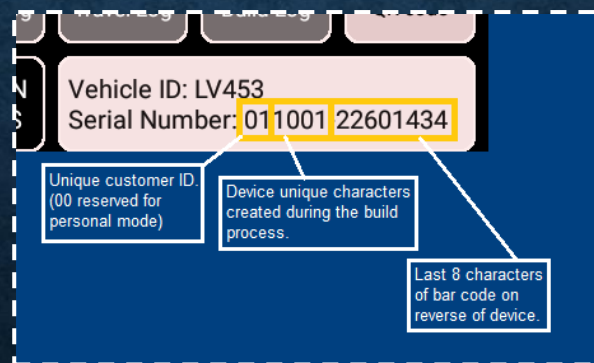



SYSTEM MENU

07:45:03
11-11-2025

OUTBACK NAVIGATION INFORMATION SYSTEM

System & Settings

User Information

User Videos

Restore Default Configuration

RESTART

OziExplorer Navigation

IGO Primo Navigation

Bluetooth Relays

Satellite Information

User Guides & Documentation

SYSTEM MENU

(WiFi Connection = GPSIS Speed = 65 Mbps Signal = 9 / 9)

DEFAULT SETTINGS	TPMS Settings Sensor 1 ID = 129CFB Sensor 2 ID = 21A5B5 Sensor 3 ID = 321DD4 Sensor 4 ID = 4299E1 LP Alarm = 28 psi	SHUTDOWN	REBOOT
Ext SD Card Import Export		View TPMS Tests	View TPMS Alarms
WWW Data Update	View Startup Tips	TPMS Test Log	TPMS Alarm Log
WWW GPSIS App Update	View Startup Message	Daily Max Speed Log	Daily Dist Travel Log
	Volume & Brightness	CPU & CHIPS Thermal Ave 60 deg C	Vehicle ID: LV453 Serial Number: 011835-01602796

Battery 34 deg C 100 %

System Log

Satellites Log

Update & Build Log

GPSIS www QR code

Set the **ONIS** Default Settings.

Configure the **ONIS TPMS**.

Shutdown the **ONIS**.

Reboot the **ONIS**.

Current Time. Select to display Time and Date.

Displays the **ONIS** internal battery remaining capacity & internal battery temperature. (N/A on all units)

Press to view the battery temperature log. Long press to view the battery max temperature log.

Scan the QR code to browse the **GPSIS** web site.

Displays the Vehicle ID & Device S/N.

N/A in "Personal Mode"

Displays the current enabled sensors ID's. Select to configure the monitored sensors.

Update the **ONIS** apps.

Exit to **ONIS Main Menu**.

Adjust the vol / brightness.

Internal device temp

See below for sub menu explanations



SYSTEM MENU

ADJUST VOLUME / BRIGHTNESS



ADJUST VOLUME / BRIGHTNESS MENU

Displays current brightness (min is 5 & max is 255).

Use slider bar to adjust.

Select brightness mode.



Display the help screen.

Select to set volume .

Exit back to the **SYSTEM** menu.

Displays default values.

Mute / Unmute toggle.

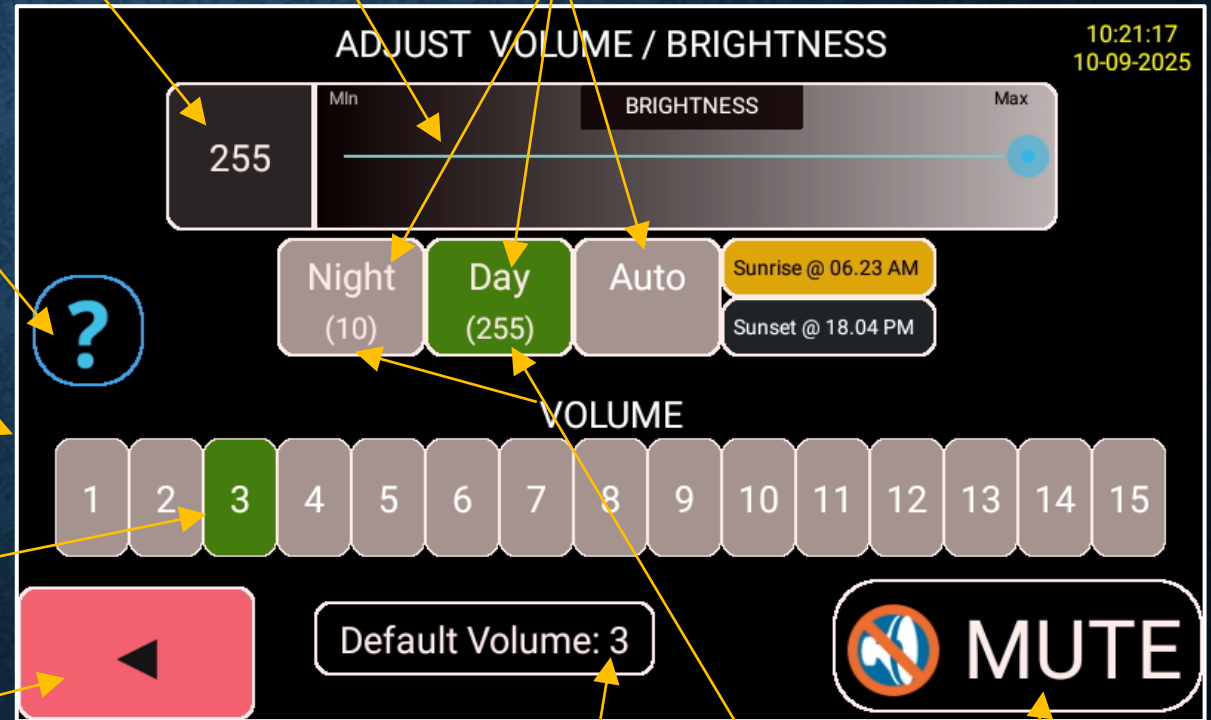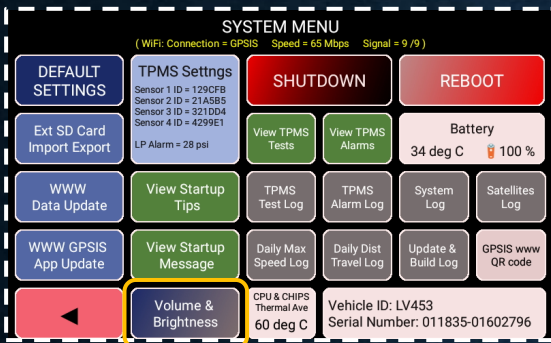



ADJUST VOLUME / BRIGHTNESS

DEFAULT SETTINGS



DEFAULT SETTINGS OVERVIEW

The ***DEFAULT SETTINGS*** menu allows the owner / user to set the default parameters of the apps which are used when the ***ONIS*** starts up.


The owner has the ability to customize various options to allow / prevent the user from viewing some menus or making changes.

The user can add a unique vehicle ID to the ***ONIS*** which will be used in various screens and log files. The ID is limited to 10 characters and can be a combination of numerals and upper case letters.

NOTE:

The “Set Vehicle ID” option is available to all users that have access to the default setting menu allowing the ***ONIS*** to be easily moved between vehicles or replaced. The user can then set the correct Vehicle ID to the installed ***ONIS*** unit.

For future possible auditing requirements by the owner, all changes to the “Vehicle ID” are logged and saved in the ***ONIS*** secure area and viewable by the owner and the user.

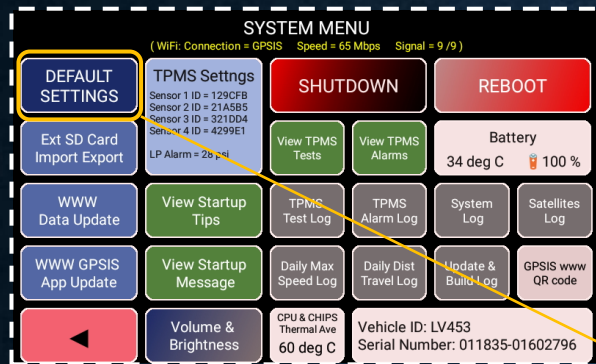

DEFAULT SETTINGS MENU

Set owner Wi-Fi SSID to allow app updates.

Enable / Disable the **Speed Alert** System.

Speed Alert options.

Select on ? description buttons to display explanations.

Set Time Zone.

N/A in Personal Mode

Tick to auto start the navigation app when the **ONIS** is started.

Set the default OziExplorer map options.

Display the "Rolling Ave Speed"

Show/Hide the iGO profile menu when starting iGO from the main menu.

N/A in Personal Mode

Select to set the default volume / brightness.


? To show option explanations.

Exit back to the **SYSTEM** menu.

View the ID change log.

Set the Vehicle ID / Registration.

Open Owner Menu

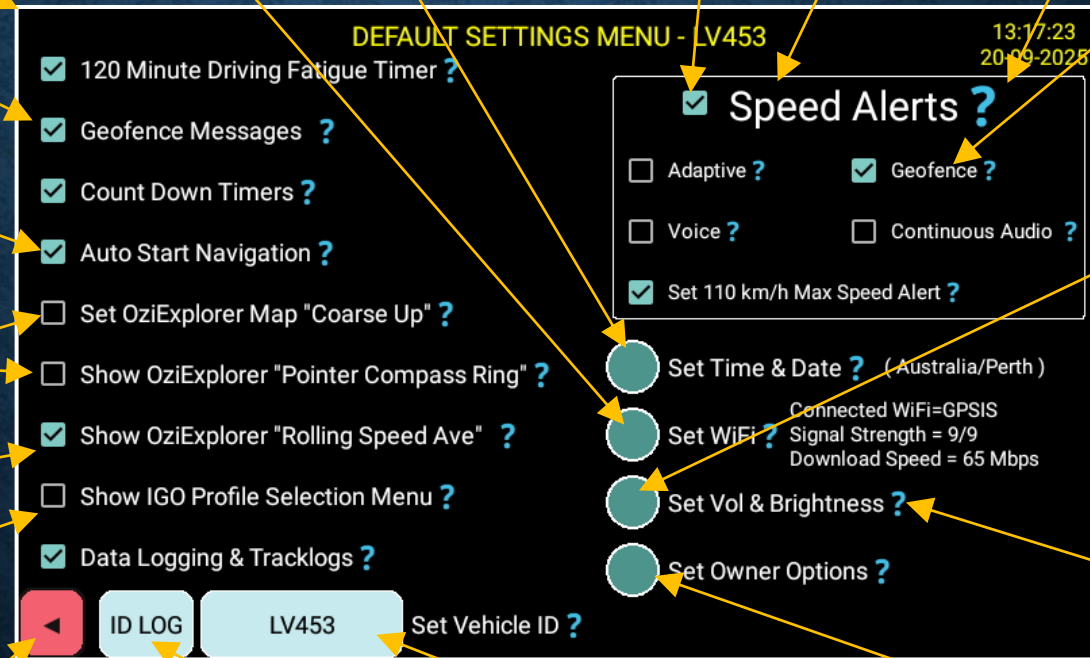

SET OZIEXPLOREDER COURSE UP AS DEFAULT

DEFAULT SETTINGS MENU - LV453 13:17:23 20-09-2025

- ☒ 120 Minute Driving Fatigue Timer ?
- ☒ Geofence Messages ?
- ☒ Count Down Timers ?
- ☒ Auto Start Navigation ?
- ☒ **Set OziExplorer Map "Coarse Up" ?**
- ☐ Show OziExplorer "Pointer Compass Ring" ?
- ☒ Show OziExplorer "Rolling Speed Ave" ?
- ☐ Show IGO Profile Selection Menu ?
- ☒ Data Logging & Tracklogs ?

Speed Alerts ?

- ☐ Adaptive ?
- ☒ Geofence ?
- ☐ Voice ?
- ☐ Continuous Audio ?
- ☒ Set 110 km/h Max Speed Alert ?


Set Time & Date ? (Australia/Perth)

Set WiFi ? Connected WiFi=GPSIS
Signal Strength = 9/9
Download Speed = 65 Mbps

Set Vol & Brightness ?

Set Owner Options ?

ID LOG LV453 Set Vehicle ID ?

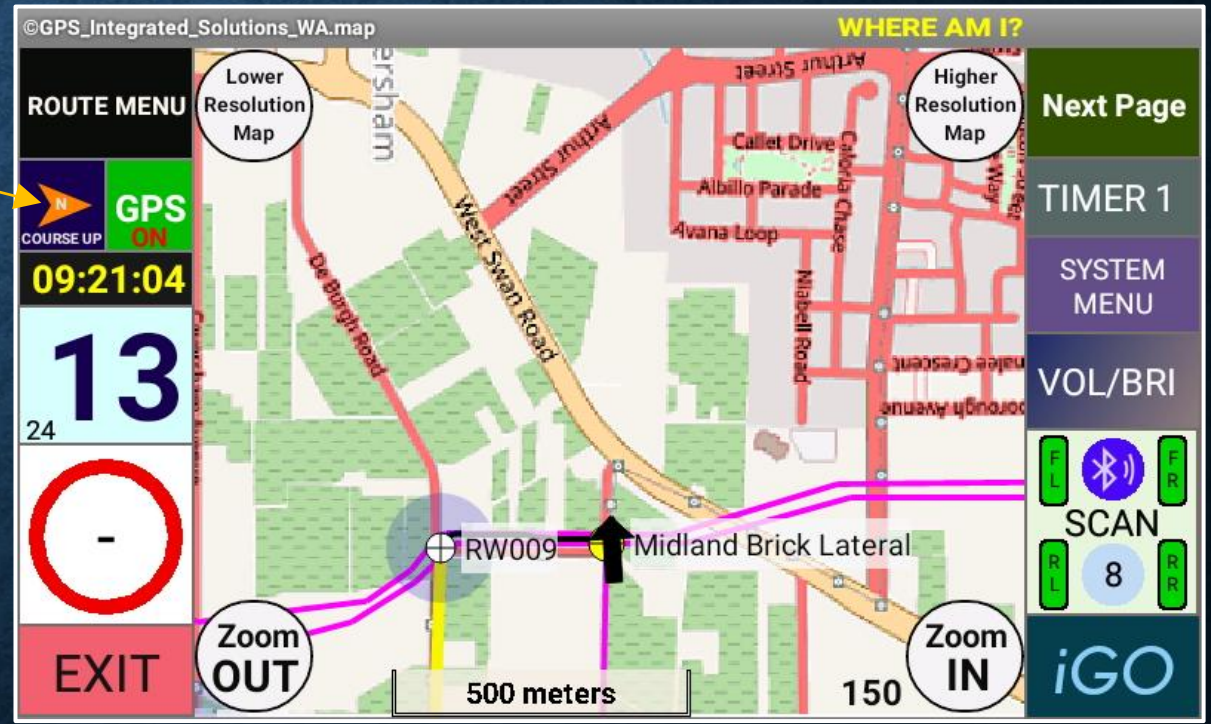

SET OZIEXPLORER NORTH UP AS DEFAULT

DEFAULT SETTINGS MENU - LV453 13:17:23 20-09-2025

- ☒ 120 Minute Driving Fatigue Timer ?
- ☒ Geofence Messages ?
- ☒ Count Down Timers ?
- ☒ Auto Start Navigation ?
- ☐ Set OziExplorer Map "Coarse Up" ?
- ☐ Show OziExplorer "Pointer Compass Ring" ?
- ☒ Show OziExplorer "Rolling Speed Ave" ?
- ☐ Show IGO Profile Selection Menu ?
- ☒ Data Logging & Tracklogs ?

Speed Alerts ?

- ☐ Adaptive ?
- ☒ Geofence ?
- ☐ Voice ?
- ☐ Continuous Audio ?
- ☒ Set 110 km/h Max Speed Alert ?


Set Time & Date ? (Australia/Perth)

Set WiFi ?
Connected WiFi=GPSIS
Signal Strength = 9/9
Download Speed = 65 Mbps

Set Vol & Brightness ?

Set Owner Options ?

ID LOG LV453 Set Vehicle ID ?

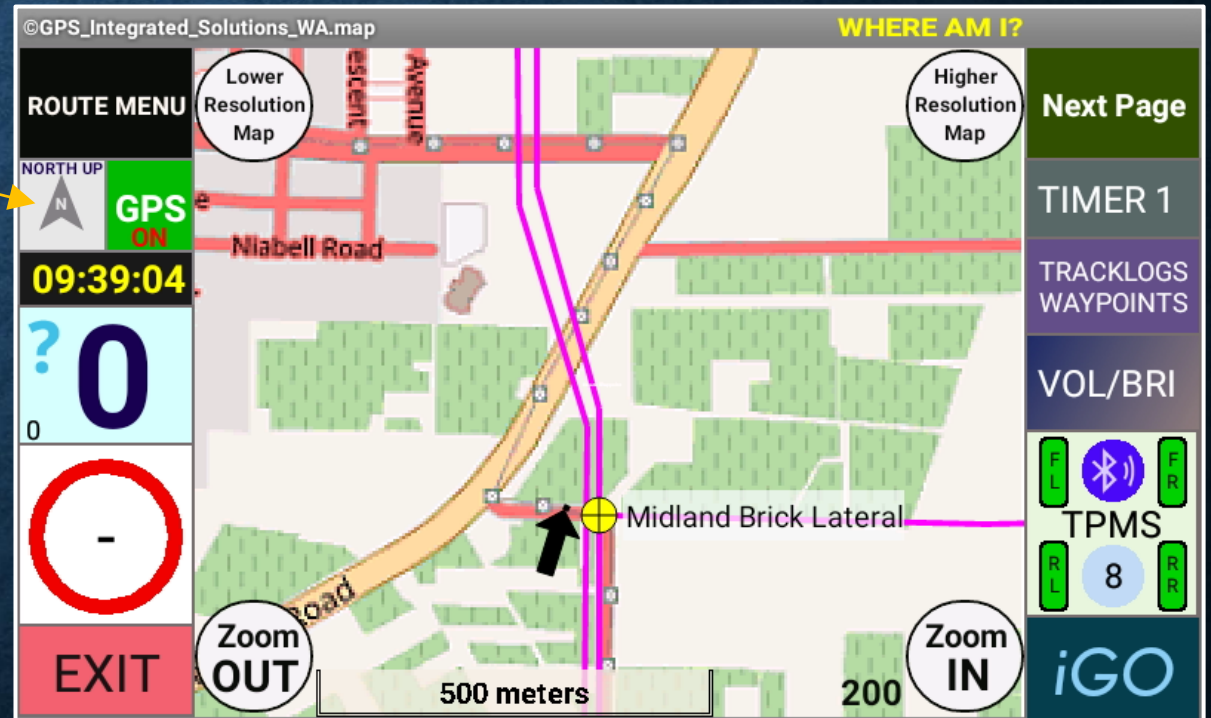

SHOW OZIEXPLORER COMPASS RING

13:17:23
20-09-2025

DEFAULT SETTINGS MENU - LV453

☒ 120 Minute Driving Fatigue Timer ?

☒ Geofence Messages ?

☒ Count Down Timers ?

☒ Auto Start Navigation ?

☐ Set OziExplorer Map "Coarse Up" ?

☒ Show OziExplorer "Pointer Compass Ring" ?

☒ Show OziExplorer "Rolling Speed Ave" ?

☐ Show IGO Profile Selection Menu ?

☒ Data Logging & Tracklogs ?

☒ Speed Alerts ?

☐ Adaptive ?
☐ Voice ?
☒ Set 110 km/h Max Speed Alert ?

☒ Geofence ?
☐ Continuous Audio ?

☐ Set Time & Date ? (Australia/Perth)

Set WiFi ?

Connected WiFi=GPSIS
Signal Strength = 9/9
Download Speed = 65 Mbps

Set Vol & Brightness ?

Set Owner Options ?

◀ ID LOG

LV453

Set Vehicle ID ?

The top of the compass ring (when "course up" is selected, is the vehicle travelling direction. E.g. South in this instance.

ROUTE MENU

N

COURSE UP

GPS

ON

13:18:46

?

0

25

60

+3

EXIT

Lower Resolution Map

Higher Resolution Map

Zoom OUT

Zoom IN

500 meters

Next Page

TIMER 1

TRACKLOGS WAYPOINTS

VOL/BRI

FL

FR

TL

TR


TPMS

10


iGO

SET DEFAULT TIME, DATE & ZONE

Exit without changing.

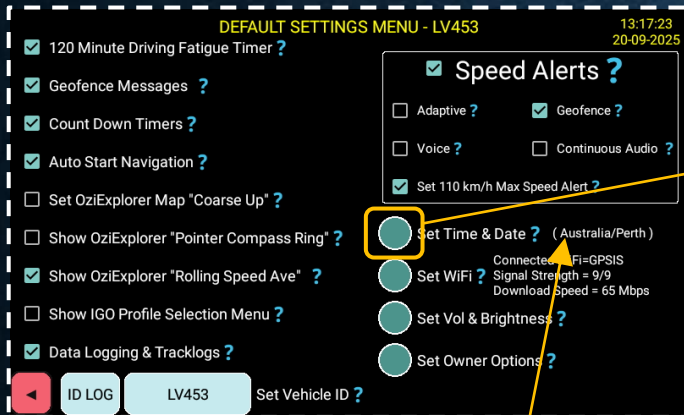


Displays the current Time Zone.

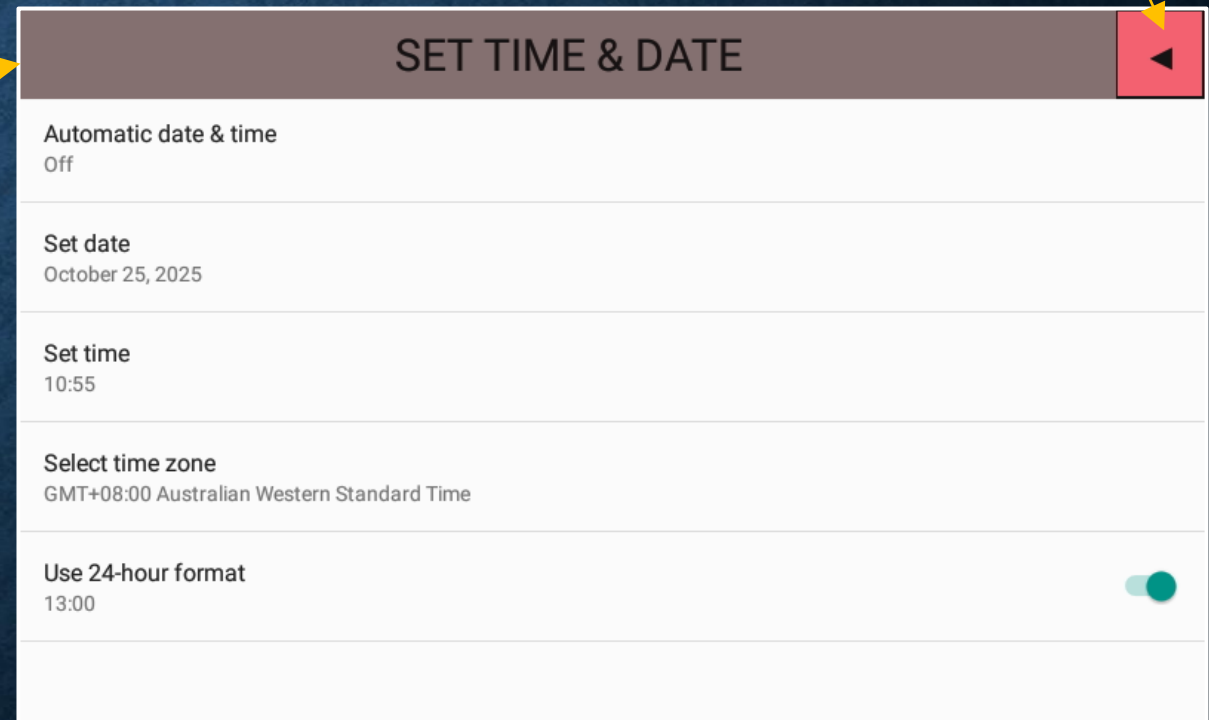


NOTE: Incorrect time zone setting will lead to incorrect log data time stamps.

SET WiFi

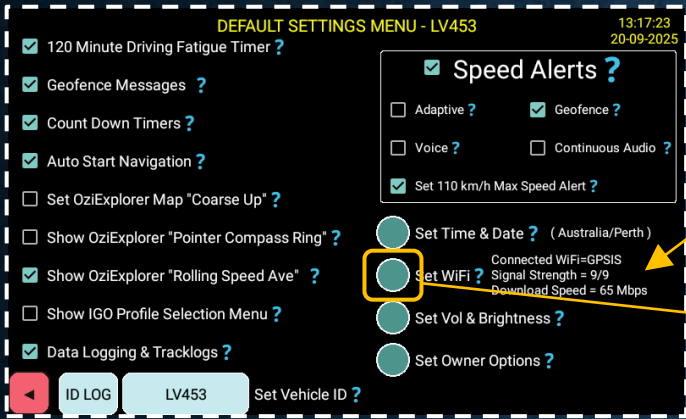

Displays the current connected Wi-Fi SSID.


Exit

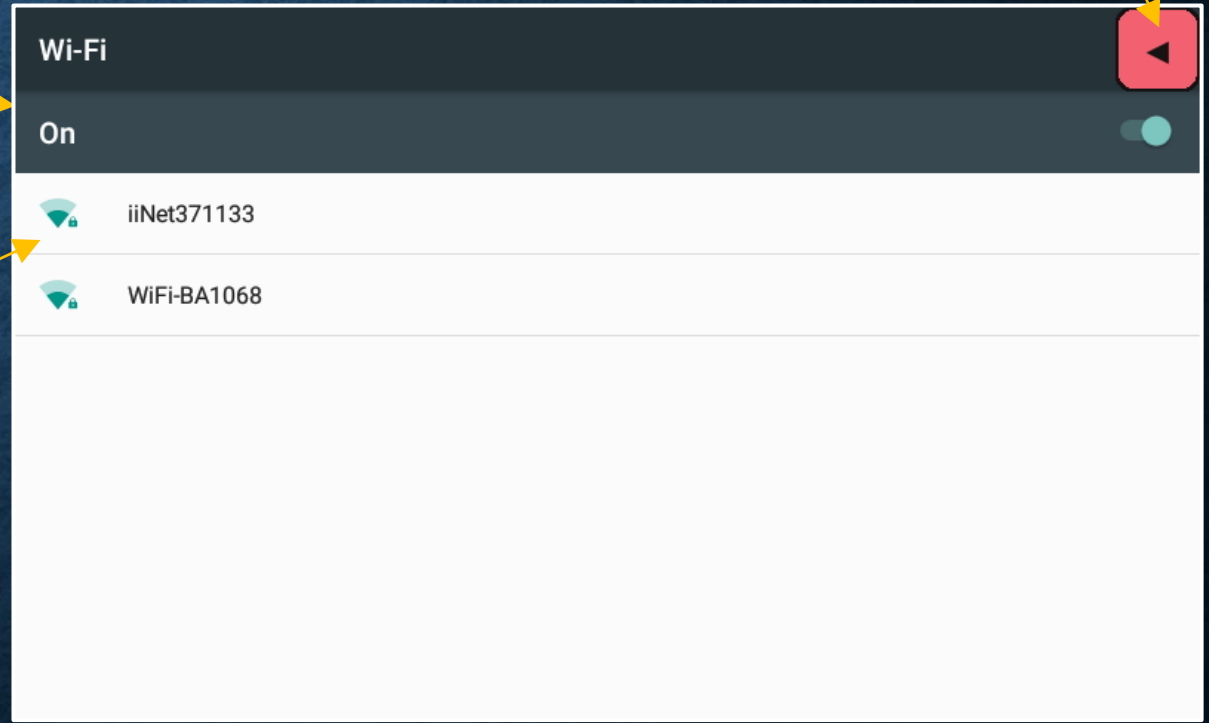

Select the required Wi-Fi and then enter the password to authenticate and save.

NOTE, to ensure that the user can not connect to any public or unauthorised WiFi, the WiFi SSID name must include the text "ONIS"
Eg. If your hot spot is named "Galaxy_1234" then rename it to "Galaxy_1234_ONIS" or "ONIS_Galaxy_1234"

INTERACTIVE HELP INFORMATION

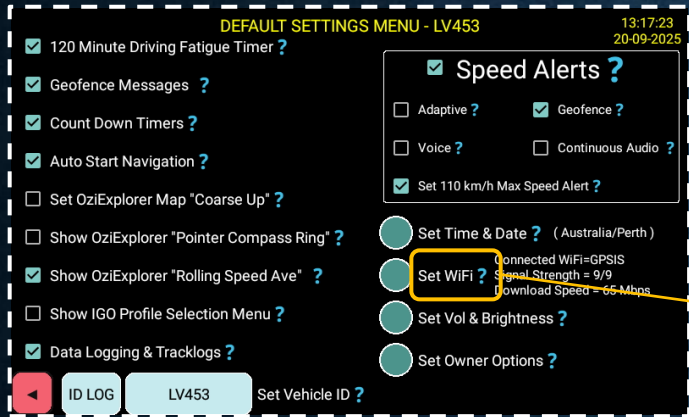

The user can set and connect to a WiFi SSID.


Note:

The WiFi must be set to the Owner SSID.

We strongly recommend only having 1 WiFi connection in the table and this can be achieved by selecting non used WiFi connections and selecting "forget".


Exit

SET DEFAULT VOLUME / BRIGHTNESS

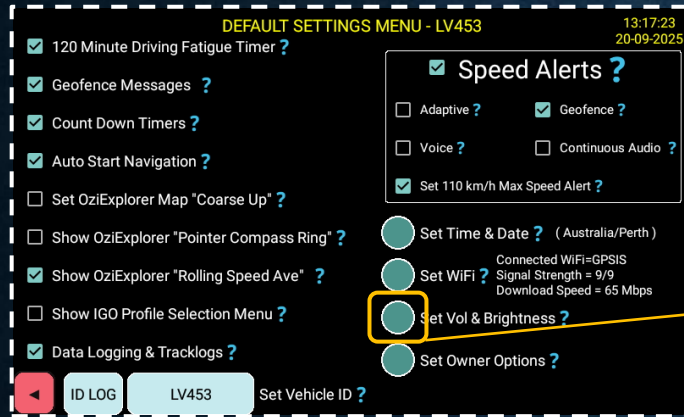

Use the slider bars or + / - buttons to change the default settings.

Displays default value.

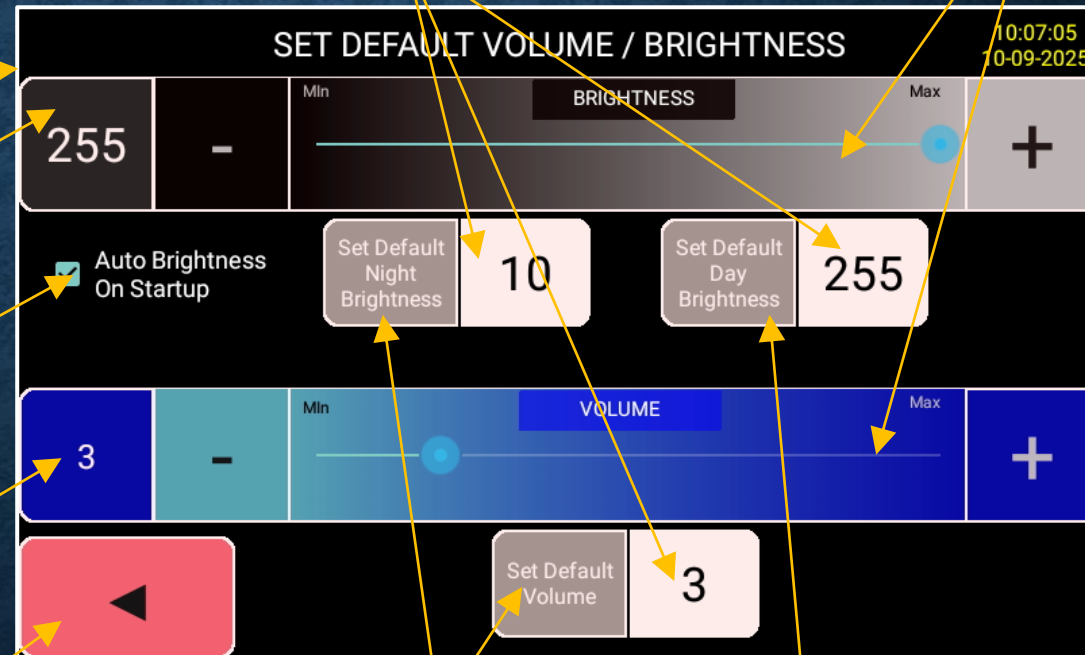

Displays adjusted value.

Tick this checkbox to set the "Auto Day / Night" brightness mode.

Displays adjusted value.

Exit back to the **SYSTEM** menu.

Select the "Set" buttons to save the new default values.



DEFAULT USER SETTINGS

OWNER OPTIONS



OWNER OPTIONS OVERVIEW

The ***OWNER OPTIONS*** menu allows the owner to set various parameters on the ***ONIS*** which will provide the users with a consistent secured device, across the fleet.

Most options are a “check box” to enable / disable and each option has an adjacent help option with the “ ? ”

OWNER OPTIONS MENU

DEFAULT SETTINGS MENU - LV453 13:17:23 20-09-2025

- ☒ 120 Minute Driving Fatigue Timer ?
- ☒ Geofence Messages ?
- ☒ Count Down Timers ?
- ☒ Auto Start Navigation ?
- ☐ Set OziExplorer Map "Coarse Up" ?
- ☐ Show OziExplorer "Pointer Compass Ring" ?
- ☒ Show OziExplorer "Rolling Speed Ave" ?
- ☐ Show IGO Profile Selection Menu ?
- ☒ Data Logging & Tracklogs ?

☒ **Speed Alerts ?**

- ☐ Adaptive ?
- ☒ Geofence ?
- ☐ Voice ?
- ☐ Continuous Audio ?
- ☒ Set 110 km/h Max Speed Alert ?

☐ Set Time & Date ? (Australia/Perth)

☐ Set WiFi ?
Connected WiFi=GPSIS
Signal Strength = 9/9
Download Speed = 65 Mbps

☐ Set Vol & Brightness ?

☒ **Set Owner Options ?**

ID LOG LV453 Set Vehicle ID ?

OWNER OPTIONS 14:40:22 23-10-2025

(* Yellow = WWW Owner Option Settings)

Allow User To Disable "Geofence Messages" ☒ ?	Enable "Geofence Message Capture Tool" ☒ ?
Allow User To Disable "Speed Alert System" ☒ ?	Enable "Geofence Speed Alert Capture Tool" ☒ ?
Allow User To Disable "Geofence Speed Alerts" ☒ ?	Enable "Save & Edit Tracklogs" (Owner Mode) ☒ ?
Allow User To Enable "110 km/h Max Speed" ☒ ?	Enable "Save & Edit Waypoints" (Owner Mode) ☒ ?
Allow User To Disable "Fatigue Timer" ☒ ?	Enable ONIS "Startup Message" ☒ ?
Allow users To RESET "Fatigue Timer" ☒ ?	Enable ONIS "Information Startup Tips" ☒ ?
Allow User To Set "Speed Alert Tolerance" ☒ ?	Allow User To Disable "Data Logging" ☒ ?
Enable WiFi & Allow Update "WWW Data" ☒ ?	Enable Navigation App "Startup Password" ☐ ?
Allow User To Set "WiFi, Time & Date" ☒ ?	Enable "Settings Menu Password" ☐ ?
	Enable "Owner Menu Password" ☒ ?

Exit back to the
SETTINGS menu.

Select on ? description buttons
to display explanations.

Set check box's to
enable / disable
options.



OWNER OPTIONS MENU

TPMS SETTINGS



TPMS SETTINGS

The ***ONIS*** features an integrated ***TPMS***.

The ***TPMS*** sensor monitoring menu allows the user to easily enable or disable any of the wheel sensors.

The navigation app uses this information to determine which sensors must be monitored for the ***TPMS*** health feature.

Included is a quick set ***Low Pressure Alarm*** setting of 16 PSI or 28 PSI, allowing the user to easily and quickly toggle between these two values for highway driving (28 PSI) or reduced wheel pressures (16 PSI) for sand driving.

TPMS wheel sensor binding is performed using the ***TPMS Configuration*** app from this menu.

TPMS SETTINGS

Displays Sensors information.

Check to enable / disable all **TPMS** monitoring.

Select to restore the defaults.

Check to enable / disable individual wheel sensors monitoring in the navigation app.

Select to start the **TPMS** app to bind the wheel sensors. **REFER TO THE TPMS CONFIGURATION DOCUMENT FOR DETAILS.**


**** START HERE ****
Select this button to set the **TPMS** monitoring.

Exit back to the **SYSTEM** menu.

Displays the current "Low Pressure Alarm" setpoint.

Users can use the "quick set" buttons to easily toggle between these two values.

Select on the ? buttons to display explanations.

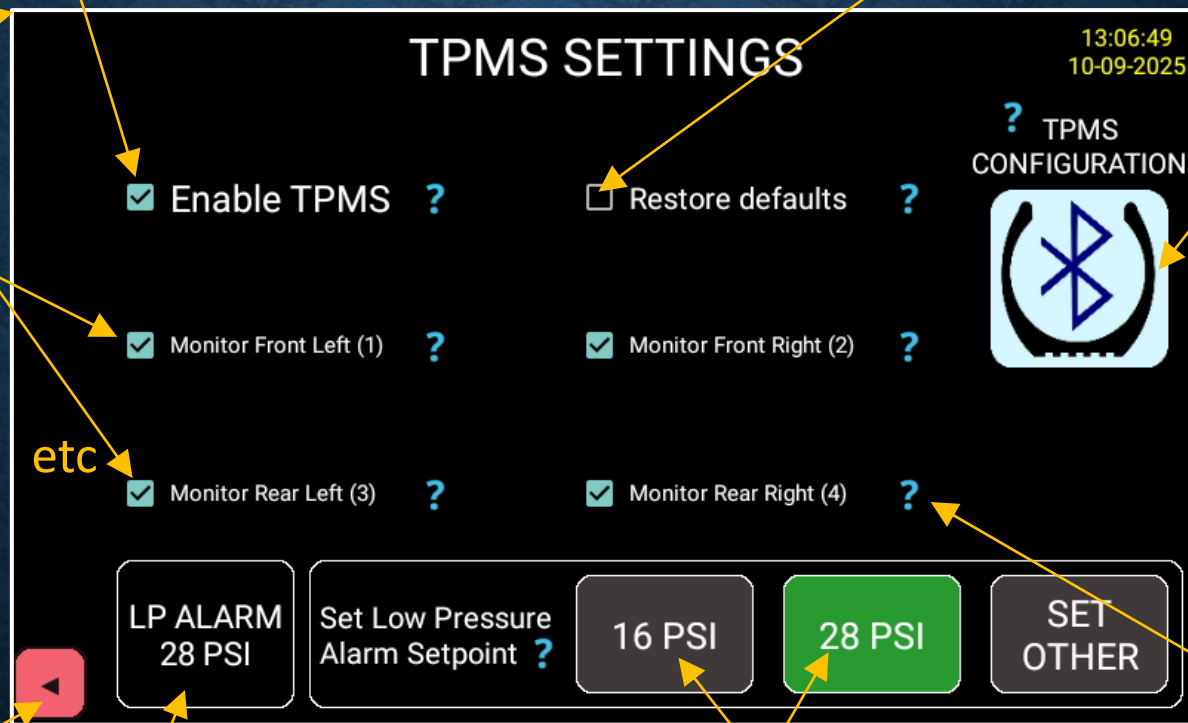



TPMS SENSOR MONITORING

VIEW TPMS TESTS



VIEW TPMS TESTS

Screen capture image of a **TPMS** test.

Displays the Sensor ID.



Red = Alarm.

TPMS test information.

Blue circle is OK.

Exit back to the **SYSTEM** menu.

Image number 1
(the newest image is the lowest number & max of 30 images).

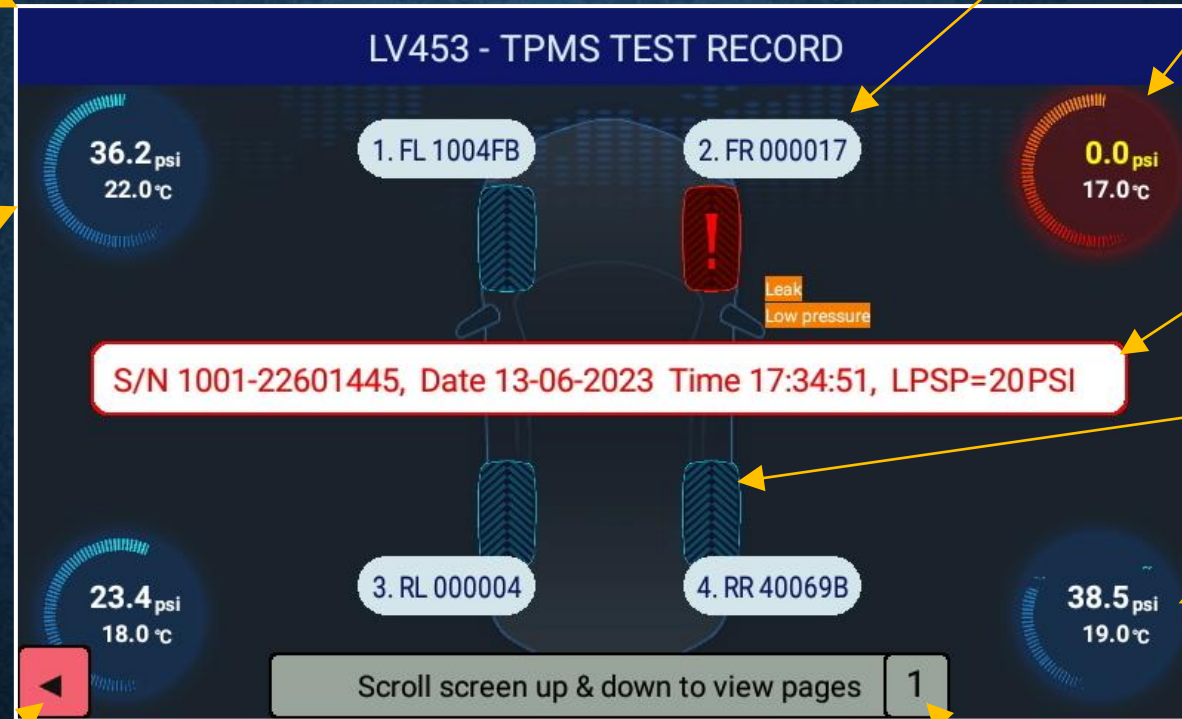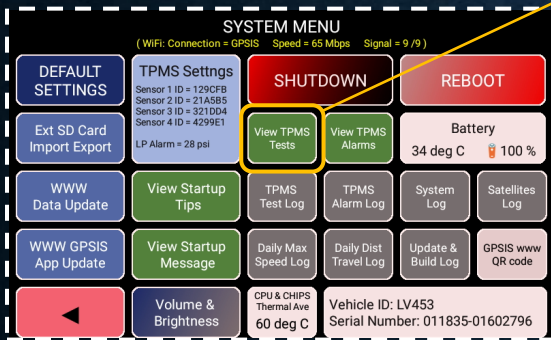



VIEW TPMS TESTS

VIEW TPMS ALARMS



VIEW TPMS ALARMS

TPMS alarm information.

Screen capture image of a TPMS Alarm whilst the navigation app was running.

Red = Alarm.

SYSTEM MENU

(WiFi: Connection = GPSIS Speed = 65 Mbps Signal = 9 / 9)

DEFAULT SETTINGS

TPMS Settings

Ext SD Card Import Export

WWW Data Update

WWW GPSIS App Update

Volume & Brightness

TPMS Settings

Sensor 1 ID = 129CFB
Sensor 2 ID = 21A5B5
Sensor 3 ID = 321DD4
Sensor 4 ID = 4299E1
LP Alarm = 28 psi

View TPMS Tests

View Startup Tips

View Startup Message

TPMS Test Log

Daily Max Speed Log

CPU & CHIPS Thermal Ave 60 deg C

SHUTDOWN

REBOOT

Battery

34 deg C 100 %

TPMS Alarm Log


Daily Dist Travel Log

Update & Build Log

Vehicle ID: LV453
Serial Number: 011835-01602796

Satellites Log

GPSIS www QR code

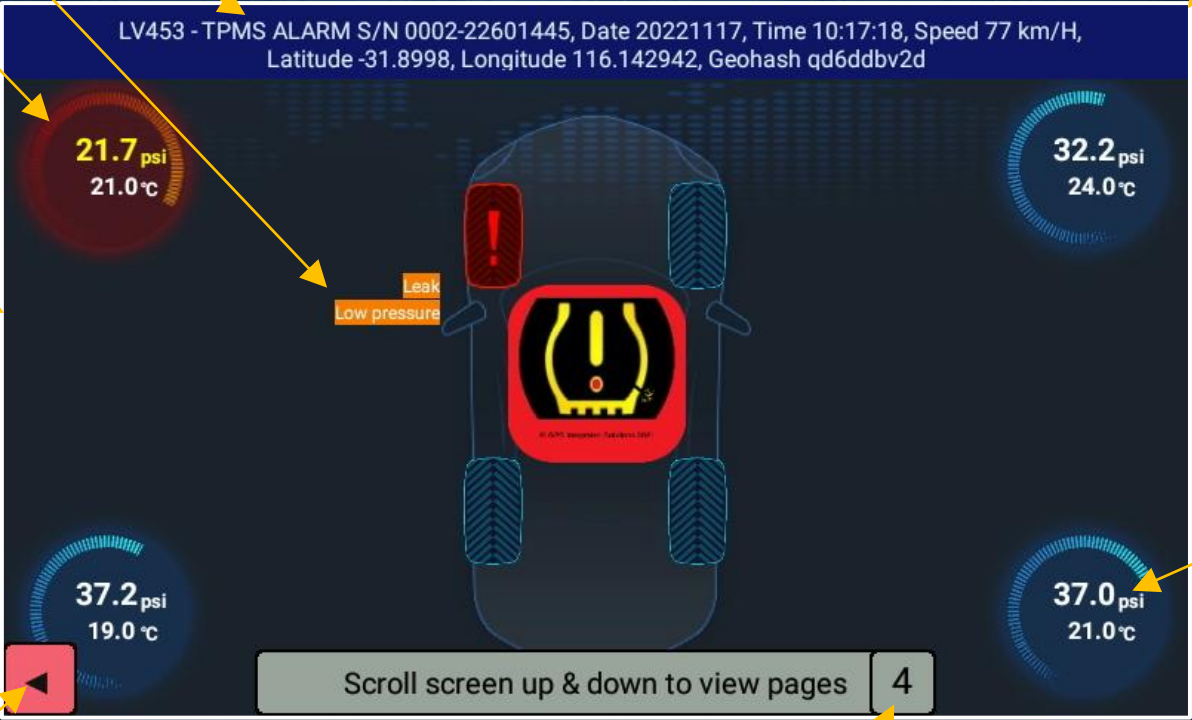

Exit back to the **SYSTEM** menu.

Image number 4 (max 30 images).

Blue circle is OK.




VIEW TPMS ALARMS

VIEW TPMS TEST LOG



VIEW TPMS TEST LOG

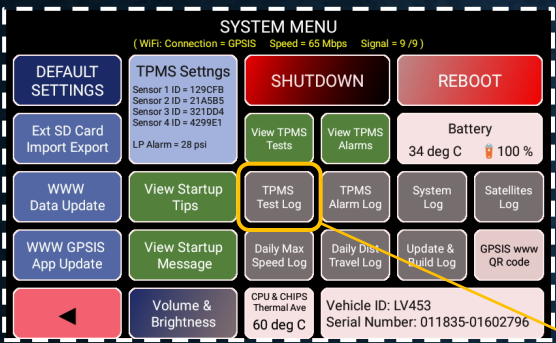

TPMS TEST LOG (All logs are retained)

DATE	TIME	ONIS S/N	VEHICLE ID	LP S/P	TYRE LOC & ID
20230821,	17:05:45,	001001-22601371,	LV453,	28 PSI,	RL (3) 321DD4
20230821,	17:05:16,	001001-22601371,	LV453,	28 PSI,	RR (4) 42191E
20230821,	17:04:01,	001001-22601371,	LV453,	28 PSI,	FR (2) 21A5B5
20230821,	17:04:38,	001001-22601371,	LV453,	28 PSI,	RR (4) 42191E

Exit back to the
SYSTEM menu.



Scroll screen up & down to view information




VIEW TPMS TEST LOG

VIEW TPMS ALARM LOG



VIEW TPMS ALARM LOG

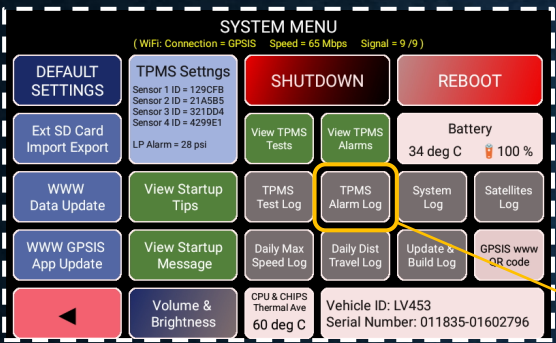

TPMS ALARM LOG (All logs are retained)

DATE	TIME	ONIS S/N	VEHICLE ID	LATITUDE	LONGITUDE	KM/H	LP S/P	TYRE LOC & ID
20240321,	11:08:23,	001001-22601371,	LV453,	-31.894307,	116.225876,	105,	28 PSI,	RL(3) 31A4B5
20240321,	09:06:14,	001001-22601371,	LV453,	-31.894709,	116.225012,	105,	28 PSI,	RR(4) 42EA32
20240321,	17:06:01,	001001-22601371,	LV453,	-31.895103,	116.225682,	105,	28 PSI,	FL(1) 13AE34
20230921,	15:04:03,	001001-22601371,	LV453,	-31.894707,	116.225787,	105,	28 PSI,	FR(2) 21A5B5

Exit back to the **SYSTEM** menu.



Scroll screen up & down to view information




VIEW TPMS ALARM LOG

VIEW DAILY MAXIMUM SPEED LOG



VIEW DAILY MAXIMUM SPEED LOG

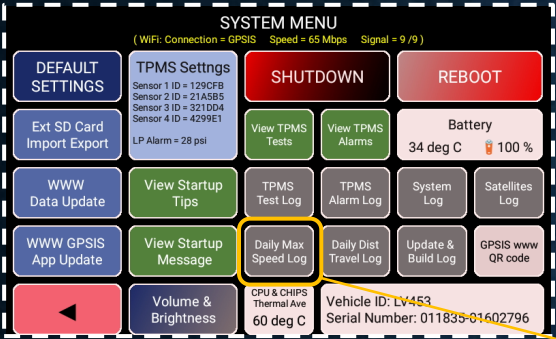

DAILY MAXIMUM SPEED LOG

DATE	TIME	ONIS S/N	VEHICLE ID	LATITUDE	LONG ITUDE	KM/H
20240328	08:26:35	011001-22601434	LV453	-33.676228	115.274920	Ave, 98
20240328	08:25:25	011001-22601434	LV453	-33.673378	115.294785	Max, 100
20240327	12:23:21	011001-22601434	LV453	-33.671040	115.338337	Ave, 80
20240327	10:36:20	011001-22601434	LV453	-33.671018	115.320223	Max, 84
20240326	17:09:39	011001-22601434	LV453	-33.657957	115.387697	Ave, 92
20240326	17:08:28	011001-22601434	LV453	-33.656308	115.406733	Max, 101
20240324	10:24:17	011001-22601434	LV453	-31.889685	116.063198	Ave, 4
20240324	09:51:10	011001-22601434	LV453	-31.890282	116.063495	Max, 11

Exit back to the
SYSTEM menu.



Scroll screen up & down to view information




VIEW DAILY MAXIMUM SPEED LOG

VIEW DAILY DISTANCE TRAVELLED LOG



VIEW DAILY DISTANCE TRAVELLED LOG

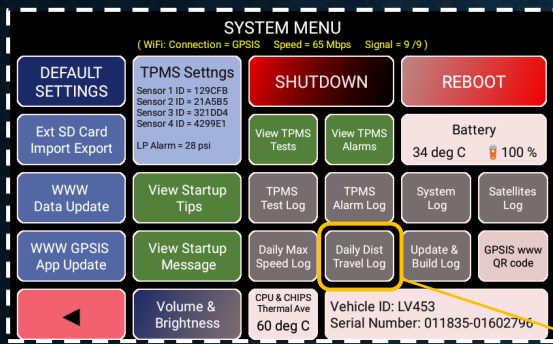

DAILY DISTANCE TRAVELLED LOG

DATE	ONIS S/N	VEHICLE ID	KM`s
20230821,	001001-22601371,	LV453,	30
20230820,	001001-22601371,	LV453,	12
20230819,	001001-22601371,	LV453,	76
20230818,	001001-22601371,	LV453,	56
20230817,	001001-22601371,	LV453,	33
20230816,	001001-22601371,	LV453,	26
20230815,	001001-22601371,	LV453,	145
20230814,	001001-22601371,	LV453,	12
20230813,	001001-22601371,	LV453,	346
20230812,	001001-22601371,	LV453,	12
20230811,	001001-22601371,	LV453,	563
20230810,	001001-22601371,	LV453,	87
20230809,	001001-22601371,	LV453,	0
20230808,	001001-22601371,	LV453,	0
20230807,	001001-22601371,	LV453,	0
20230806,	001001-22601371,	LV453,	0

Exit back to the
SYSTEM menu.

Scroll screen up & down to view information



VIEW DAILY DISTANCE TRAVELLED LOG

VIEW STARTUP TIPS IMAGE GALLERY



VIEW STARTUP TIPS IMAGE GALLERY

The **ONIS** features a startup tip when the navigation app is started.
(If enabled by the **ONIS** owner).


The images are .png format and are preloaded into the **ONIS** with one image displayed when the navigation app is started.

The images will be cycled through the entire gallery and then begin at the beginning.

The user can view all the images by selecting ***View Startup Tips***

VIEW STARTUP TIPS IMAGE GALLERY

Scroll the screen
UP / DOWN to
display the images.

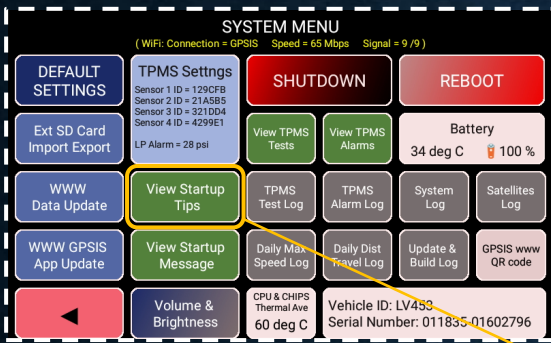

Exit back to the
SYSTEM menu.

Image description that will be
displayed when the navigation app is
started.

Image number.



VIEW STARTUP TIPS IMAGE GALLERY

VIEW STARTUP MESSAGE



VIEW STARTUP MESSAGE

The ***ONIS*** features a startup message when the navigation app is started.
(If enabled by the ***ONIS*** owner).


The startup message is .png format and is preloaded into the ***ONIS*** and displayed when the navigation app is started.

The user can view the startup message by selecting ***View Startup Message***

The startup message is also complimented with an audio beep and voice.

The ***ONIS*** will use a default ***Keep Left Message*** if the owner enables this feature and does not load a message.

DEFAULT STARTUP MESSAGE

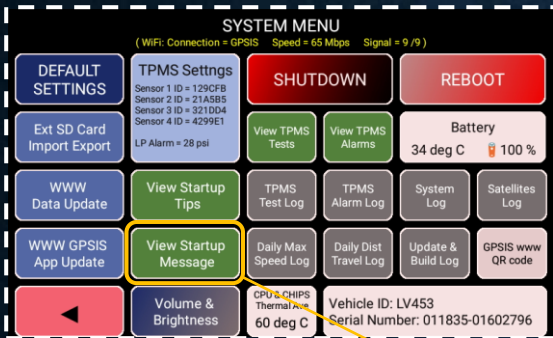

EXAMPLE STARTUP MESSAGE






VIEW STARTUP MESSAGE

VIEW GPS SATELLITES



VIEW GPS SATELLITES

Select information modes.

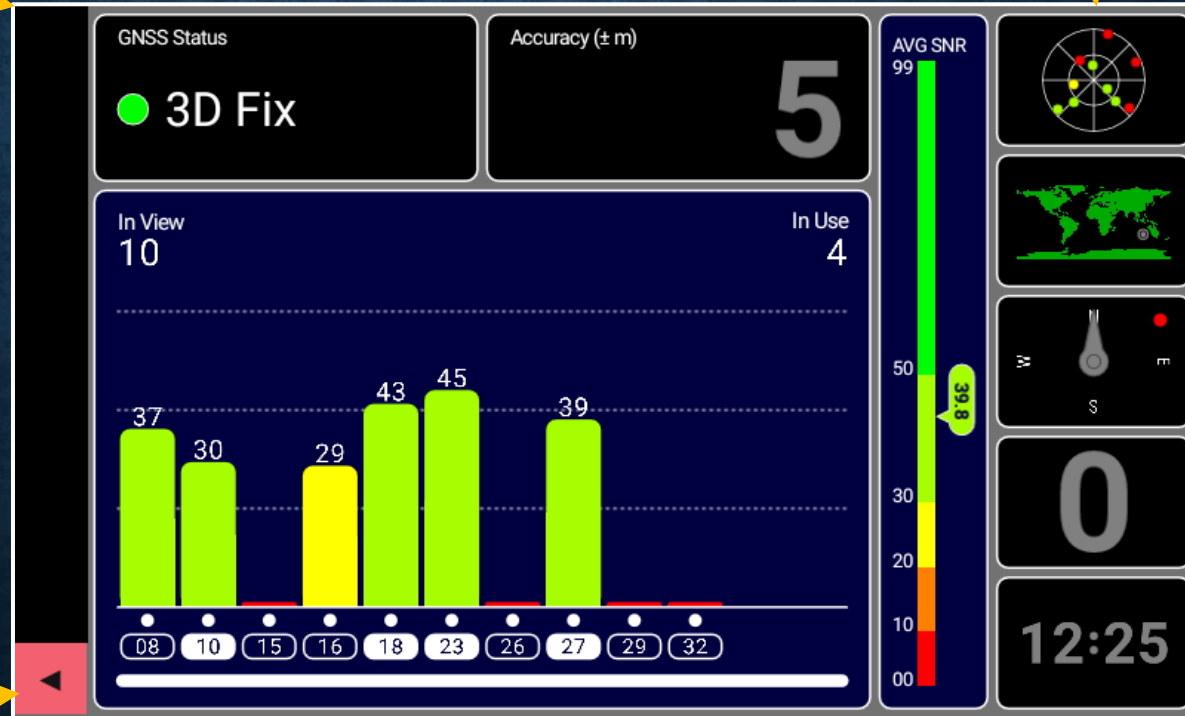

Exit screen.




VIEW GPS SATELLITES

GPS SATELLITE LOG



GPS SATELLITE LOG

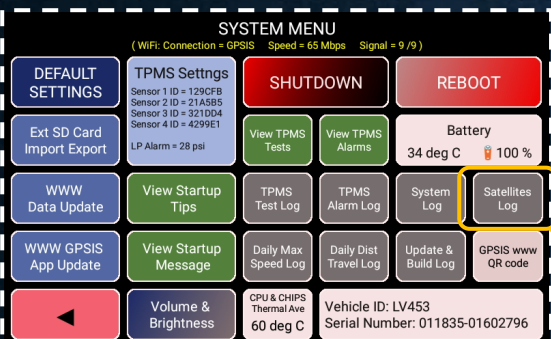

Long Press.

12:40:19

VISIBLE SATELLITE LOG

DATE	TIME	SATELLITES	LATITUDE	LONG ITUDE
20250223	12:38:48,	11,	-31.892570,	116.016918
20250223	12:38:40,	11,	-31.892570,	116.016918
20250223	12:38:32,	11,	-31.892472,	116.016955
20250223	12:38:24,	10,	-31.892472,	116.016955
20250223	12:38:17,	9,	-31.892472,	116.016955
20250223	12:38:07,	10,	-31.892543,	116.016930
20250223	12:37:59,	10,	-31.892490,	116.016967
20250223	12:37:50,	10,	-31.892572,	116.016927
20250223	12:37:43,	10,	-31.892532,	116.016923
20250223	12:37:20,	10,	-31.892628,	116.016822
20250223	12:37:10,	9,	-31.892557,	116.016815
20250223	12:37:03,	8,	-31.892505,	116.016810

Scroll screen up & down to view information



GPS SATELLITE LOG

HOW TO VIEW TERMS & CONDITIONS



HOW TO VIEW TERMS & CONDITIONS

For latest and current version, visit gpsis.com.au



GPS Integrated Solutions "Terms & Conditions" (Effective 07/08/2022)

OVERVIEW

These "Terms & Conditions" shall apply to "GPS Integrated Solutions", "4J Automation Pty Ltd ACN 648 458 388", "The 4J Investments Trust ABN 29 815 021 432" and any customer, owner, driver or user of our goods or services.

The current "Terms & Conditions" can be found at www.gpsis.com.au and will replace any previous version.

CONTENTS

1. Governing Law
2. Definitions
3. General Agreement
4. Warranty

Disagree & Shutdown

Scroll screen up & down to view information



Agree & Continue

Selecting this option will shutdown the **ONIS**.

Select to continue.

SYSTEM LOG

Most recent system log inc T&C's acceptance by the user.

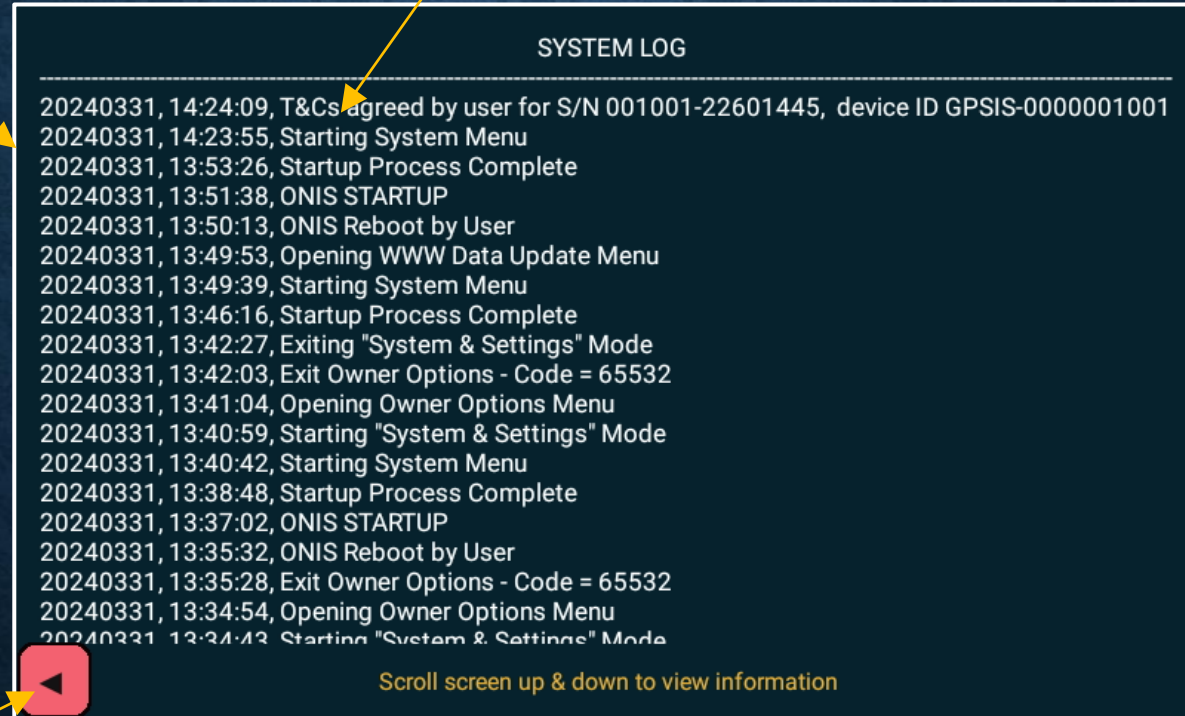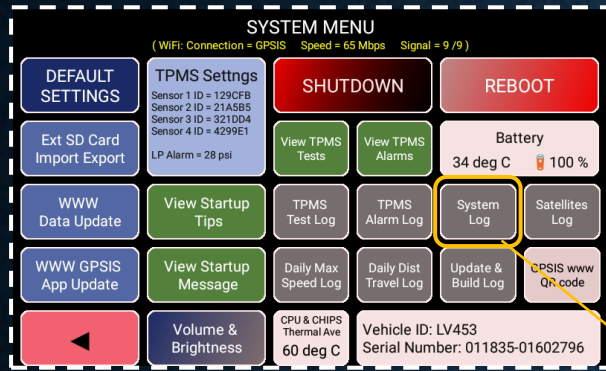

Exit back to the **SYSTEM** menu.



HOW TO VIEW TERMS & CONDITIONS

WWW UPDATE APPS



WWW UPDATE APPS

ONIS apps can be updated from www.gpsis.com.au

To perform app updates, the **ONIS** must be connected to a WiFi SSID.
(this can be set from the “Default Settings Menu”)

If an update is available the update app information will appear in the update menu once the user has requested the update. The **ONIS** will perform integrity checks on the downloaded app to ensure it is a later version than the installed app.



The **ONIS** owner has the ability to allow or prevent the user from updating any WiFi updates.

WWW UPDATE APPS

For latest and current version, visit gpsis.com.au

Select on the ? buttons to display explanations.

Exit back to the **SYSTEM** menu.

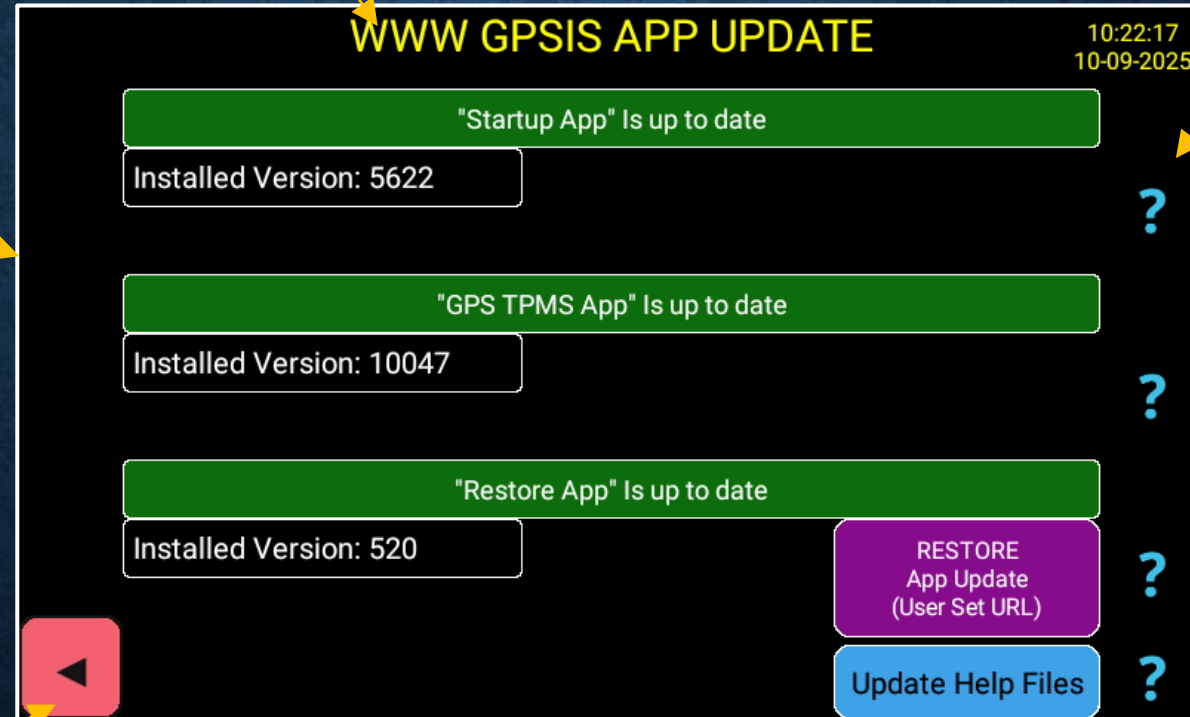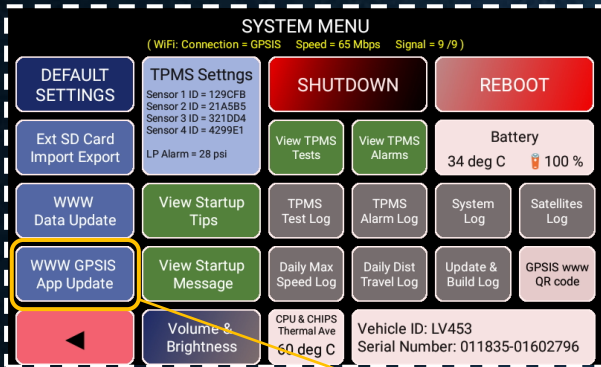



WWW UPDATE APPS

WWW & EXT SD CARD DATA UPDATE



WWW & EXT SD CARD DATA UPDATE

ONIS data can be updated from the owner download site or from an owner configured external SD card.

To perform WWW data updates, the ***ONIS*** must be connected to a WiFi SSID.
(this can be set from the “Default Settings Menu”)

The downloaded data must be in the correct format or it will be rejected.

The downloaded data **WILL** replace (not append) the existing data in the ***ONIS***.

WWW DATA UPDATE

Select on the ? buttons to display explanations.



Customer download description.

Logs that provide download status.



Displays the current download version status.

Exit the "Update Menu"

Displays the current web site URL. This can be configured from a configuration file.

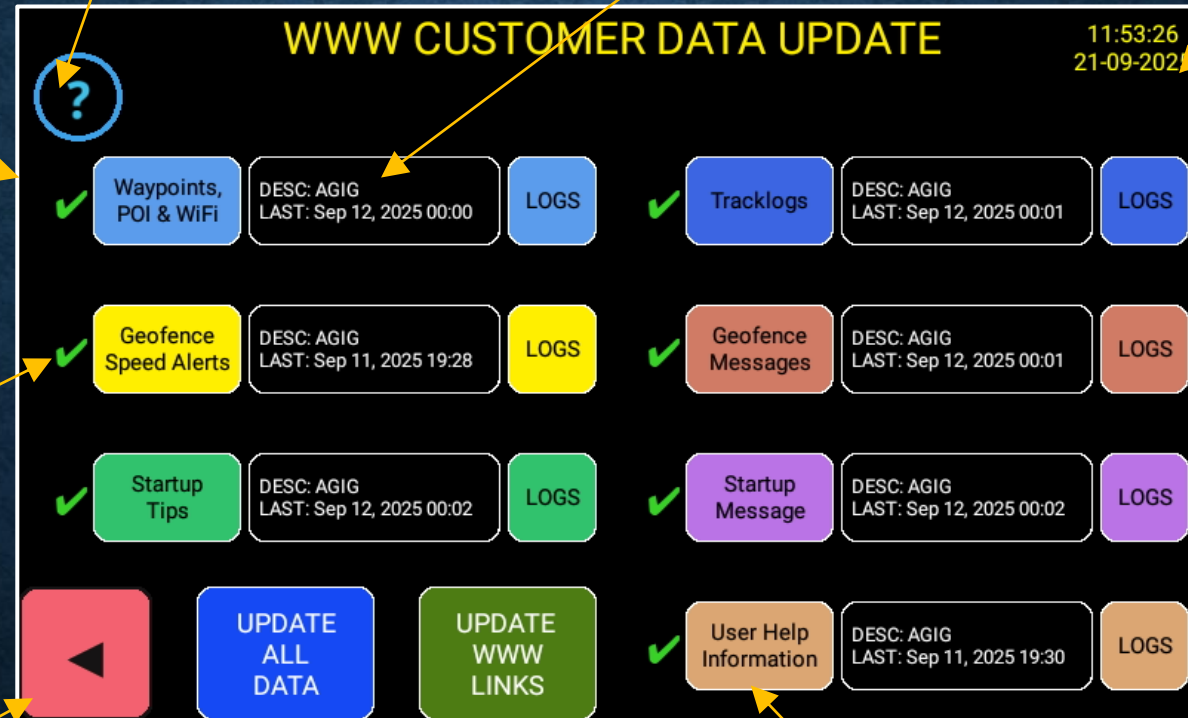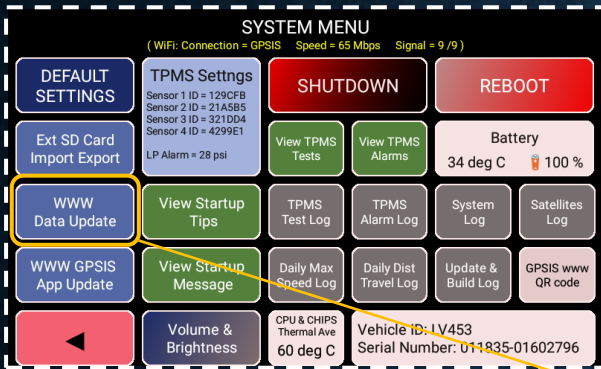

EXT SD CARD DATA UPDATE

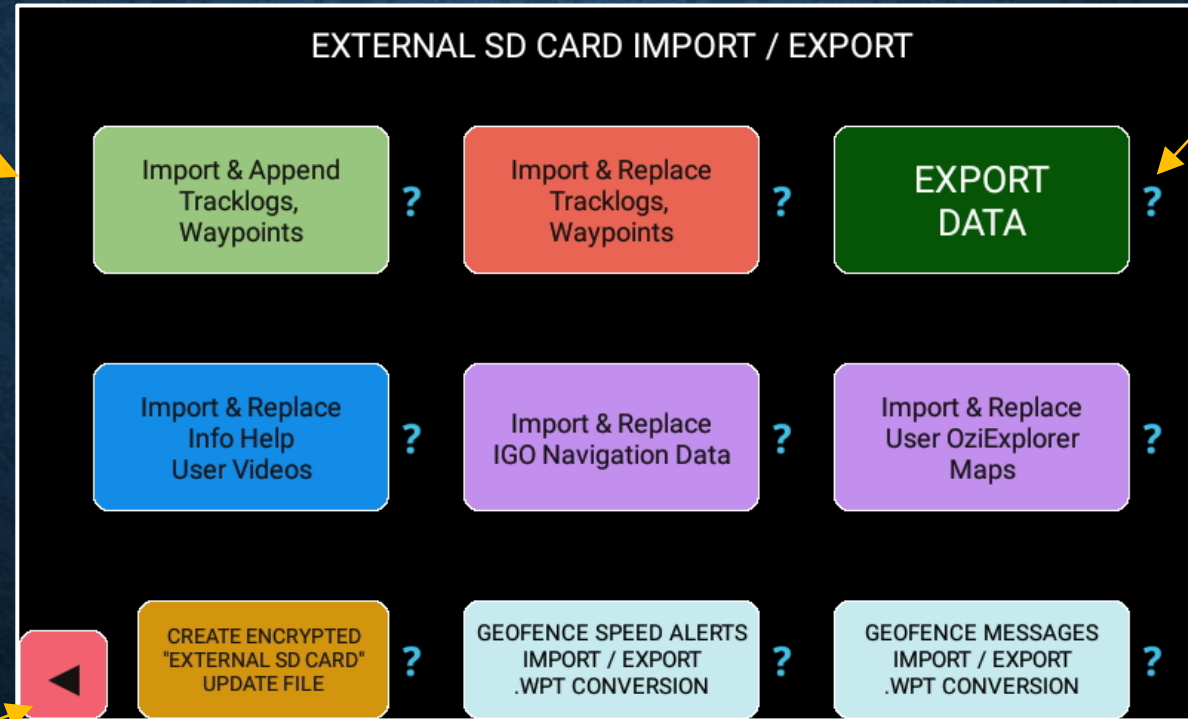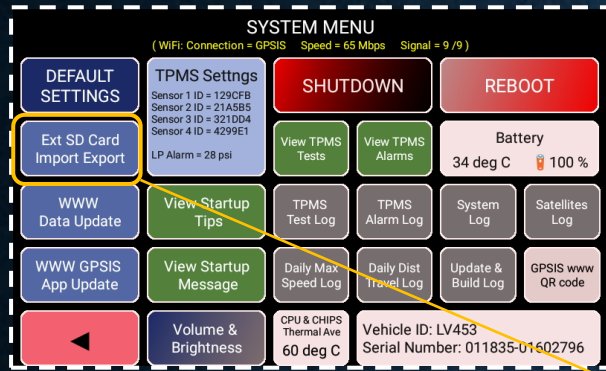

Select on the ? buttons to display explanations.

Exit the "Update Menu"



WWW & EXT SD CARD DATA UPDATE

INSTALLATION REQUIREMENTS



INSTALLATION REQUIREMENTS

The customer supplied **PND** that the **ONIS** suite is installed must comply with all of the following conditions:

- . Does not impede or obstruct the drivers view or other vehicle operation functions
- . Is easily reachable so the driver can perform **ONIS** operations (when it is safe to do so)
- . Is installed and mounted by a competent person using best practices
- . Is connected and powered by the 12V vehicle ignition (or accessories) and is only powered up (and charging) when the vehicle is occupied – do NOT leave the **ONIS** on charge unattended
- . Is only powered and connected by **PND** manufacture supplied 12V adapter and cables
- . Has the manufacturer's SD card "left side cover" fitted (screwed) to the **PND** to provide IPX7 weather protection if the **ONIS** is used in dusty or damp environments
- . Is not installed so that it will interfere with a "vehicle air bag" deployment.

INSTALLATION REQUIREMENTS

The windscreen suction cup mounting method is not permanent and will fall from the windscreen, periodically – we have experienced suction periods of up to 4 weeks.

We recommend using the “ball joint” extension piece and accessories, in preference to the window suction cup, and securely mounting to a vehicle fixed point wherever possible, for permanent installations.

The **ONIS** is installed so that it avoids or minimises direct sun exposure and vehicle obstructions such as pillars etc and has the best view possible for finding the **GPS** satellites.

If the **ONIS** is mounted low on the windscreen and in direct sun exposure, we insist that it is provided with an additional sun shade or cover (with adequate ventilation).

If the **ONIS** is mounted in front of a vehicle vent, ensure that the heating cycle does not overheat the **ONIS**.

IMPORTANT - IF IT IS TOO HOT FOR YOUR HAND OR MOBILE PHONE TO REMAIN IN THE ONIS LOCATION FOR ANY LENGTH OF TIME, THEN IT IS TOO HOT FOR THE ONIS TO BE MOUNTED IN THIS LOCATION.

NOTE: extreme high temperatures can cause a premature lithium battery failure and in a worst case scenario, battery explosion or fire – The ONIS MUST be kept below 60 deg Celsius or shutdown by the user.

Operating the ONIS above 60 deg C for lengthy periods may void warranty and/or Australian consumer guarantees.



INSTALLATION REQUIREMENTS

***OPERATIONAL REQUIREMENTS
& INFORMATION***



OPERATIONAL REQUIREMENTS & INFORMATION

The **ONIS** SHALL only be operated within the Law, Road Traffic Codes, Acts and Regulations and it is the responsibility of the **ONIS** user to ensure that they meet these requirements noting that these may vary in different jurisdictions.

Use the vehicle speedometer as the speed indication device to comply with the regulatory speed limits.

The **ONIS** SHALL be considered as a navigation aid and NOT be relied on as the only source of navigation, location, distance, speed or any other navigational parameter. The user should always rely on their own navigational skills using official printed maps, compass, road signs, odometer readings and other basic fundamental skills and be competent in these skills.

The **ONIS** SHALL be considered as a driving aid and NOT be relied on as the only source of data and information for the tyre pressures, tyre temperatures or any other vehicle parameter provided by the various apps installed on the **ONIS**. The user should always rely on their own common sense, vehicle alarms and indicators and perform vehicle checks at regular intervals which can also be used to test the **ONIS** functions. The driving conditions may also affect the time intervals between the vehicle checks (e.g. harsh terrain would require more frequent checking of tyre condition).

OPERATIONAL REQUIREMENTS & INFORMATION

The driver is solely responsible for their own driving capability, and the **ONIS** SHALL NOT be relied on to manage driving fatigue. The **ONIS** driving fatigue timer is a pre-configured 120 minute timer which advises the driver to rest after 120 minutes of driving, and is a general guide for fatigue management.

If a driver is fatigued at any time they **MUST** park the vehicle and rest regardless of the driving time duration.

A prudent design philosophy for the **Geofence Speed Alert** and **Geofence Message** functions is required to achieve correct and optimum results. The **Geofence** system when configured correctly is a powerful aid for the driver however if configured poorly, it **MAY** result in unexpected messages and misleading warnings. e.g. as the **ONIS** scan cycle is approximately 10 seconds, a vehicle travelling at 60 km/h (17 m/s) may pass through a **Geofence** area before it has been processed by the **ONIS**. For this reason, it is possible that the **ONIS** may miss a “singularly configured” **Geofence** 7, 8 or 9 precision entries at higher speeds.

If weather conditions do not allow for adequate and safe driver visibility do not continue driving. It is the sole responsibility of the driver to drive to the surrounding environment conditions.

OPERATIONAL REQUIREMENTS & INFORMATION

The **ONIS** incorporates some functions that we have deemed “non essential” as these are dedicated to settings or non driving vehicle safety information.

We have either disabled or displayed messages for these functions whilst the vehicle is in motion however if the **ONIS** is still searching for satellites (i.e. after initial startup) then the **ONIS** is unable to determine if the vehicle is in motion - In these circumstances, a warning message will be displayed and the driver **SHALL** not use these functions until the vehicle is **PARKED**.

It is the sole responsibility of the **ONIS** user to ensure that the **ONIS** is **ONLY** operated when it is safe to do so and **DOES NOT** distract the driver from maintaining vehicle control – if the user is unsure, **PARK** the vehicle to perform the task.

NOTE:

*The **ONIS** requires a minimum of 2% battery capacity to start the operating system.*

*If the **ONIS** does not start when powered, it may be that the **ONIS** battery is completely depleted - leave on a power source for 20-30 minutes and retry.*

OPERATIONAL REQUIREMENTS & INFORMATION

To reduce risk of fire or damage and assist in longevity of battery life , the **ONIS** MUST be removed from direct sunlight when the vehicle is not being driven.

Do not leave the **ONIS** in the sun unused for long periods as dashboard temperatures in vehicles without air circulation can easily exceed 60 deg C, and the black case will absorb the heat.

If the **ONIS** battery temperature sensor is available, when the navigation app is running the **ONIS** will monitor the battery temperature and warn the driver when the temperature exceeds 60 deg C.

The current **ONIS** battery temperature (if available) can be viewed in the “System Menus”

Do NOT leave the **ONIS** on charge unattended.

Treat the **ONIS** with the same respect as a mobile phone.

NOTE: extreme high temperatures can cause a premature lithium battery failure and in a worst case scenario, battery explosion or fire – The ONIS MUST be kept below 60 deg Celsius or shutdown by the user.

Operating the ONIS above 60 deg C for lengthy periods may void warranty and/or Australian consumer guarantees.

OPERATIONAL REQUIREMENTS & INFORMATION

The **ONIS** is a complex micro computing device with numerous apps installed, some interfacing between other apps and all demanding system resources. From time to time there will be errors and inconsistencies and “rebooting” the **ONIS** should clean out memory buffers and ensure that the device performs as designed. If “rebooting” does not rectify problems and the same fault is repeated consistently, then contact **GPSIS**.

We have made every attempt to ensure that **ONIS** is fault free and functions correctly. The **ONIS** has been subjected to many hours of workshop and field testing to ensure the design build & philosophy meet the highest standard of quality and customer expectation.

Occasionally you may select an app from the **Main Menu** and it does not respond (especially if you have just exited from another app). This is not a bug and occurs because there are many apps all competing for the Android system resources and this may prevent the app from starting immediately. If the problem is consistent, (i.e. the selected app just won't start) contact **GPSIS**.

OPERATIONAL REQUIREMENTS & INFORMATION

The **ONIS** MUST be treated with care and hard pressing the screen is not required. Dropping objects or hard pressing can damage the keypad leading to inconsistent and random key presses, without any user input. The **ONIS** should be treated with the same level of care and respect as a smart phone.

The primary function of the **ONIS** is a **PND** incorporating **OziExplorer**, **iGO**, **TPMS**, **Speed Alert**, **Driving Fatigue Timer**, **Driving Logging** and the **Geofence** functions. If this functionality is working, then we deem the **ONIS** to be functioning correctly.

The **ONIS** has been designed and developed to be used as a standalone offline device.

If the **ONIS** is connected to a WiFi hotspot, navigation and **ONIS** data can be updated from a customer configured WWW update server and the **ONIS GPSIS** apps, can be updated for www.gpsis.com.au

The **ONIS** does not support a SIM card and does not support data download.

The Bluetooth connectivity is limited to the **TPMS** wheel sensors and other peripherals that may be supplied by **GPSIS** at later date.

We do not collect any personal data however we do log **ONIS** navigation data, **PND** system parameters and debug log data to both the internal memory areas and the removable external SD card.

Some log data is easily available and accessible to you and some data is protected but can be supplied to you on request.



***OPERATIONAL REQUIREMENTS
& INFORMATION***

FAQ, KNOWN ISSUES, FAULTS & BUGS



KNOWN ISSUES, FAULTS & BUGS

Q. Why do I occasionally get a message "An app wants to turn Bluetooth ON for this Device" ?

There are many apps installed on the **ONIS** and all apps compete for system resources.

Select "Allow" from the popup message.

If the problem is consistent (i.e. every instance after a reboot) , contact ***GPS Integrated Solutions (GPSIS)***.

Q. The **ONIS** has locked up on a screen and I can't select any option including "Exit" - What can I do?

If user "key presses" are NOT functioning, remove the **ONIS** from the power / mount and let it power down.

OR

If this does not work, press the small reset button on top left, and reboot.

OR

If this does not work, press the small reset button on the rear (use a paper clip).

OR

If the device is still not functioning or will not power up, contact ***GPSIS***.

Q. Occasionally I select an app from the **Main Menu** and it does not respond or responds slowly!

There are many apps installed on the **ONIS** and all apps compete for system resources. If the problem is consistent (i.e. every time even after a reboot), contact **GPSIS**.

Q. Why doesn't the **ONIS** power down after removing the DC supply?

If the **ONIS** power is cycled during the **ONIS** startup, it may not shutdown on the next occasion the power is removed.

If user "key presses" are NOT functioning, remove the **ONIS** from the power / mount and let it power down.

OR

If this does not work, press the small reset button on top left, and reboot.

OR

If this does not work, press the small reset button on the rear (use a paper clip).

OR

If the device is still not functioning or will not power up, contact **GPSIS**.

Q. Why does my **ONIS** not display the battery temperature?

Some of the earlier manufactured **ONIS** units did not have this sensor configured.

Q. Why doesn't the **ONIS** WiFi automatically reconnect to my Hotspot device?

GPSIS has tested the WiFi connectivity of the **ONIS** with the **NBN, Samsung Galaxy** phone (Android) and the **Apple iPhone 13**.

We have experienced connection inconsistencies with the **iPhone** device when the **iPhone** is moved away from the **ONIS**. This may well be compatibility issues between **Android** and **Apple** and is not the **ONIS** as both the **NBN** and **Samsung Galaxy** connections have reconnected automatically when in range. In this instance, the user will have to toggle the **iPhone** Personal Hotspot "Allow Others to Join", which should reconnect the **ONIS**.

If the **ONIS** remains disconnected open the **ONIS** WiFi menu and confirm that the device is connected to the configured **SSID**.

If an "Authentication Problem" message is displayed then the user may need to "Forget" the connection and then reconnect and authenticate.




FAQ, KNOWN ISSUES, FAULTS & BUGS

BUILD INFORMATION



BUILD INFORMATION

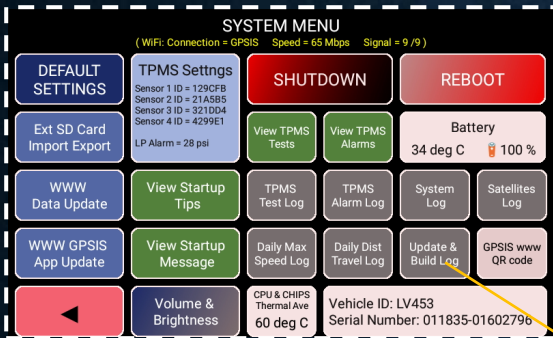

For Sales, Support and current T&C's, contact:

GPS Integrated Solutions

www.gpsis.com.au

For support please also provide the following information:

Model: M5S PRO

Device: MRA58K

S/N: 0002-22601445

Device ID: E5CCD869CB6D

Warranty Expiry is 12 months from invoice date.

Startup ver 2539

GPS ver 5448

Installed 3rd Party Packages





Scroll screen up & down to view information

app Versions
installed.

Exit back to the
SYSTEM menu.

gpsis.com.au

Scan this QR
code to visit
gpsis.com.au

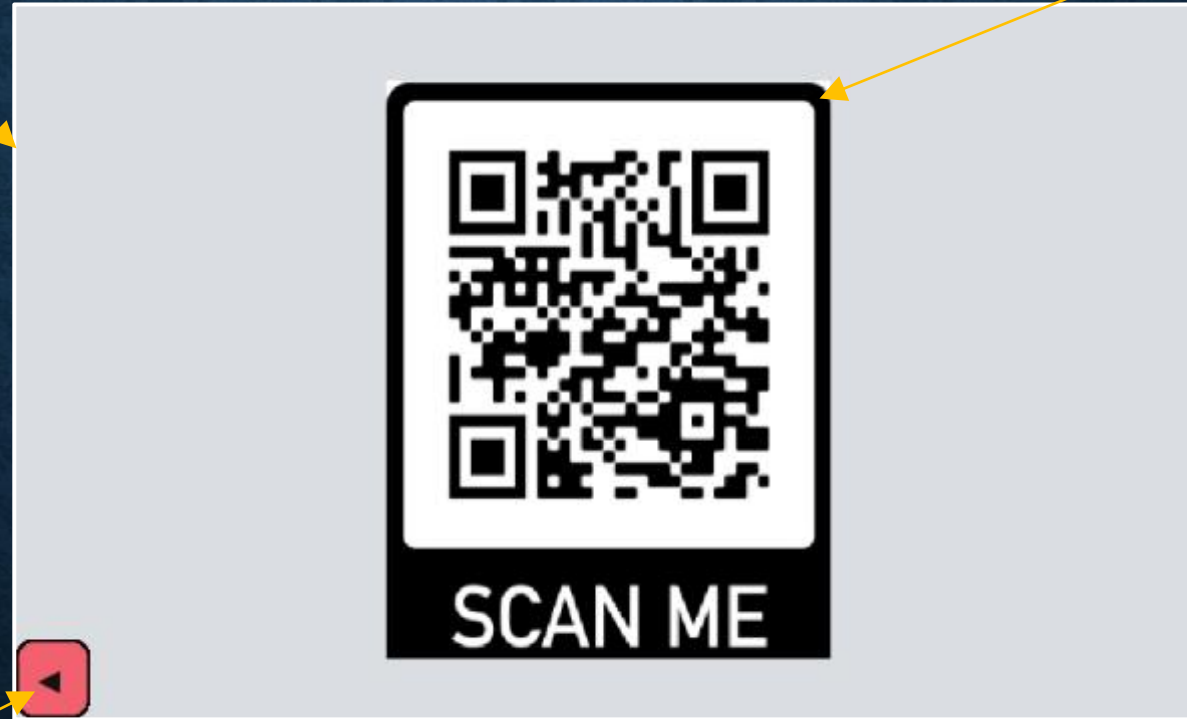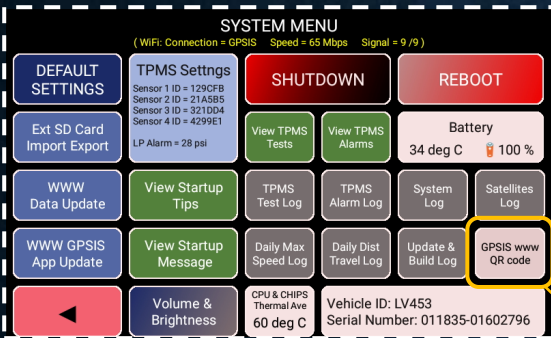

Exit back to the
SYSTEM menu.