## How to Remove an Engine from a Sailboat

Each boat is unique but they are also very similar. I have done this a few times and this is how I approach the project. Nothing replaces a good plan and experience but this might help you get your thoughts together as you study the project. Consider this short note as the basis of a plan to remove the gas or diesel from your sailboat. I take no responsibility for your project this is just how I look at it. The worst part of a conversion to electric from diesel or gas is the removal of the old system. Not rocket science but a bit of a manhandling. It takes a few hours and a couple of guys.

The order of many of these activities may be done at your discretion but certain actions must be done before others.

## What you will need:

- Protect yourself and the boat by wearing protective clothing and glasses.
- Wet towels available along with a <u>fire extinguisher</u> and use as necessary.
- Hand tools socket set, screw drivers, wire clippers, grinder with cutting blade, patience, etc
- Hose clamps and wood plugs
- Use <u>cardboard</u>, <u>wood</u>, and <u>carpet</u> to protect the surfaces.
- Bilge pads and lots of rags
- A <u>come-along</u> is better than using the boat's block and tackle (protect your running gear)
- Straps to connect the come-along to the boom
- Protection for the boom where the straps for the come-along will be connected to the boom
- Furniture dolly (\$20 at Home Depot) will make your life better and well worth it
- Heavy plastic bag to put the engine in while suspended above the dolly
- Straps to strap the engine onto the dolly
- Fuel pump and oil pump to remove fluids plus contains for the fuel and oil.

## Disconnecting the motor:

- Safely decommission the through hulls
  - Close the through hulls.
  - o If possible cut the hose high enough so as to be above the water line.
  - Plug the hose with a plug and hose clamp and keep the hose out of your way.
- Remove fuel and oil as much as possible
- Disconnect the fuel line and control any spills (drain the tank before you try to remove it)
- Disconnect the exhaust (keep it high in the boat)
  - If you cannot unbolt the exhaust from the heat exchanger, use the grinder
  - Cut the exhaust hose, plug, and position it out of the way and above the waterline
  - Remove the exhaust hose from the boat now or later
- Remove the coupler.
  - The coupler will likely have 3 or 4 bolts connecting the two halves
  - Unbolt it for now and remove the shaft half after the engine is removed
    - Put a hose clamp on the shaft where it enters the packing gland/PSS to make the spot and to keep the shaft from sliding aft.







- Removing the shaft half of the coupler may require cutting the coupler with a grinding wheel as the set keys may break. Two cuts will do it. Lots of sparks have wet towel and fire extinguisher ready
- Disconnect the control cables from the transmission and the throttle.
- Remove the mounting nuts from the mounts or engine block.
  - Sometimes the bolts are rusted on and they can be cut off with the grinder. Take precautions protecting your eyes and the boat.

## Removing the motor:

- Place a come-along to the boom (protect the boom with a towel under the straps and do not place straps over the sails if you can avoid it). Prefer a come-along to using the boats block and tackle as I use them for sailing.
- Use multiple halyards to support the boom
  - From aft forward
    - Topping lift or a halyard at the aft end of the boom
    - A halyard about 25% of the way and in a place where it will be able to enable the repositioning of the come-along
      - A Halyard at the middle of the boom
      - Place the come-along between the forward halyards in closer to the most forward halyard as it will provide both upward and forward movement while lifting the motor.
      - Crank the come-along to lift the motor from its position and manhandle it up and forward so it will clear the engine compartment opening.
      - Use some blocks of wood or other blocking material to protect
      - the boat and support the motor as you raise it. With the motor out of the engine compartment, block it and secure it to allow you to move the come-along aft on the boom to where the second halyard if connected.
- After the come-along has been reposition on the boom more aft, you can again
  - crank it to lift the motor and manhandle it towards stern of the boat and out of the companionway.
  - Block the motor in the cockpit and prepare the motor to be lifted high enough to clear the boat.
  - If you have not done so, tie the boat to the dock well on the side from which you will not be removing the motor. The boat will heel
  - over as the motor is swung out from centerline if you do not address this. A big guy providing counter weight will also help.
  - Swing the motor on the boom so that the motor is now over the dock.
  - Lower the engine onto the furniture dolly placing it into a heavy plastic bag to control all fluids which may leaking out of the motor. Strap to dolly and wait for high tide to move off the dock.









the

0

