

Kozy Kanopy USER GUIDE




Please read each step carefully before you attempt to set up.
Save these instructions for future reference.


CAUTION: Keep fires small to avoid damage to fabric/frame from prolonged exposure to excessive overheating.

SET UP


- 1 With partner on opposite side of frame, place frame center over fire pit or area to be shaded. Grasp outer legs, lift off the ground, and step backwards - stopping at full arms' length.

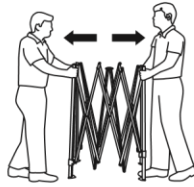


- 2 Grasp the top and bottom of the truss on opposite sides. Slightly lift frame up and **PUSH** hands together while stepping backwards until Kanopy is fully opened. *Be careful not to pinch fingers or push too hard so as to avoid damage to truss.*

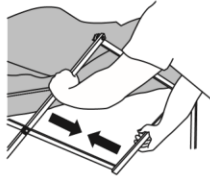

- 3 Engage push button slider at each corner by pushing up on the slider with one hand while holding down on top of leg with other hand until push button slider engages. *Repeat on opposite legs.*

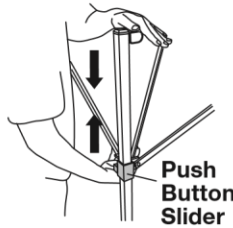


- 4 Unfold the Kanopy and place it over the open frame. Secure the Kanopy top to the frame by attaching the locking strips on the top with the locking strips on the frame. *Repeat, pull Kanopy top down on each corner.*

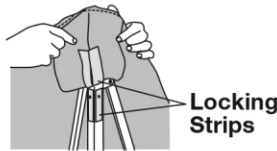

- 5 **IMPORTANT (2) OPTIONS**
A: FIRE PIT KANOPY (leave cap off).


B: RECREATIONAL KANOPY (place cap on roof). Match all (8) magnets to secure (2) on each corner. *NOTE: Place cap before adjusting height on legs.*

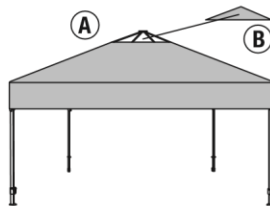

- 6 With partner, lift outer legs up and slide out the inner legs until the PUSH BUTTON locks into outer legs. *Repeat on opposite legs.*


HEIGHT ADJUSTMENT:

Use push button to adjust legs to desired height. *Repeat on opposite legs.*

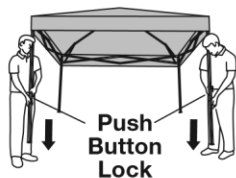


TAKE DOWN


- 1 With partner, raise & slightly lift up corner legs, depress push button to unlock and telescope inner legs into outer legs. *Repeat on remaining legs.*

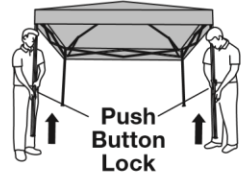


- 2 Press the push button to release corner sliders to unlock frame from truss. *Repeat on remaining legs.*

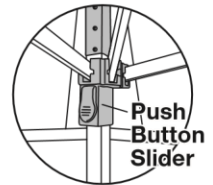


- 3 With partner, grasp top and bottom area of trusses. Lift the Kanopy up slightly and shake while stepping towards your partner until 3/4 closed. *Be careful not to pinch fingers!*

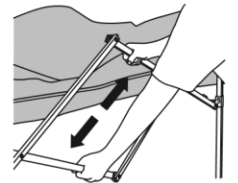

- 4 With partner on opposite side of frame, Grasp outer legs, lift off the ground, and push frame carefully together to fully close it.

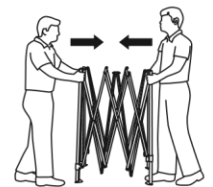

- 5 Fold and roll up Kanopy with cap and store in roll away bag.

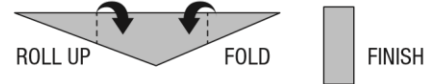

IMPORTANT

- This product is designed as a temporary sun Kanopy. Do not leave up for extended periods. **FOR OUTDOOR USE ONLY.**
- Make sure center opening is over fire and has no obstructions.
- Remove all flammable materials from underneath Kanopy.
- Do not burn wet wood, toxic wood, trash, yard waste, etc.
- Do not use gas, lighter fluid or accelerant to light or relight fire.
- Do not leave fire unattended at any time and have a working fire extinguisher available.
- Always stake or weigh down your Kanopy. Do not use in any potentially windy or rainy weather. Wind and rain can damage your Kanopy and may also result in injury to you or others. Therefore, do not rely on Kanopy for protection in heavy or prolonged rain storms.

Kozy Kanopy Inc

W A R N I N G!

**KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS
TENT FABRIC.**

THIS TENT MEETS THE FLAMMABILITY REQUIREMENTS OF
CPAI-84.

THE FABRIC MAY BURN IF LEFT IN CONTINUOUS CONTACT
WITH ANY FLAME

SOURCE. THE APPLICATION OF ANY FOREIGN SUBSTANCE TO
THE TENT FABRIC MAY RENDER THE FLAME-RESISTANT
PROPERTIES INEFFECTIVE.