

VG-40

Disassembly



otometrics


MADSEN · AURICAL · ICS



2mm Allen head screwdriver

Scribe

#1 Phillips head screwdriver

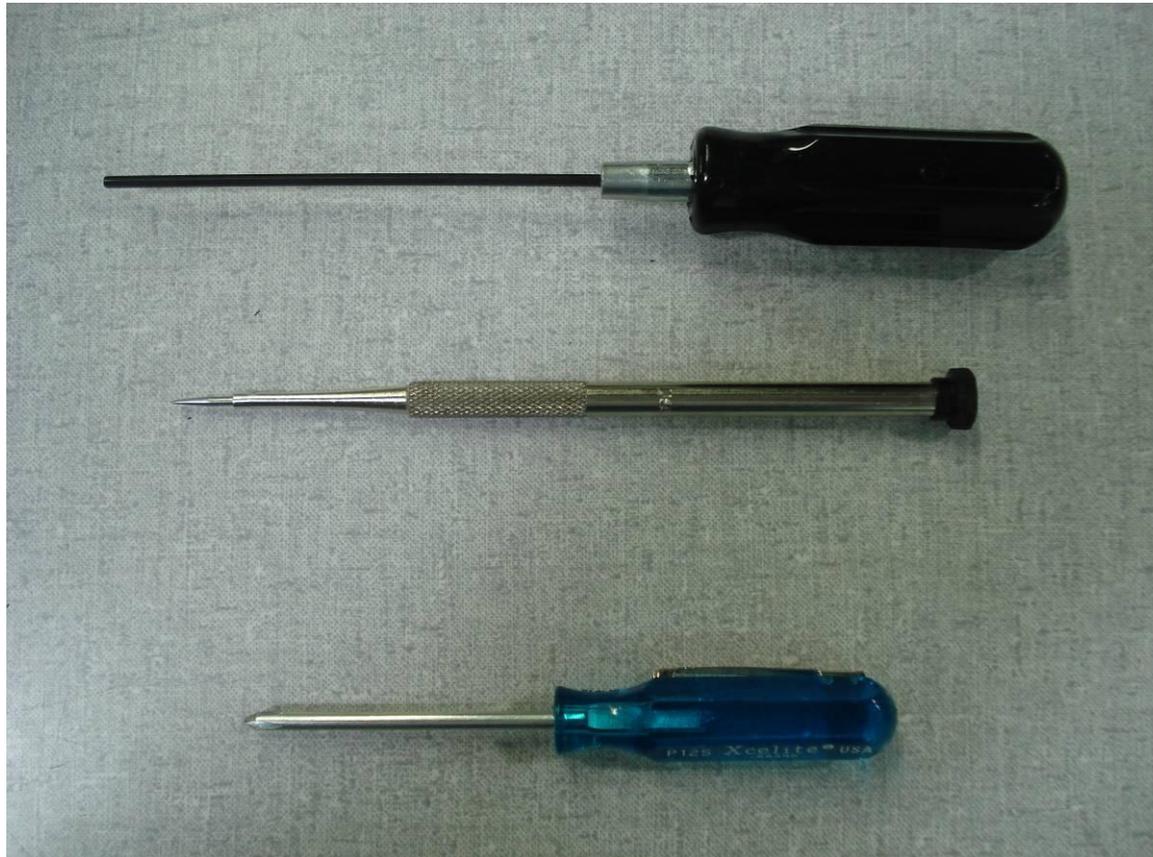

Remove head strap and face cushion



Remove three knob covers



Use 2mm Allen wrench to remove three knobs




Knob removed as assembly



Knob removed in pieces

Rough side of ring should be assembled facing the knob

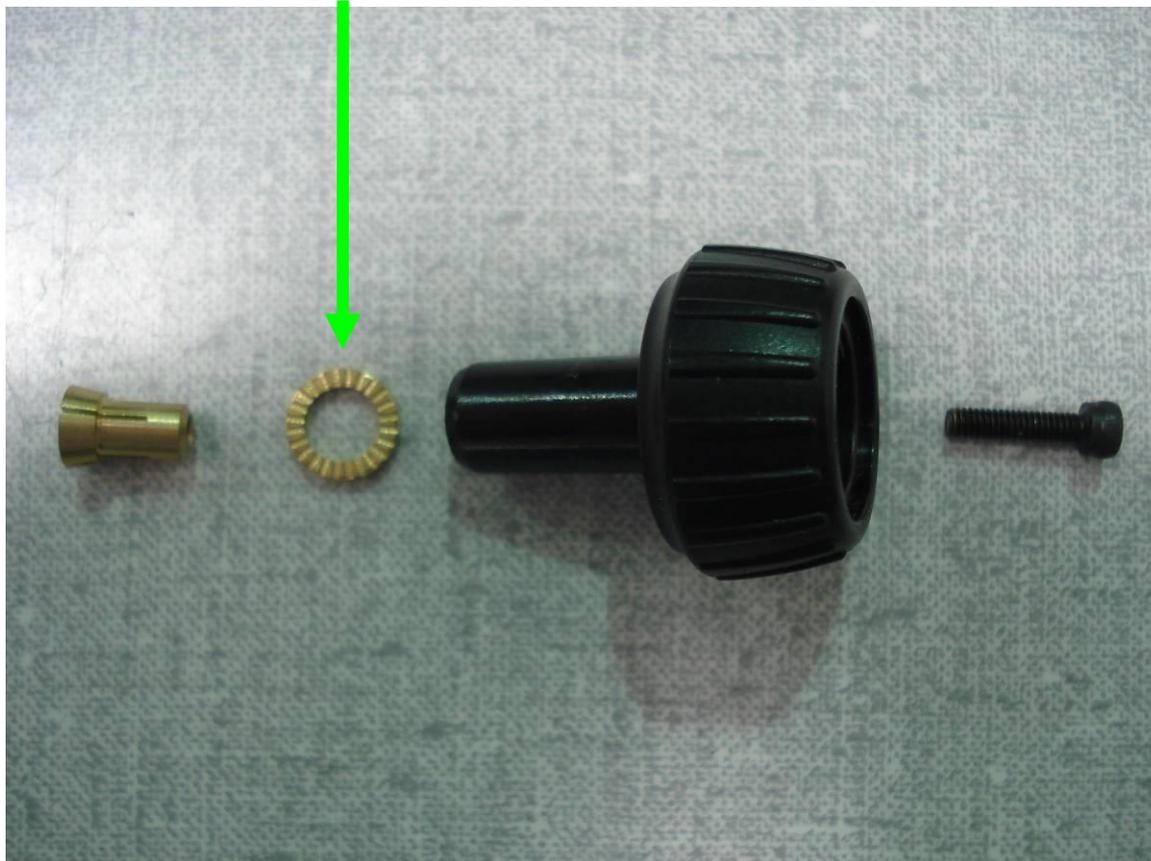

Remove two screws for blue cover



Blue cover removed



Remove two screws for ear pieces



Ear pieces removed




Remove two screws for bottom half of goggle chassis




Bottom half of goggle chassis removed




Remove two side covers from the goggle assembly

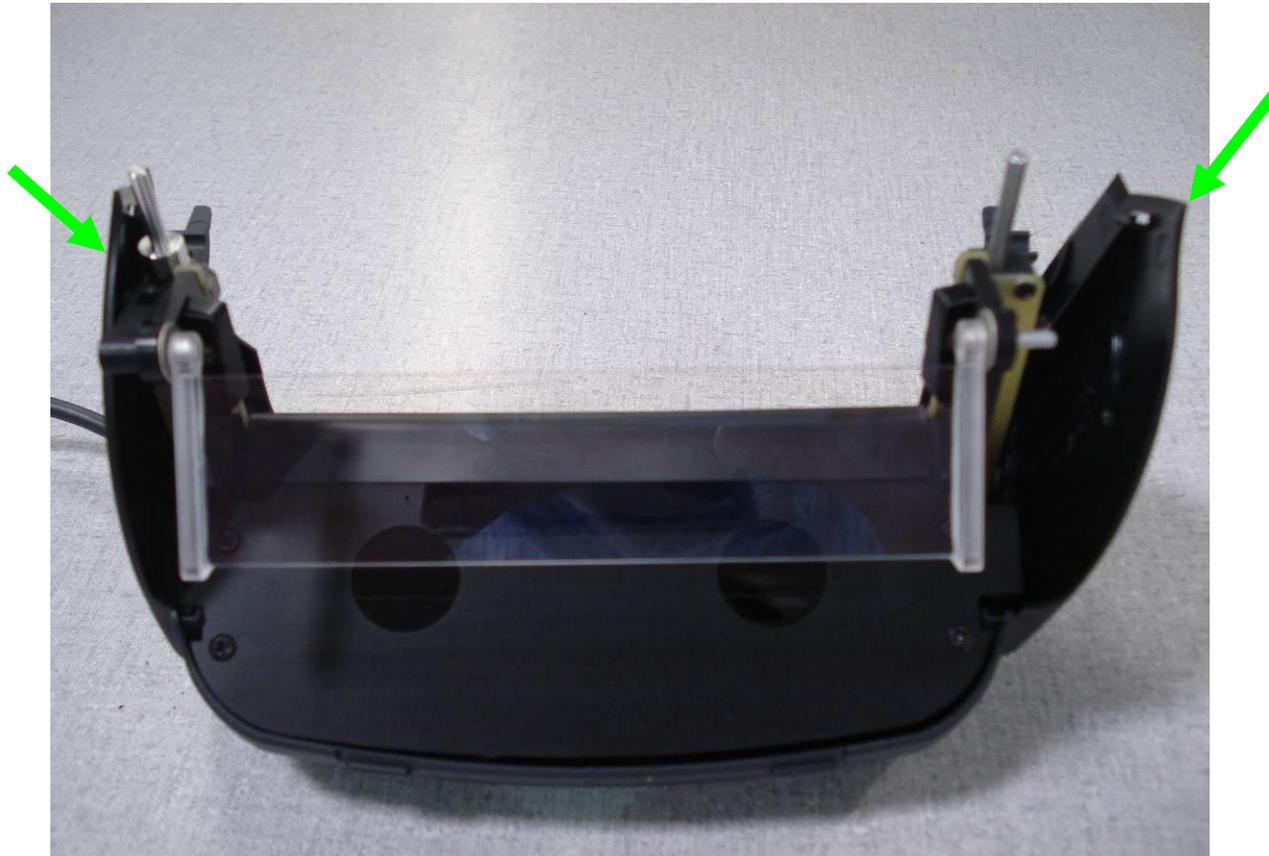


Two removed side covers from the goggle assembly

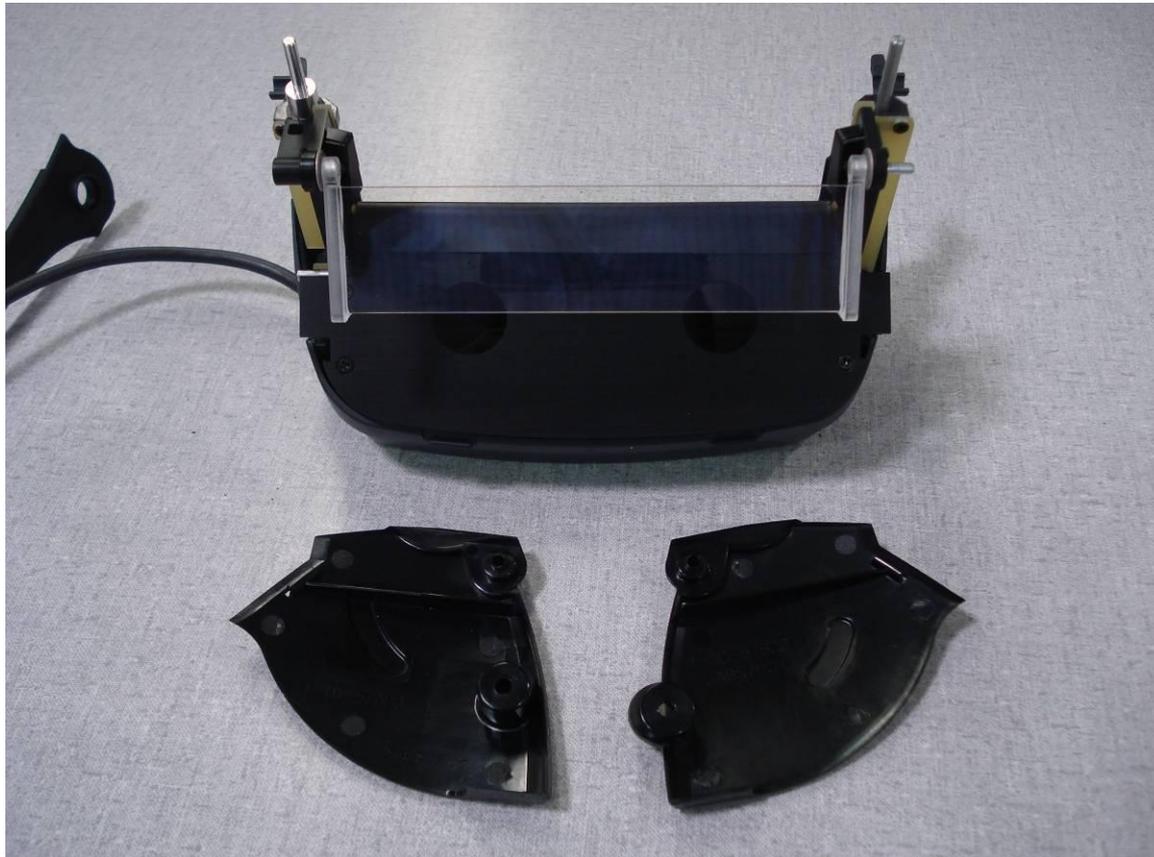

Remove top half of goggle chassis

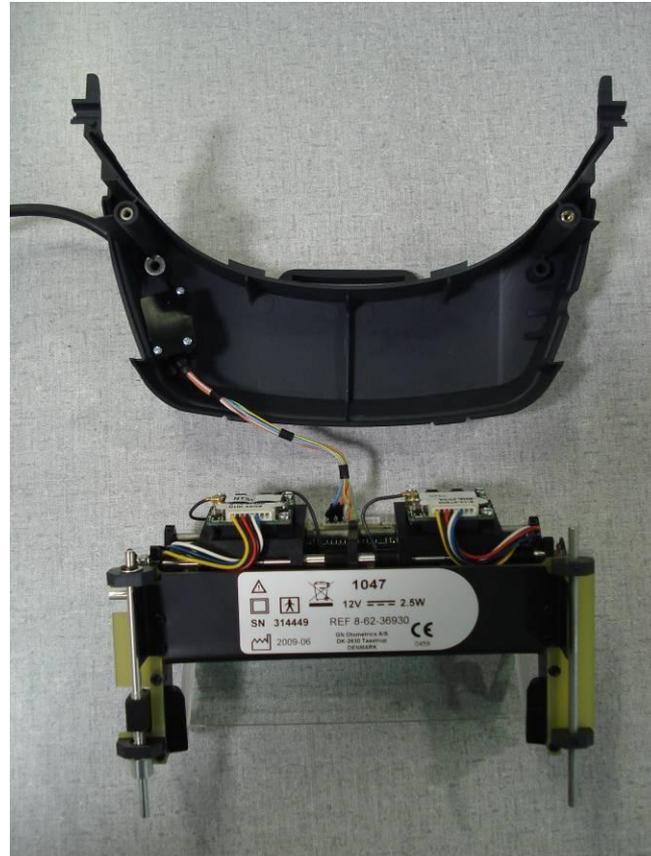

Remove cable connection from PCB

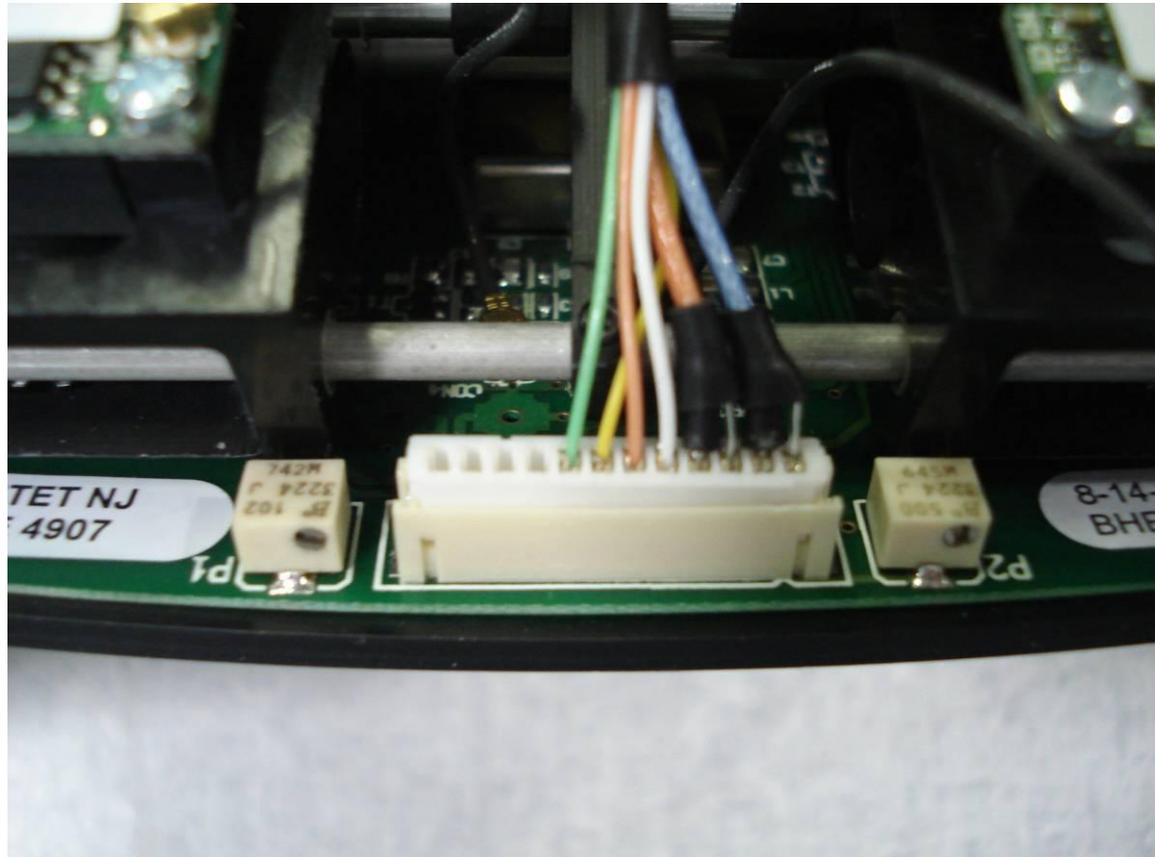

Remove three screws for cable cover from the top half of goggle chassis




Cable cover removed from goggle chassis




Remove cable assembly from goggle chassis



Correct assembly of side covers

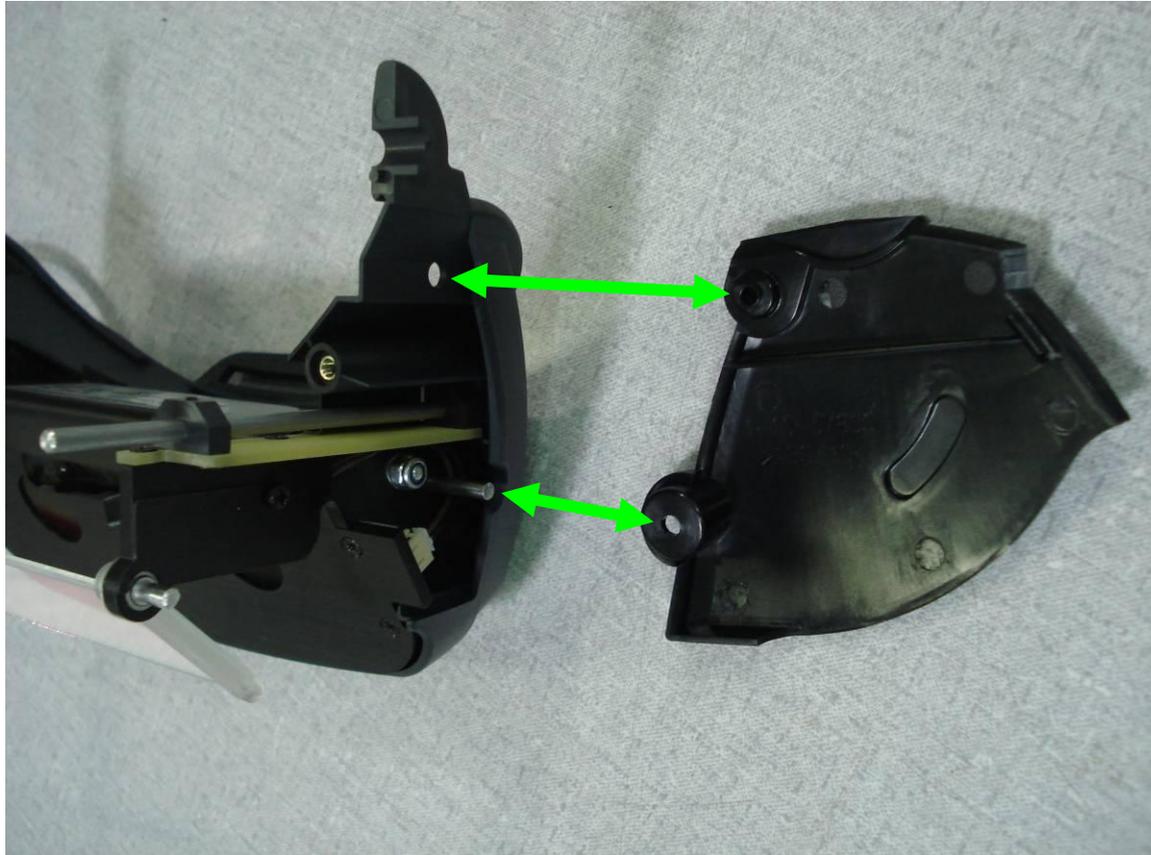

Side cover must be fully inserted into chassis

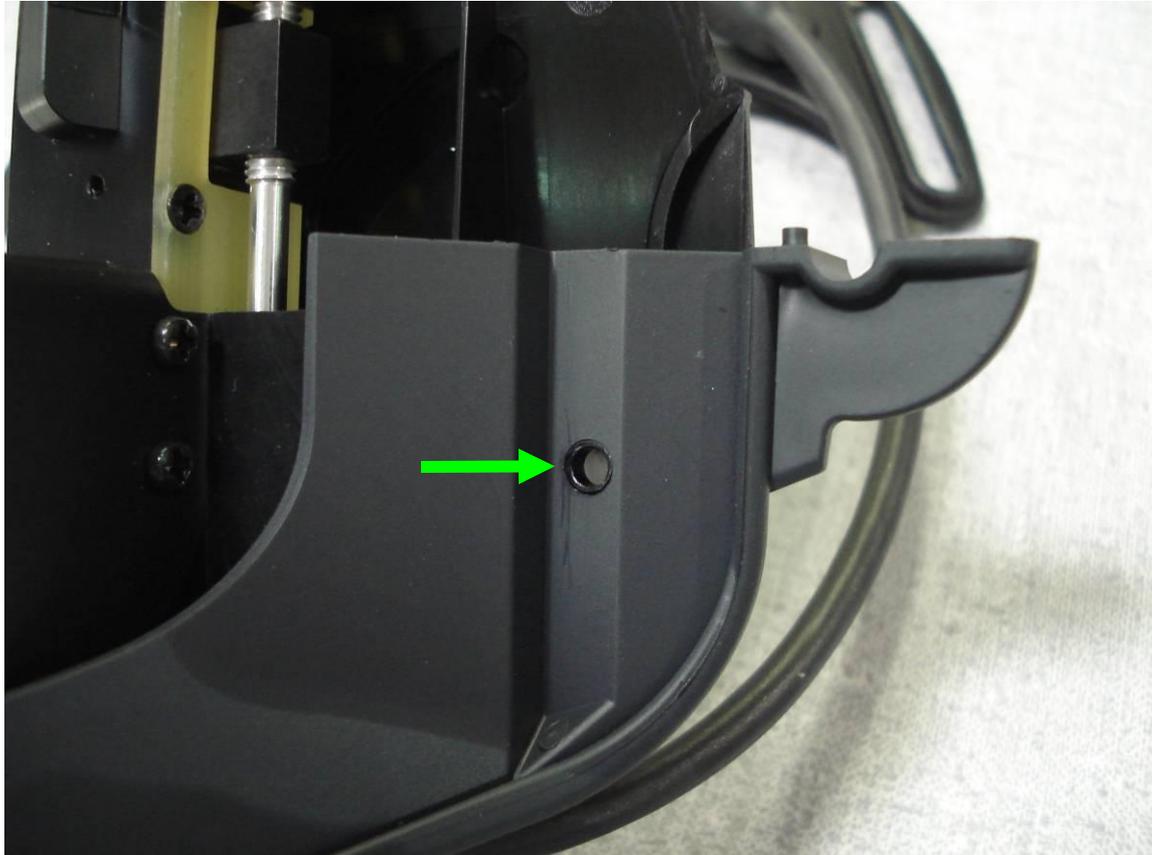

Blue cover must fully close



