

How to take **BOTTOM CUSHION** out from main frame?

PRIME 300,400,600 SeriesPage 2,3

PRIME 200 SeriesPage 4,5

TC200, 300, 400, 500, 600 SERIES Page 6

PRIME 300,400,600 series

STEP 1. Extend bottom cushion all the way out.




STEP 2. Put narrow screw driver into hole from left side between cushion and plastic panel, which is located right above "Heating Button" or "Adjust shock absorber lever".



STEP 3. Additional pictures and info for "Step 2"(Open Pictures)

This is how to put your driver into small hole.

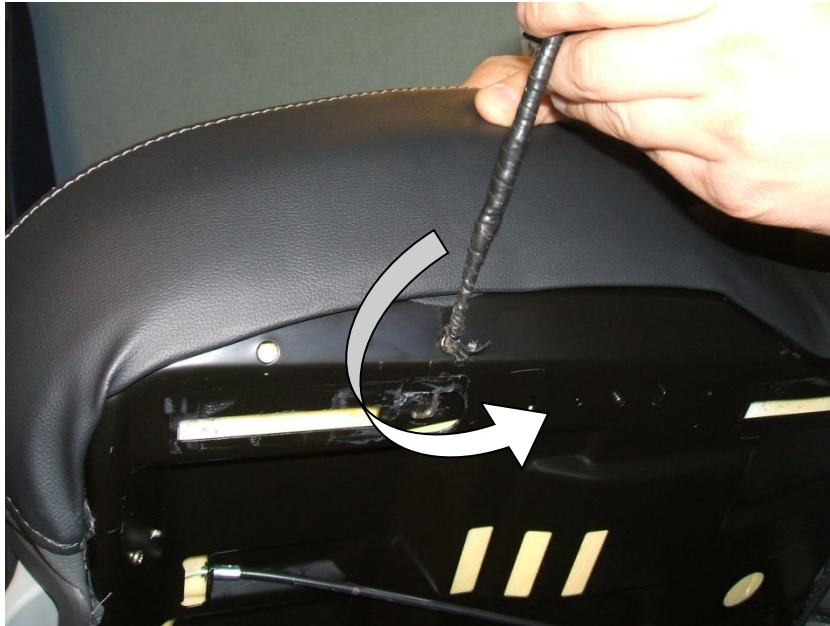

This is how to twist your driver and tilt latch up.



STEP 4. Hold Extend Cushion Lever and Pull out. Once it is un-latched, Your bottom cushion slide out and you can see your bottom cushion just like above pictures.

For PRIME 200 Series

Step 1. Take both side Plastic panel off (Not necessary if you can find it)



Picture1. Right side



Pictue2. Left Side

Step 2. Put Narrow Driver put into both side Latch Hole(Hole with Driver in)



Step 3. Push down your Narrow Driver to Push up Latch inside.



Step 4. Push down both side Driver and hold it, then Pull Bottom Cushion out toward front side.



Tip 1. Below Tool makes your work easy and can be done by yourself. If you use Narrow Driver, you need assistance to hold your Narrow Driver for both side while you pull your cushion out.



For TC 200, 300, 400,500 Series

To Remove Bottom Cushion out from bottom frame, Use narrow screw driver and push into PASSENGER side hole(2nd hole from the front). 1. Extend cushion all the way to the front, then push narrow driver into 2nd hole and tilt. Then, hold cushion extend lever and pull bottom cushion while tilt up your screw driver. It is applied all TC Series Seats.

