

To clean the quartz tube, remove the bulb holder by firstly removing the bulb and undo the two retaining screws then unscrew (turn anti-clockwise) remove the o/ring, on a twin bulb unit both holders must be removed, the quartz can now be removed



Please note 24watt fitted with a blanking cap on one end unscrew anti clockwise to remove the o/ing

Does not apply to 36watt model the quart


Does not apply to 36watt model the quartz is a bowl type, only the bulb holder needs to be removed to extract the tube



To assemble, slide bulb into holder as shown connect the two pin plug and slide the purple cap down the cable so that the three holes in the cap line up with the posts on the bulb holder and secure using the screws



Glue Hose Tails into inlet and outlet fit the coupling and bush as above photo using a pvc or abs glue

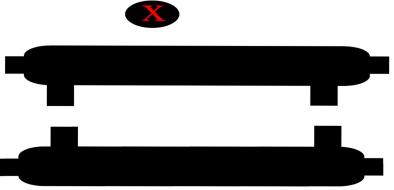



varning install as lower picture to avoid ailure due to water not filling u/v body fitting verticle feed from bottom connection