

Ultra-Jam Stopper
 PPP-SOP-UJS
 Installation instructions
 Rev 01-2016



Contents

- [1] Ultra-Jam Stopper - RH
- [1] Ultra-Jam Stopper - LH

Hardware

- [4] 1/4-20 lock nut
- [4] 1/4-20x3/4" bolt


Note* Ultra-Jam Stoppers come as a set but only one is required per Machine.

Ultra-Jam Stopper


Use Tape Measure to mark holes for drilling through side rail. Approximate estimation of first hole is 7 1/2" from end of orientor pan side rail.

Use included 1/4" Hardware to fasten Ultra Jam Stopper to distributor Side rail (image far right).

Slotted holes will allow for variation of hole placement. This also allows for height adjustment for clearance of pan side.

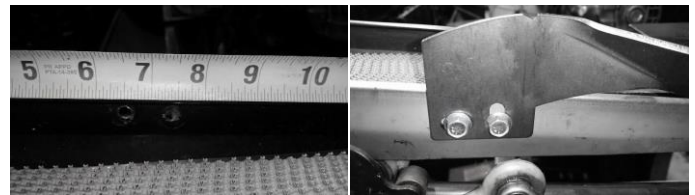

Note* Ultra-Jam Stopper is placed on the Lead side of Distributor. Odd Lane= 7 Pin Side, Even Lane= 10 Pin Side.

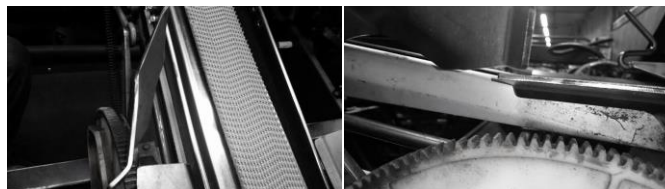

Installation Complete.

