


Remove  
Split Bushing

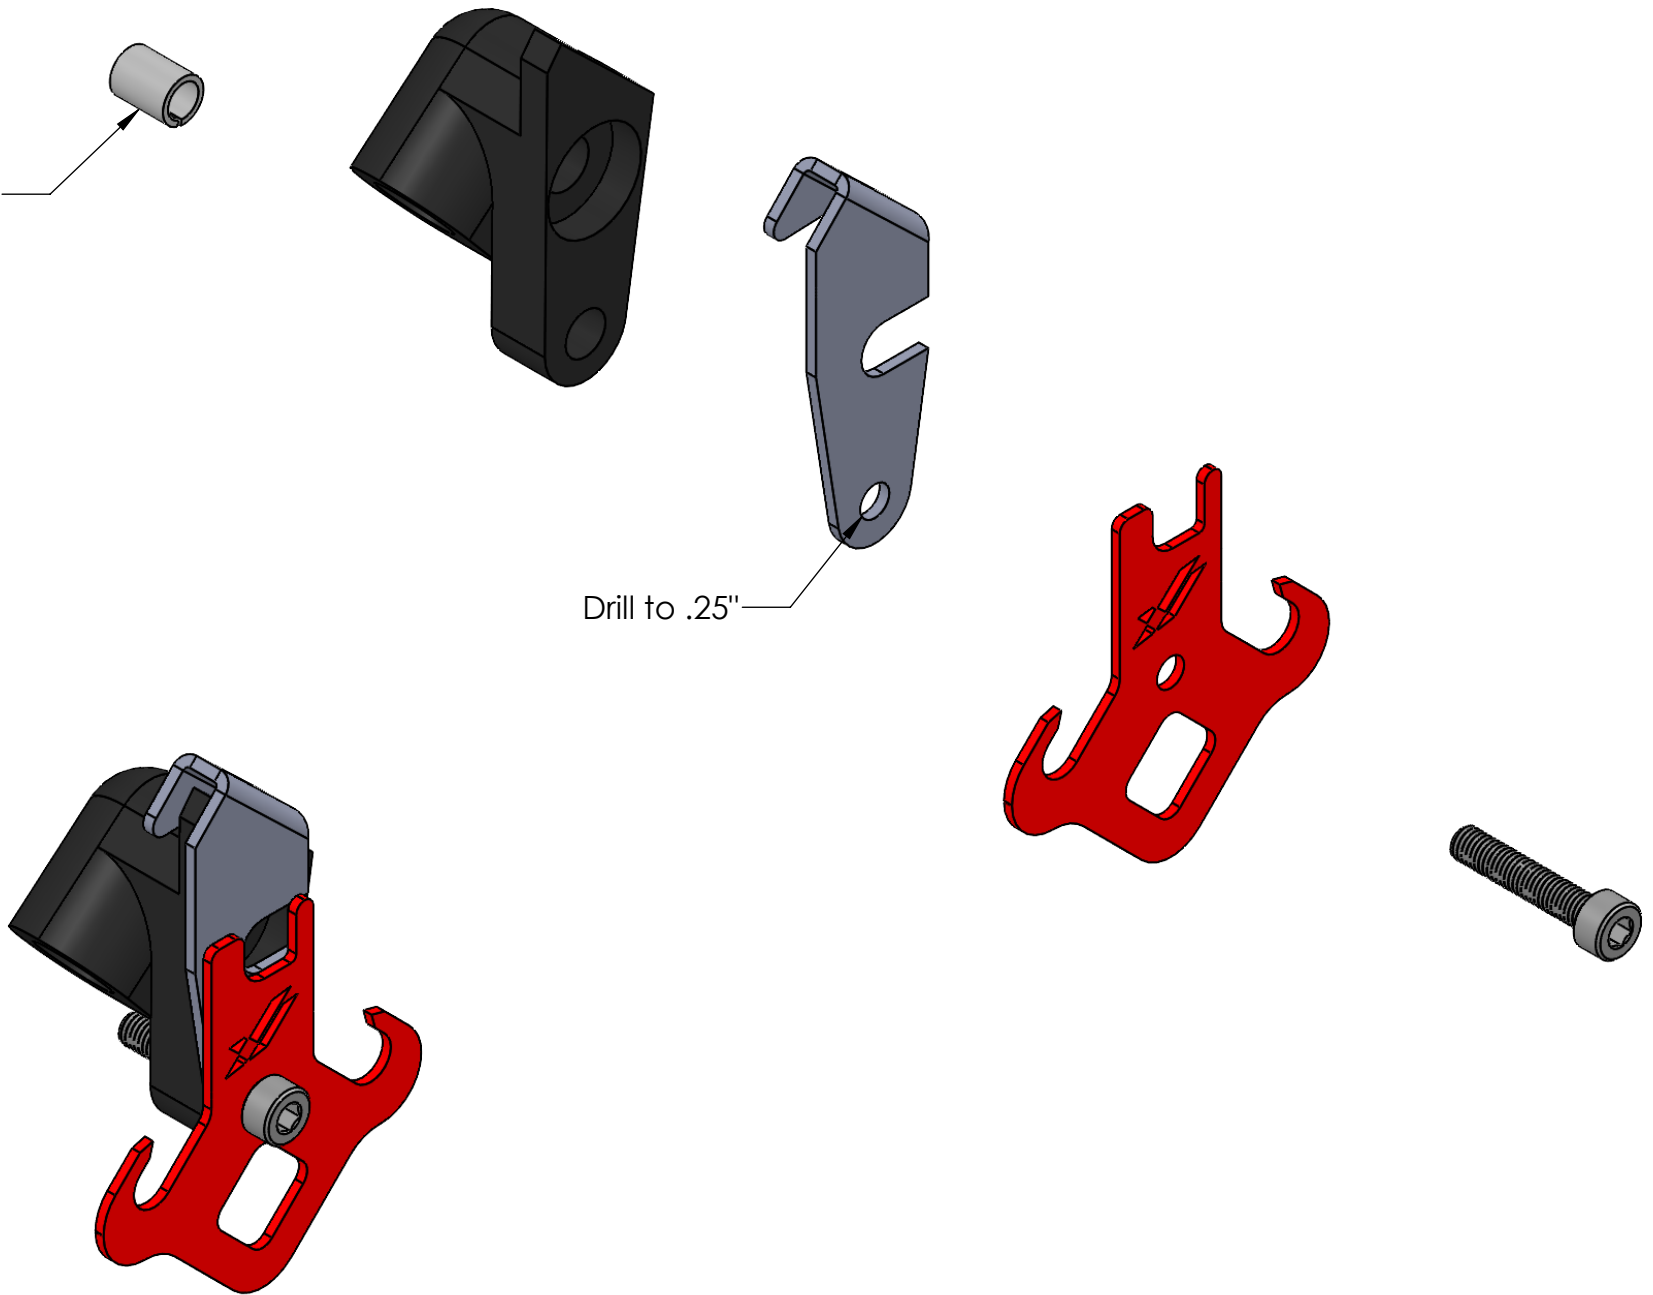

## XIHD1-2.0 (GEN II) *DYNO-BLADE* & INDEXING PLATE INSTALL PROCEDURE