

Default passwords: Attendant 1111 (level 1), Manager 2222 (level 2).

C3 GAMING BOARD PINOUT REQUIREMENTS

72 Pin edge connector			20 Pin edge connector		
Solder side (B)		Part/Component side (A)		Solder side (B)	Part/Component side (A)
	1		1	Ground	Ground
Right Speaker -	2	Right Speaker +	2	Ground	Ground
Left Speaker -	3	Left Speaker +	3	+ 5Volts	+ 5Volts
	4		4	+ 5Volts	+ 5Volts
	5		5	+ 12Volts	+ 12Volts
	6		6	+ 12Volts	+ 12Volts
Logic Door Switch	7		7		
	8		8		
	9		9	Ground	Ground
Play Button	10		10	Ground	Ground
	11		11		
	12		12		
	13	Cash Door Switch	13		
	14		14		
Belly Door Switch	15	Main Door Switch	15		
	16		16		
	17		17		
	18		18		
	19		19		
Admin Switch	20	Attendant Switch	20		
Collect Button	21		21		
	22		22		
	23	Meter OUT / Pulse Printer	23		
	24		24		
	25		25		
	26		26		
	27		27		
	28	Meter IN	28		
	29		29		
Collect Button Light	30		30		
Play Button Light	31		31		
	32		32		
	33		33		
	34		34		
	35		35		
	36		36		

COM 1 - Serial Touch For Retro Fit Cabinets

COM 2 - Printer

COM 3 -

COM 4 - Bill Acceptor

COM 5 - Main SAS

COM 6 - Secondary SAS

USB - Printer, Touch, SAS Dongle

Display 1 - Main Screen

Display 2 - Secondary Screen (Dual screen only)

NOTE: All -12Volts wires must be removed to ensure no contact with C3 boards.

C3 Gaming Inc. and its representatives are not responsible for incorrect harness wiring/pinning of customer supplied cabinets or board only sales. Incorrect wiring/pinning voids all warranty's.