

## Yamaha Speaker System Model 600S Usage Instructions

### Initial Startup

1. Plug each end of Cord #1 into inputs labeled #1. Both inputs for this cord on Speaker #1.
2. Plug each end of Cord #2 into inputs labeled #2. One end on Speaker #1, the other on Speaker #2.
3. Finally, find the cord labeled 'Yamaha Power Cord'. Plug one end into Speaker #1, and the other into a power outlet.
4. Ensure all volume buttons (on far left side of mixer board) are turned all the way down. Turn system on using the power button on Speaker #1.

### Connecting audio Via Bluetooth (can be used in conjunction with mics)

1. On Speaker #1, next to the power cord input, locate the button with a white bluetooth symbol.
2. Hold button down until white indicator light begins flashing quickly.
3. Go to the Bluetooth connection menu on the device you wish to connect and click on the speaker. The speaker will appear under the name "STAGEPAS 600BT".
4. If sound is not coming out, check volume on the device, master volume, and volume labeled BT.

### Connecting audio Via Auxiliary Input (can be used in conjunction with microphones)

1. Locate Cord #3 (includes 3A and 3B). Plug the red and white ends into the corresponding inputs (labeled #3).
2. Plug the other end of Cord #3 into the device you wish to connect. Most phones will require an adaptor to connect using this method (labeled USB-C adaptor).
3. If sound is not coming out, check volume on the device, master volume, and volume labeled #3.

### For Microphone Usage - *Microphones are an additional fee:*

1. **IMPORTANT:** Ensure all volume knobs (on left side of mixer board) are turned all the way down before plugging in any microphone cords to avoid loud popping or feedback.
2. Plug each end of Cords #4 and #5 into the corresponding labeled inputs on Speaker #1. Ends with a silver metal notch should be input into the microphone receiver (attached to the top of Speaker #1).
3. Plug one end of Cord #6 into the microphone receiver input labeled #6, and the other end into a power outlet.
4. Press and hold the power button on the microphone receiver box for a moment, until screens light up. Mic A channel should be A1, mic B channel should be A2.
5. Turn on microphones by holding the power button for a moment, until the green light turns on.
6. Press small button next to inputs #4 and #5, so that they are in the position labeled "Mic".
7. Slowly turn up the volume knobs for the microphones and the master volume until sound comes out.

#### **For Wired Microphones:**

8. Plug one end of microphone wire into the bottom of the microphone, and the other into the input labeled #7 or #8 (both work the same).
9. Press small button next to inputs #7 and #8, so that they are in the position labeled "Mic".
10. Slowly turn up the volume knobs for the microphones and the master volume until sound comes out.

#### **Included Components**

- 2 rolling speaker cases
- 2 speakers (labeled #1 and #2)
- Power cord (Labeled Yamaha Power Cord)
- Cords labeled #1-#3
- Small white cord labeled USB-C adaptor

#### **For microphone\* use:**

- 2 microphones
- Microphone receiver box (if using wireless mics)
- Microphone cords labeled #4, #5, #6

**\*Microphones are an additional fee**

### Troubleshooting Tips

1. Ensure all cords are plugged into the correct inputs and power is on. Power cord and cord #1 **must** be plugged in for the speakers to emit sound.
2. Ensure master volume **and** correct volume knobs are turned up, otherwise sound will not come out.
3. If using microphones, ensure mic A is on channel A1 and mic B is on channel A2. The microphone receiver box must also say these channels.