

EPIC event rental
Ice Cream Pushcart

Before Using:

- Prior to use, the Ice Cream Pushcart MUST be plugged in for a minimum of 12 hours to charge battery.
- After the Pushcart has been charged, it is ready to be filled with frozen ice cream novelties.
- The Pushcart will keep frozen novelties cold for up to 10–12 hours.

Caution:

- Never block compressor vents or block air circulation.
- Do not touch any thermostat controls or dials.
- If for any reason the freezer is unplugged, allow the freezer to sit for one hour before plugging it back in to prevent short cycling and burn out the compressor.
- Do not operate or allow pushcart to sit outside during storms.



EPIC event rental
Ice Cream Pushcart

Before Using:

- Prior to use, the Ice Cream Pushcart MUST be plugged in for a minimum of 12 hours to charge battery.
- After the Pushcart has been charged, it is ready to be filled with frozen ice cream novelties.
- The Pushcart will keep frozen novelties cold for up to 10–12 hours.

Caution:

- Never block compressor vents or block air circulation.
- Do not touch any thermostat controls or dials.
- If for any reason the freezer is unplugged, allow the freezer to sit for one hour before plugging it back in to prevent short cycling and burn out the compressor.
- Do not operate or allow pushcart to sit outside during storms.

