

EPIC *event rental*

Pretzel Warmer

1. Fill the inside pan with water to provide humidity inside the unit as needed.
2. Turn the heat switch to “ON” position.
3. Turn the heat control to 170 degrees and allow to preheat for approximately 1/2 hour.
4. Load pretzels when preheat is complete.
5. Turn on light switch for light and rotating rack.
6. Once pretzels are heated thoroughly, it is recommended by the manufacturer to keep food temperature at 150 degrees.

Cleaning:

Do not use any abrasive on the stainless steel body. Use a damp cloth to remove dirt and grease spots.

EPIC *event rental*

Pretzel Warmer

1. Fill the inside pan with water to provide humidity inside the unit as needed.
2. Turn the heat switch to “ON” position.
3. Turn the heat control to 170 degrees and allow to preheat for approximately 1/2 hour.
4. Load pretzels when preheat is complete.
5. Turn on light switch for light and rotating rack.
6. Once pretzels are heated thoroughly, it is recommended by the manufacturer to keep food temperature at 150 degrees.

Cleaning:

Do not use any abrasive on the stainless steel body. Use a damp cloth to remove dirt and grease spots.