LED Uplight Instructions

Initial Startup

Cever

- 1. Plug one end of the power cord to the "Power In" socket.
- 2. Plug the other side into a power outlet.
- 3. This should automatically turn on the light.
 - a. If it doesn't turn on, try another outlet, or give us a call.
- 4. Use the "Power Out" slot to connect multiple lights in a row. These cords are not included.

Operating the light

- 1. Once on, you can change the light to a few different settings
 - a. Do this by pressing "mode"
- 2. When you find your desired mode, use the "up and "down" buttons to find the color of your preference. CL04 is white for example.
- 3. "Set Up" is for more advanced options. We don't recommend this for basic usage.

Different Modes

- 1. Static Color Mode (CLXX) Choose 1 of 15 colors to remain static.
- 2. Sound-Active mode (SoXX) The unit will react to sound and change color.
- 3. Auto Mode (A-JF) There are 3 different Auto Modes to choose from (Click Set Up).
- 4. RGB Mode (r.XXX) Choose one of the three colors to remain static or adjust the intensity of each color to make your own color. (Click Set Up to adjust other colors).
- DMX control mode (doff/on & d.XXX) This function will allow you to control each individual fixtures traits with a standard DMX 512 controller such as as the American DJ® Show Designer[™].



