

Disclaimer


This Fire Safety Light is provided as is without any guarantees or warranty. In association with the product, Fire Safety Lite makes no warranties of any kind, either express or implied, including but not limited to warranties of merchantability, fitness for a particular purpose, of title, or of noninfringement of third-party rights. Use of the product by a user is at the user's risk.

No representations or warranties, either express or implied, of merchantability, fitness for a specific purpose, the products to which the information mentions may be used without infringing the intellectual property rights of others, or of any other nature are made with respect to information or the product to which information mentions. In no case shall the information be considered a part of our terms and conditions of sale.




Step 1) Confirm you have the correct size clamp block on the Fire Safety Lite for your application.

A) The light should have arrived fully assembled and ready to install, however confirm the ladder clamping block is in the fully collapsed position. **(Image A)**

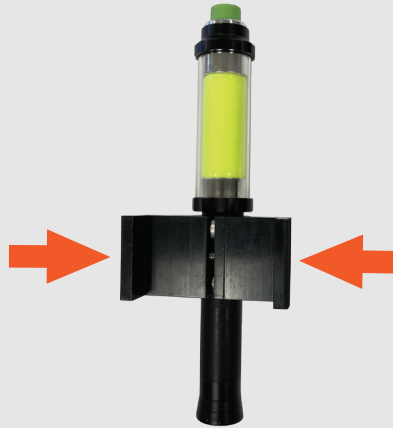

(Image A)

B) Test fit the Fire Safety Lite in the rail of the ladder to confirm fitment. The clamp should fit in the inside channel of the rail with less than 1/16 inch of play. **(Image B)**

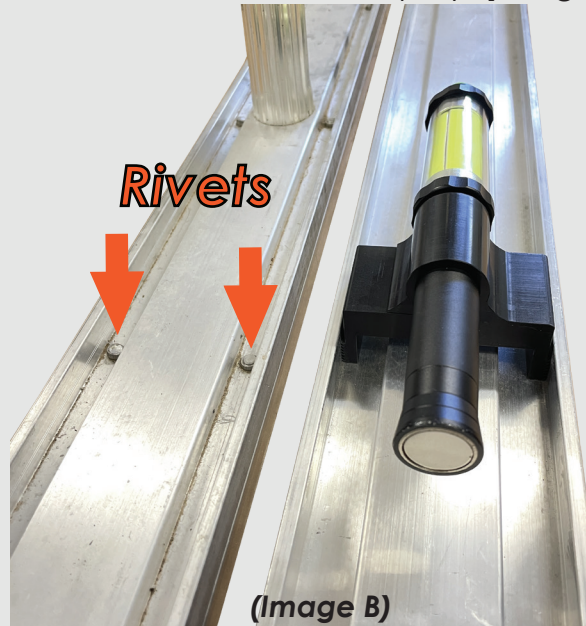


(Image B)

C) During installation make sure the clamp isn't over any rivets and that the clamp is fully bottomed out in the channel. **(Image B)**

Step 2) Choose your desired location to mount the Fire Safety Lite. Good positioning will allow the user easy access to the On/Off button of the Fire Safety


Step 3) Using an **INCH POUND** torque wrench, secure the Fire Safety Lite to the ladder by turning the **OUTER BOLTS COUNTER CLOCKWISE to 30 Inch Lbs.** These can be accessed through the small access holes on the Clamp. Evenly alternate between bolts while tightening. **(Image C)** Warning: Overtightening can cause damage to the ladder. **Do not use a foot pound torque wrench.**

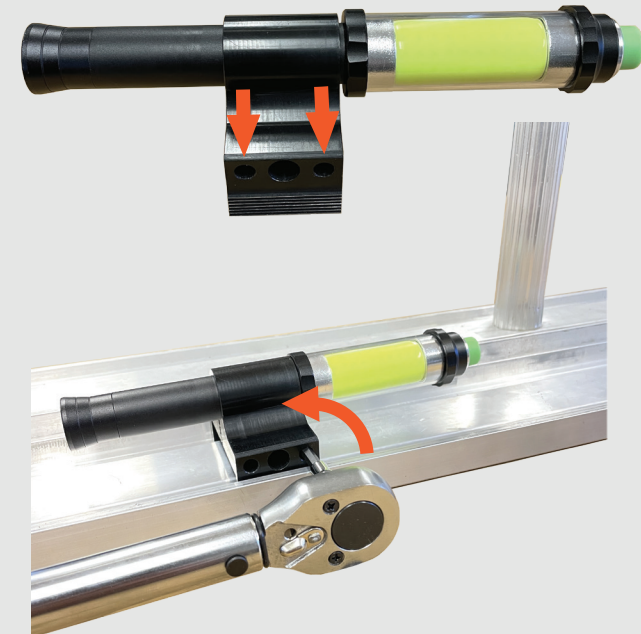

(Image C)

Maintenance) As good measure the batteries should be checked daily and cycle the light through its functions to ensure proper operation. When batteries become low the on/off switch will flash red to indicate that the batteries should be replaced.

Optional) If you prefer to mount the light on the opposite side, simply remove and flip the clamp on the light. Then mount the light in the desired location. **(Image D)**

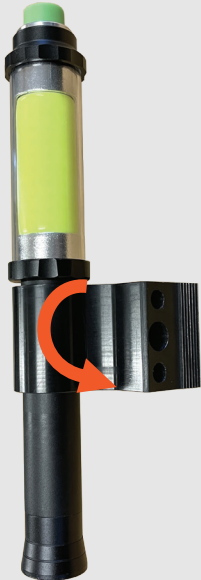

(Image D)

There is a exploded assembly image on the first page to aid assembly or disassembly. Be sure to the guide sleeve is installed on the center clamp bolt during reassembly. **(Image E)**



(Image E)



FIRE SAFETY LITE™
FIRESAFETYLITE.COM

Installation
For Alco-Lite Ladders

Visit FireSafetyLite.com
for Video Instructions