

- Introduction to the -

Electronic Stereo Radio

The Electronic Stereo Radio offers full electronic tuning with a new soft-touch feel.

Be sure to read about some new and unique features on this radio, including:

- The multi-function "AUDIO" button, which controls several features of the radio (refer to pages 27 and 28).
- Remote Radio Controls (volume, seek and memory seek) on the instrument panel — Taurus/Sable only (refer to page 43).

To get the most out of your new system, be sure to read **all** of the following operating instructions.

Also check pages 56-58 for common radio reception conditions.



NOTE: Several of the controls on this radio function the same as those previously described. For operating instructions on the following controls, refer to the page numbers shown.

How to turn the radio on and off — refer to page 4.

How to adjust the volume — refer to page 4.

Selecting the AM or FM frequency band — refer to page 4.

ow to tune radio stations

There are three ways for you to tune in to a particular station. You can manually locate the station by using the "TUNE" button, "SEEK" the station or select the station by using the memory buttons, which you can set to any desired frequency.

Using the "TUNE" function

You can change the frequency up or down one increment at a time by pressing and releasing either the right (+) or left (-) side of the "TUNE" button. To change frequencies quickly, press and hold down either the right or left side of the "TUNE" button.

The "TUNE" control adjusts your radio to any allowable broadcast frequency, whether or not a station is present on that frequency. (See **All About Radio Frequencies** on page 58.)

Using the "SEEK" function — refer to page 23.

Setting the Station Memory Preset buttons — refer to page 24 steps 1-4.

NOTE: If the vehicle's battery is disconnected, the Station Memory Preset buttons will need to be reset.

Using the "AUDIO" button to adjust the tone balance and speaker output (adjusting bass, treble, balance and fade functions) — refer to pages 27-28.

Automatic bass/loudness — refer to page 32.

Remote Radio Controls — refer to page 43.