

Installation

Position the ventilator assembly and install the retaining screws. Tighten the top screw on the door facing last. Install the door glass as outlined under Door Glass—Installation.

Adjustment

Roll the door window all the way up and check for proper sealing against the ventilator frame. Minor adjustments can be made by loosening the ventilator retaining screws and then tightening again. Shims may be placed between the door inner panel and the door window front run channel.

REAR QUARTER WINDOW

Removal

Remove the garnish moulding screws indicated in Fig. 99 and lift out the rear quarter window assembly.

Installation

Using strips of body sealer, carefully seal all around the rear quarter window opening. Place the hinge side of the window in position (Fig. 100), being sure that the pillar post trim pad is between the garnish moulding and the hinges. Set the window assembly in position and align the screw holes in the garnish moulding and the car body with an awl.

Start the screws and tighten just one or two turns. Be sure that the window assembly is true in the opening. Tighten the screws a little at a time until the window assembly effects a tight, uniform seal against the sealer. The rubber gasket must not be brought up as a lip to cover the sealer. Remove all excess sealer, and smooth out the sealer around the opening.

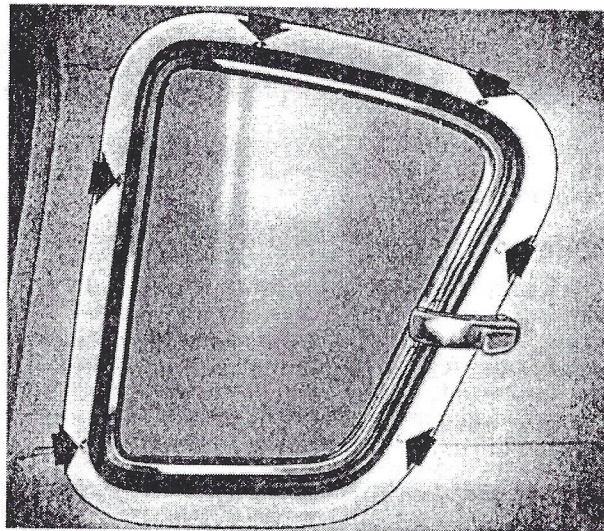


FIG. 99

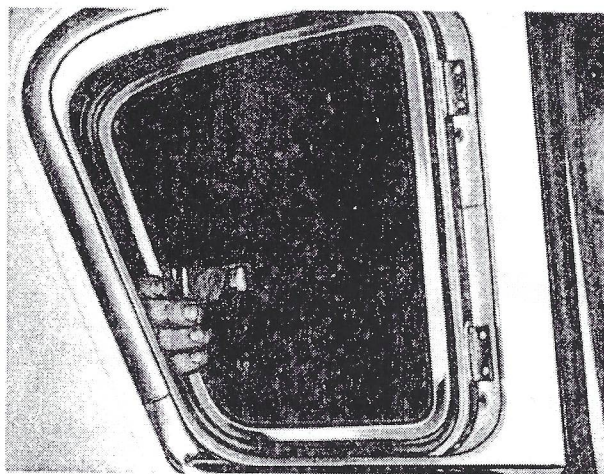


FIG. 100