

DOOR GLASS, VENTILATOR ASSEMBLY, AND WINDOW REGULATOR

DOOR GLASS

Removal

Remove the door inside hardware. Unsnap the clips and remove the trim panel. Roll the window all the way down. Remove the clips and washers and disengage the regulator arm from the lift channel. Remove the window inner and outer weather seal strips. Turn the window so that it is free from the run channels and lift it out of the door as shown in Fig. 96.

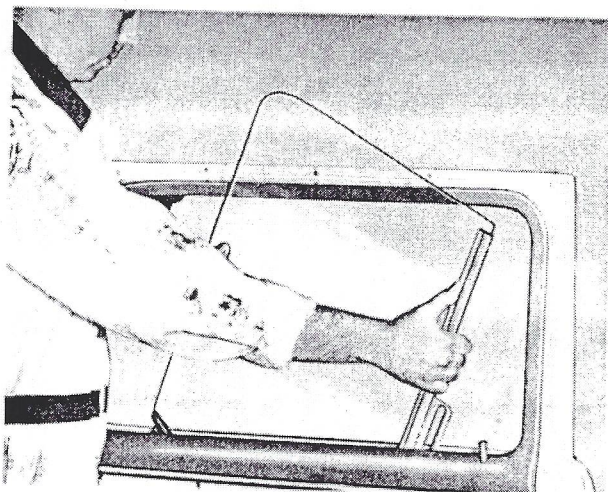


FIG. 96

Installation

Install the window, turning it so that it will enter the run channels. While the window is resting on the bottom of the door, install the inner and outer weather seal strips. Engage the regulator arm studs with the lift channel and install the washers and clips. Install the trim panel. Install the door inside hardware.

DOOR WINDOW REGULATOR

Removal

Remove the glass as outlined under Door Glass—Removal. Remove the four retaining screws and remove the door glass front run channel (see Fig. 97). Remove the four screws and remove the regulator.

Installation

Position the regulator and install the retaining screws. Install the door glass front run channel. Install the glass as outlined under Door Glass—Installation.

Adjustment

Loosen the regulator adjusting nut and align the glass to fit the opening.

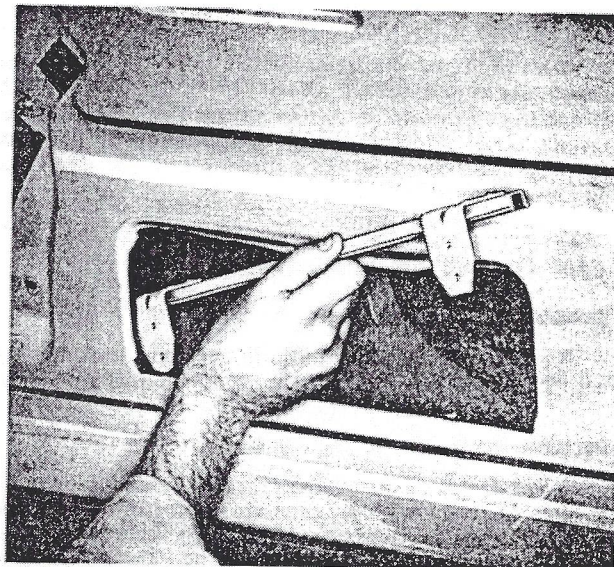


FIG. 97

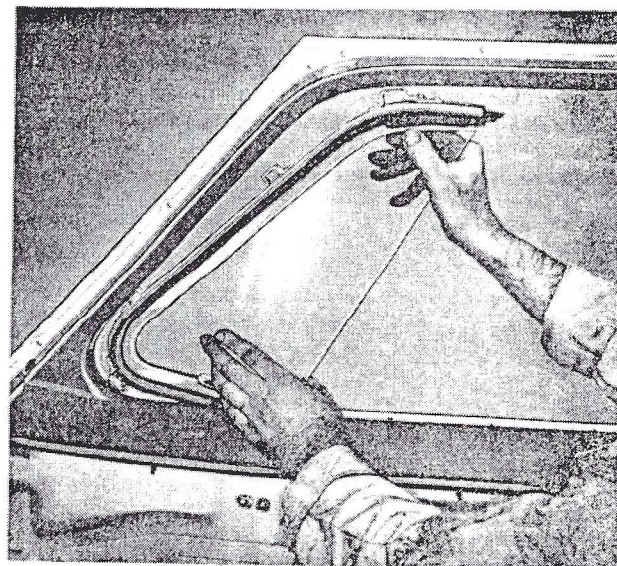


FIG. 98

DOOR VENTILATOR ASSEMBLY

Removal

Remove the door glass as outlined under Door Glass—Removal. Remove the three screws at the door facing. Open the ventilator window and remove the screw at the bottom, down in the rubber weather strip. Tilt the frame back as shown in Fig. 98 and remove the ventilator assembly.