


## Care and Maintenance

Just like furniture, your new wood ceiling and wall panels will gather dust. A build up of dust will affect the appearance of your beautiful wood products making them look dull and dirty. And just like most things, maintenance is required to keep your new wood products looking as beautiful as the day they were installed. A mild dishwashing detergent, a couple of soft microfiber cloths, a soft brush, and a vacuum are the only things

### Washing/Drying

Again, maintenance is required to keep your wood products looking their best. All it takes to deep clean your beautiful wood products is a few teaspoons of mild dishwashing detergent in a gallon of water and a microfiber cloth. Wiping down your Paramount product with the soapy water and immediately wiping dry, will leave a film-free natural shine. Never use harsh cleaners or abrasives as this will

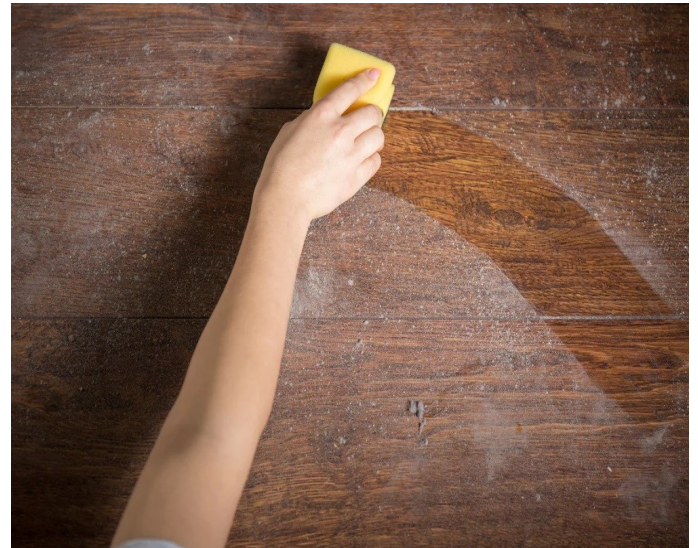

### Dusting/Vacuuming

Dusting is acceptable for periodic cleaning but once every six months it is recommended that the top of your Paramount product be vacuumed to remove the dust build up that will occur. Using a soft brush to loosen up any debris, vacuum up any dust and the loosened debris. This guarantees your Paramount product will maintain its beauty and functionality for the life of your building.