




# USER GUIDE


## CHANGING IP SETTINGS




**Cloud Telematics**

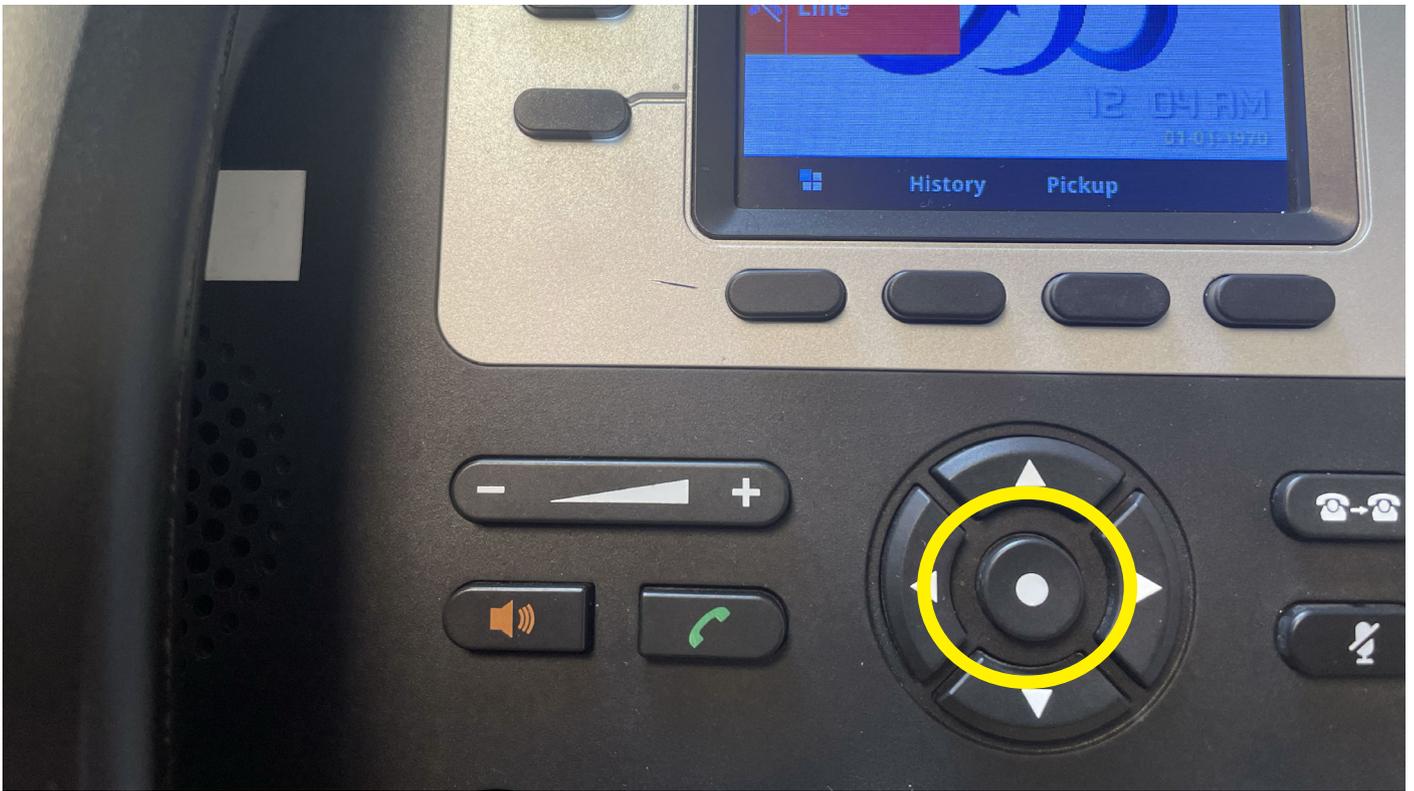


First off click the option button in the centre of the directional arrows

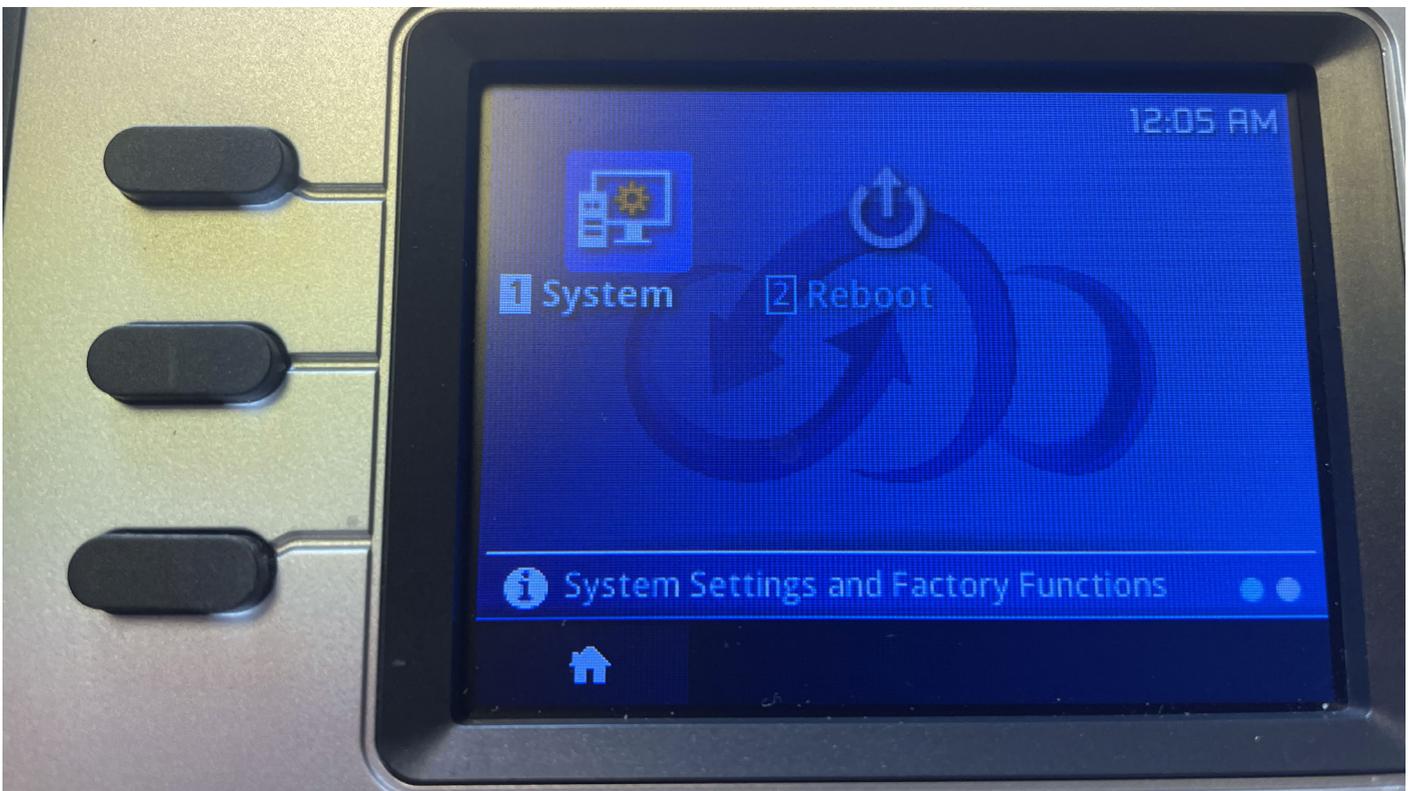


Next use the directional arrows to scroll right and find the System option

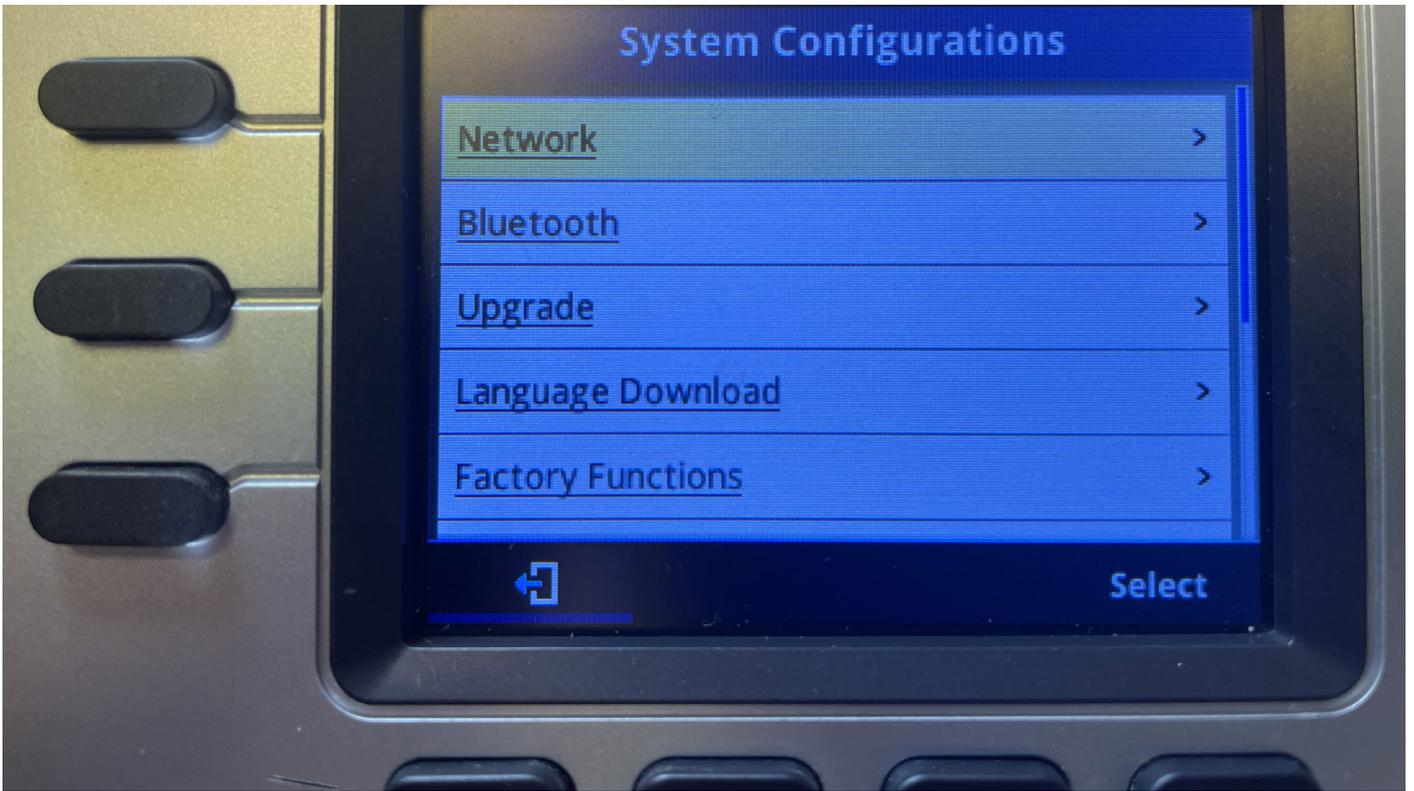


Click on the Network option

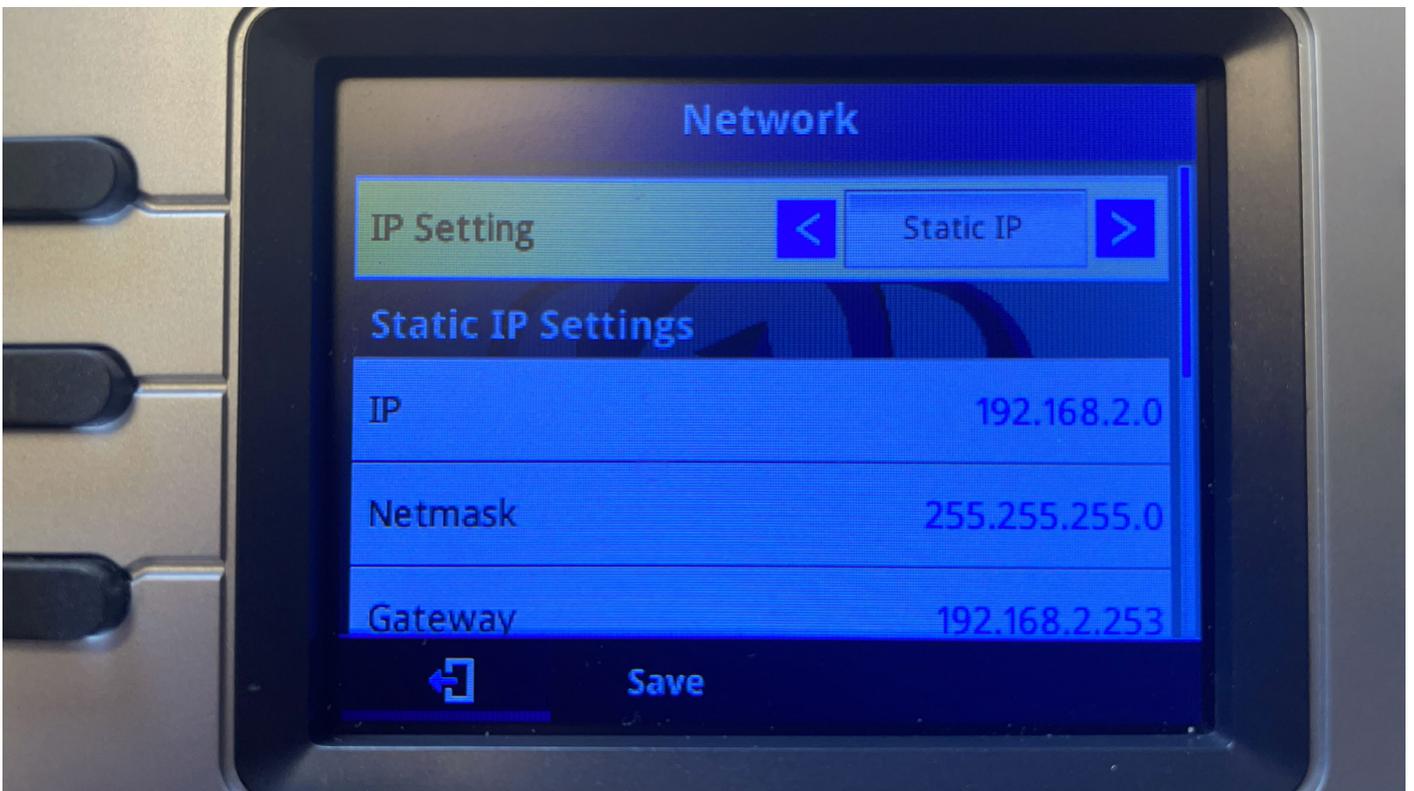

Once on this screen click the right arrow to adjust your IP setting to DHCP

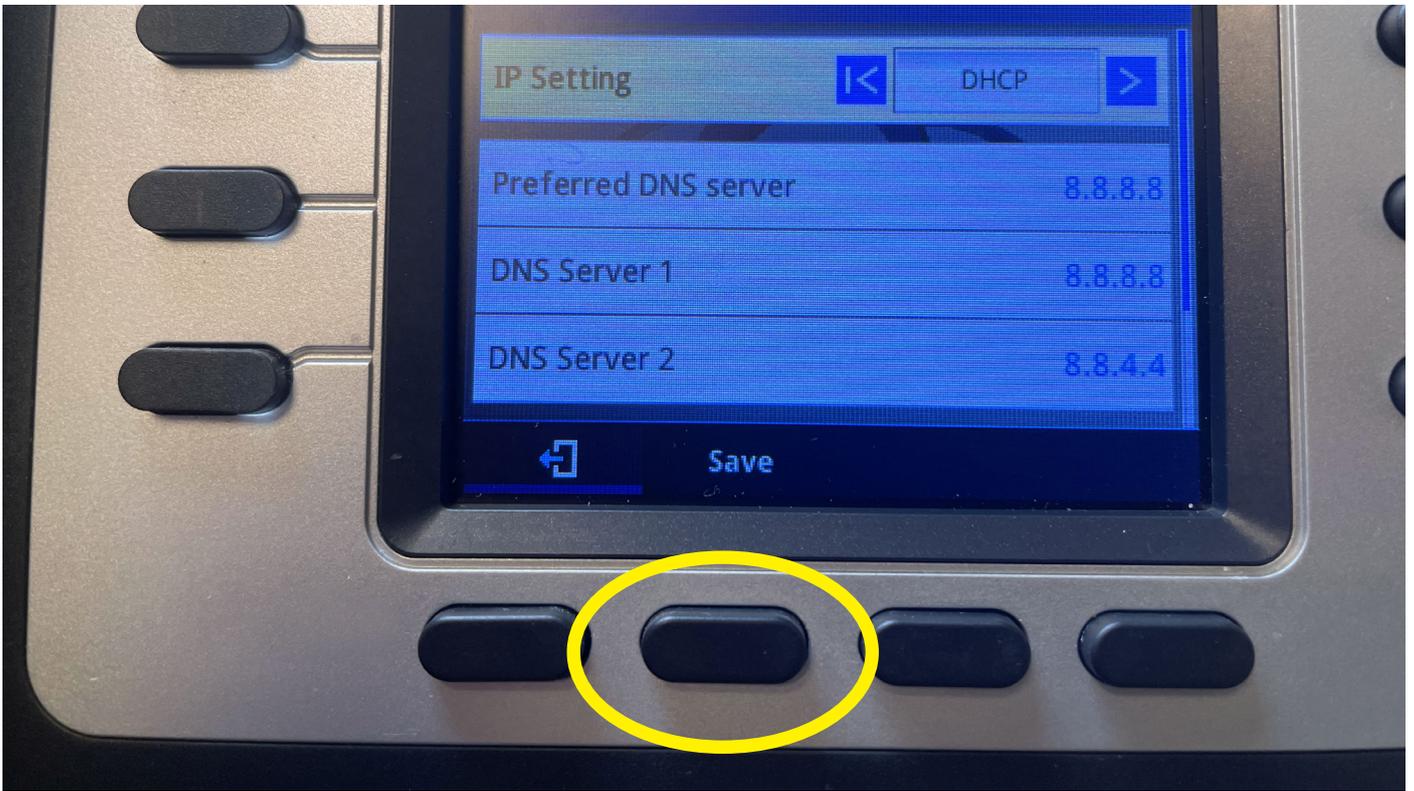

Click on the button shown above to save

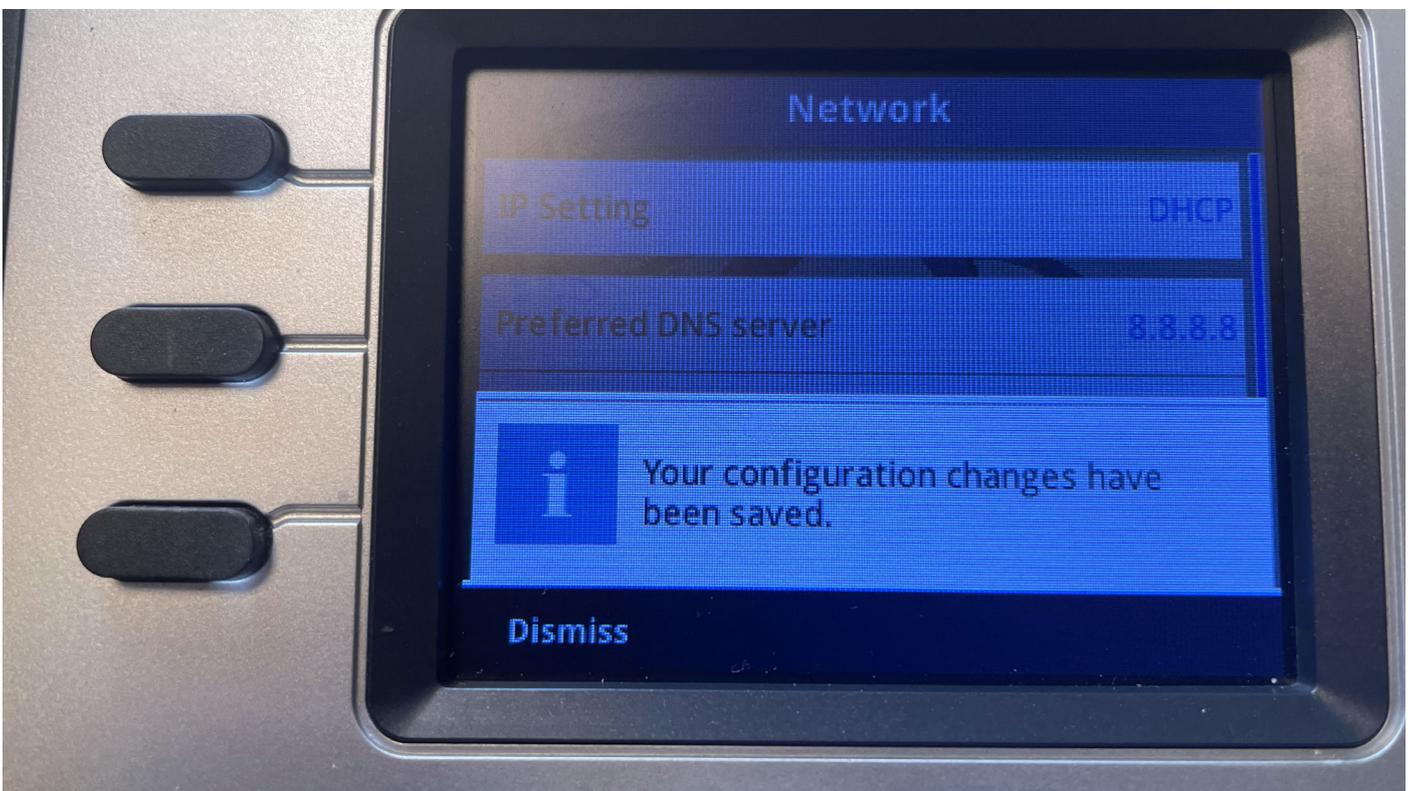

Once saved correctly you will see this message, you have now changed your IP settings!