

THE HAM RADIO SECTION

THE ICOM 730

The WARC bands (10, 18 & 24 MHZ) are unlocked on the ICOM by opening R48 on the RF circuit board. With the rig facing you, the RF board is on the left hand side.

CB freq. and beyond can also be added. Replace x8 & X9 located on the Premix board (located on the bottom in the middle). Replace them with 53.4315 & 53.9315 crystals. The readout will show 27.9 - 29, with the actual freq. 26.9 - 28 mhz. freq. adjustment is L8 & L9.

Crystals are HC18/U, 20pf.

THE ICOM IC-725 MARS MOD

• LESCOMM

- (1) Cut or remove D5 on PLL board for general coverage TX.

THE ICOM IC-735 MARS MOD

- (1) Remove top & PA Heatsink.
- (2) Locate D33,34. (To the left of J22) Clip or remove both. Diodes have YL insulation on them. (Gives general Xmit).

THE ICOM IC-751A GENERAL COVERAGE TX

• RAYS RADIO

- (1) Remove transceiver top cover.
- (2) Locate J2 on the RF board.
- (3) Cut the black wire from J2.
- (4) Replace the cover.