 


### Expansion Range

3.400 - 4.099 MHz  
6.900 - 7.599 MHz  
9.000 - 10.599 MHz  
13.900 - 14.599 MHz  
17.900 - 18.599 MHz  
20.900 - 21.599 MHz  
24.400 - 25.099 MHz  
27.900 - 28.599 MHz  
29.400 - 30.099 MHz

### Expanded RF Modification

1. Remove power and antenna.
2. Remove screws open case.
3. Locate RF board.
4. **Cut green wire** (labeled 'D').
5. **Cut resistor R-48.**  
TX on 10, 18 & 24 MHz
6. Reset the microprocessor. (See owners manual)
7. Reassemble the radio



## Radio/Tech Modifications Volume A

**Photocopies are a violation of copyright law.** © artsci inc. all rights reserved.  
Have the original book with you when you call with a question. **Use at your own Risk!**  
The Author and all other parties take no responsibility for any damages or violations  
caused by these modifications. Some modifications may violate FCC rules.  
(818) 843-4080 12-4 PST • [www.artscipub.com](http://www.artscipub.com) • [artsci@artscipub.com](mailto:artsci@artscipub.com)

© artsci