

Century Mobile Platform Stage



Outdoor staging can be provided quickly and easily throughout your community. Built from all-weather outdoor materials, Century's mobile platform stage can be set up by one person in only minutes.

A self contained hydraulic actuation system does all of the real work.

Platform Setup – 10 minutes

1

Position the stage and disconnect the tow vehicle.

Remove the cross bar on left / right ends of the stage wings.

Level the stage using the main-frame leveling/support jacks.



2

To Lower the first deck wing by using the push-button remote control pendant to release hydraulic cylinder.

Wing is lowered by gravity power; and a manual push inside the center of stage wing may be needed to start movement the same time pushing remote control. **Red** Master safety button must be pressed at the same time with wing down button.

(Optional Two-Way powered hydraulic upgrade is available Item # 90503).



**** When closing stage with remote; wings are hydraulic powered in the up position.

Note that as the stage deck lowers, the deck support truss automatically extends and remains perpendicular to the ground.

The deck support truss significantly simplifies and speeds the leveling process.



3

The deck truss holds the stage deck flat, and features fast, easy two-point leveling.

For some events you may want to use this stage configuration - a 15ft deep stage with an 8ft high backdrop from which you can hang banners. Just remove the guardrails.



(Available only on Models 24', 28', 32', 40')

4

For the full 24ft stage depth, lower the second stage deck wing. The rear and end guardrails move with the stage deck.

Once lowered, level the deck using the two truss mounted adjustable leveling/support legs.



5

The stairs clamp onto the stage perimeter. Note that they will attach onto any of the four sides allowing a variety of configurations depending upon your event.

