

## CARD Reader/Encoder

# E3

User Manual

## CARD Reader/Encoder E3

Model :	E3
Dimensions :	70mm x 70mm x 26mm
Power interface :	Type-C USB
Power input :	5V/500mA
Radio frequency:	13.56Mhz
Support card type:	MiFare S50

### Light/sound status



Light:


- Green light indicates: Card Encoder Mode
- Blue light indicates: Card Reader Mode

Sound:


- 🔊 One short Beep indicates successful operation

## Steps:

- 1 Connect the USB cable with PC

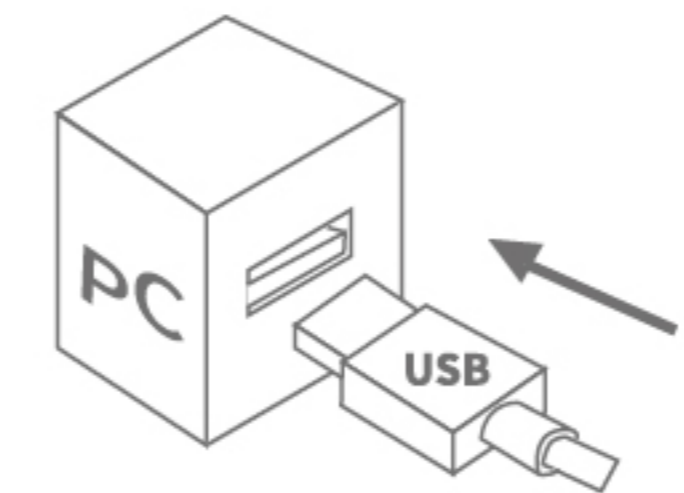

- 2 Plug the USB into the card encoder

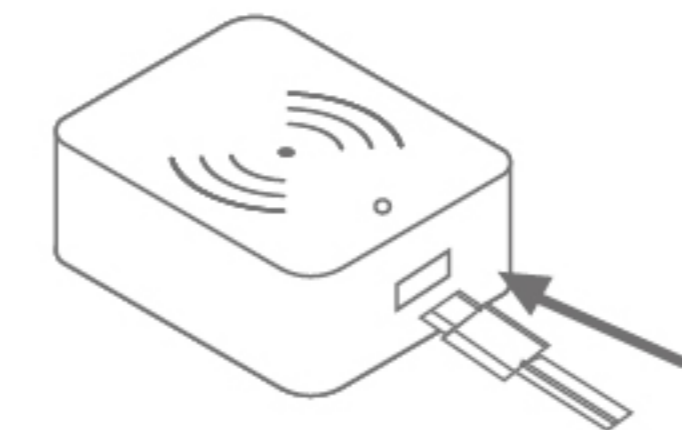

- 3 Follow the instructions of the software to use the Encoder

## Limited Warranty

1. For any defect in material and/or workmanship, the original purchaser of the product can:
  - 1) Return or ask for a replacement within 7 days from the date of the Invoice.
  - 2) Ask for a replacement within 15 days from the date of the Invoice.
  - 3) Can ask for a free repair in 365 days from the date of the Invoice.
2. This warranty does not cover defects caused by modification, alteration, misuse or physical abuse of the product.

### Disclaimer

We continuously optimize products as new technologies and features are developed. For this reason, we reserve the right to make alterations to the products without prior notice.