


Clamp Thermal Expansion

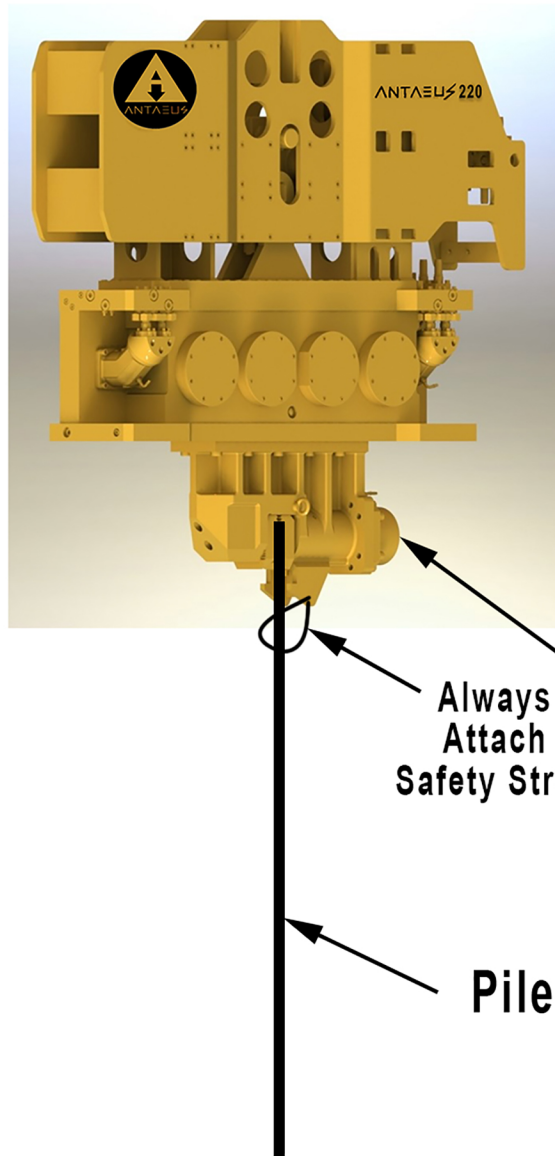

WARNING:

The hydraulic clamp on all vibratory pile driver/extractors will expand due to heat. This can cause the clamp pressure trapped in the cylinder to expand which increases clamp pressure.

Excessive heat can expand and break the entire clamp casting.

Do not run the vibro on the pile for more than an hour without stopping and re-opening and closing the clamp.

Always
Attach
Safety Strap

Clamp cylinder

Pile

