




Shining Piper

Plug Removal Instructions

The Shining Piper is a great flute for beginner flutist or children, but it can be expanded to play the entire chromatic scale. Plugs have been inserted into the key holes to prevent a child from playing out of key.

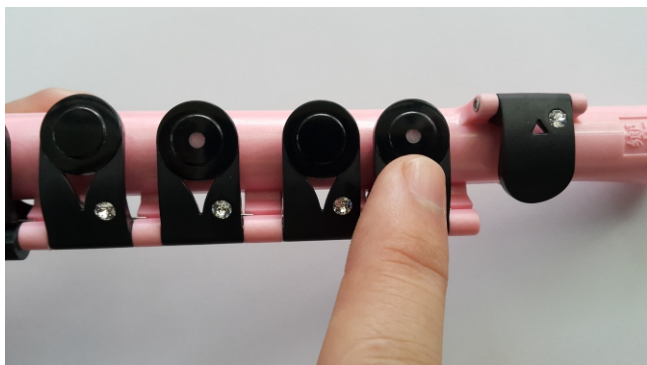

By removing the plug inserts in the key holes you may add D# and F# to the flute's limited scale simply by sliding your finger off of the key hole while pressing down on the key. Please refer to the fingering chart for more details.

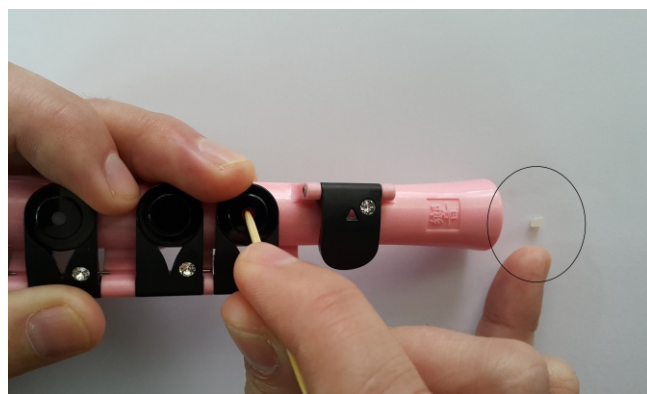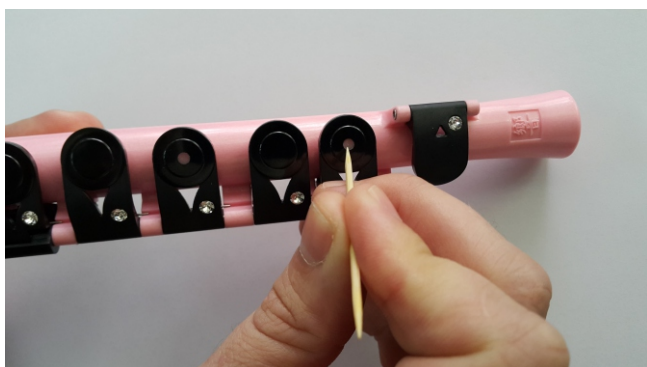


Use a small object, such as a tooth pick, and press onto the insert. The insert will fall into the flute and come out of the end.




You may easily reinstall the plug by pushing it back into the key hole.

Exploded view diagram of the Shining Piper instrument. The diagram shows the main body of the instrument on the right and a separate component on the left. The main body has a 'Shining Piper' logo and a '7' label. The separate component has a 'TH' label. Red dots indicate assembly points. Numbers 1 through 7 are used to identify specific parts.

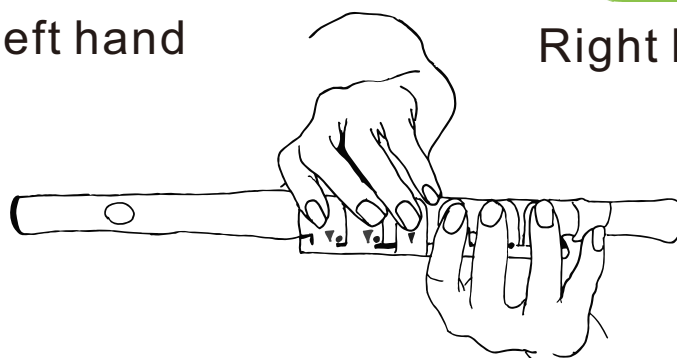

11

|||

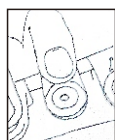[illegible]

 
☐ Open

Fully extend your fingers.



 1/2 Open

Put your fingers on the side of the key cover
(keep the central sound hole OPEN)

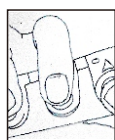

 Closed

Press down your fingers
(seal central sound hole)

GUO MUSICAL INSTRUMENT CO.

WWW.GUOFLUTE.COM

