


HOW TO ENABLE ISO-STEER AT CNH TRACTORS VIA HH MENU

Be ware that these steps are carried out at your own risk.



There is no liability for any damage that may arise.

1. Enable HH Menu

Connect **Bridged Connector (380000843)** to diagnostic socket **1**.

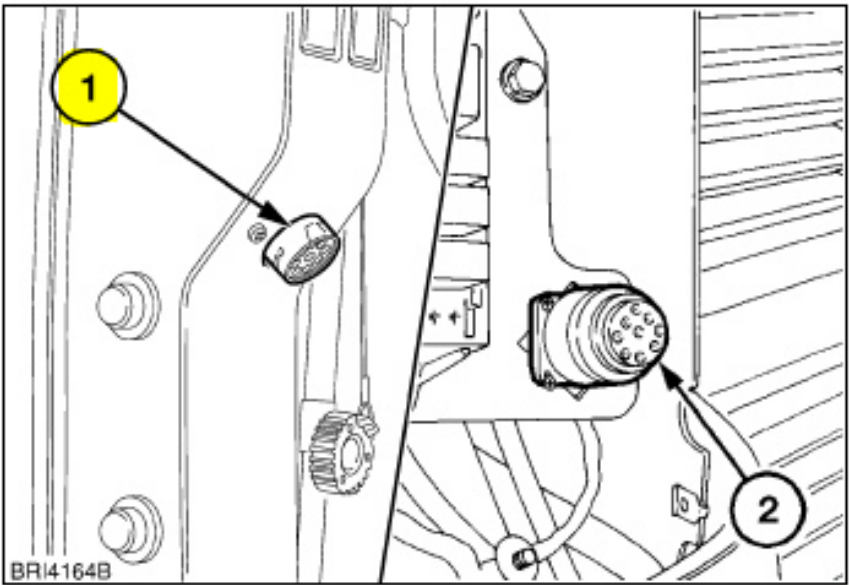

Alternatively, bridge Pin B and G of diagnostic socket **1**.

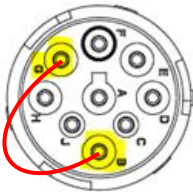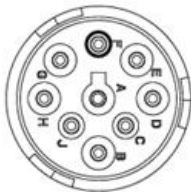		
Type 1 (Black)	Pin	Type 2 (Green)
Ground	A	Ground
Battery	B	Battery
J1939 + 250kb	C	J1939 + 500kb
J1939 - 250kb	D	J1939 - 500kb
J1939 Shield	E	J1939 Shield
J1708+	F	J1708+ / J1939 + 250kb
J1708-	G	J1708- / J1939 - 250kb
OEM Specific	H	OEM Specific
OEM Specific	J	OEM Specific

Here an example to bridge Pin B and G without bridge connector:






2. Access HH Menu

Turn on the ignition. The HH menu will show up in the dashboard:




Use following keys to navigate into the HH menu depending on your machine:

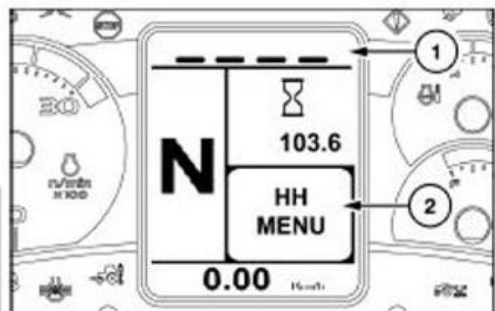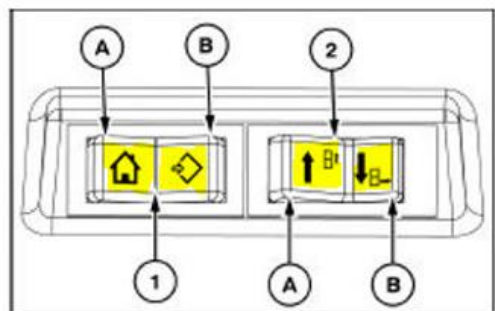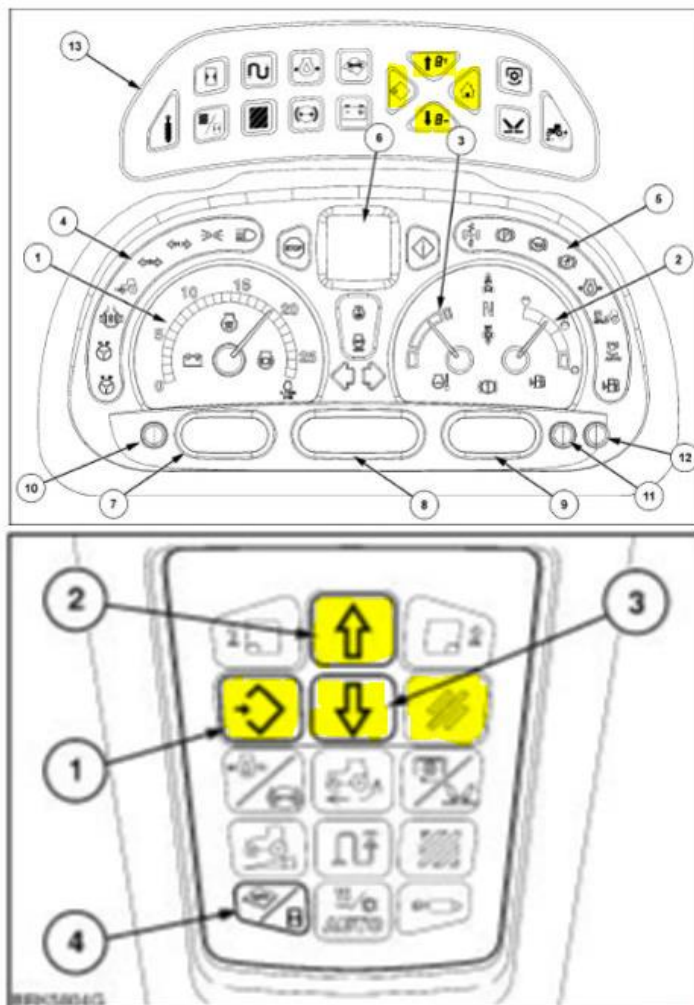


3. Select ISO Steering

Enter section U1 – H3

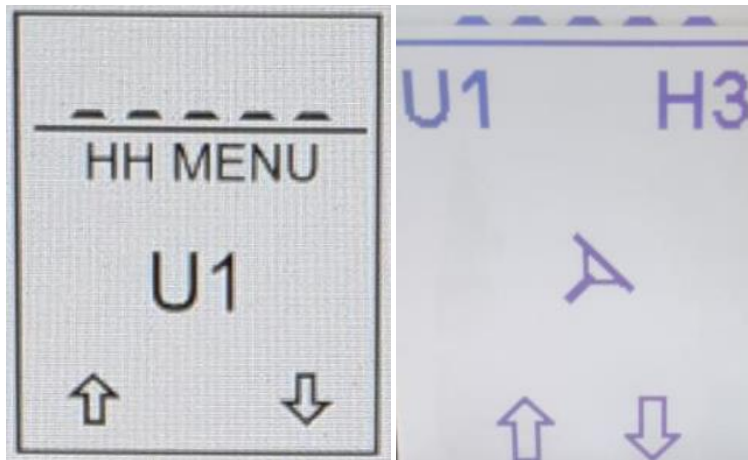

Change **CH 1** and **CH 2** to “YES”

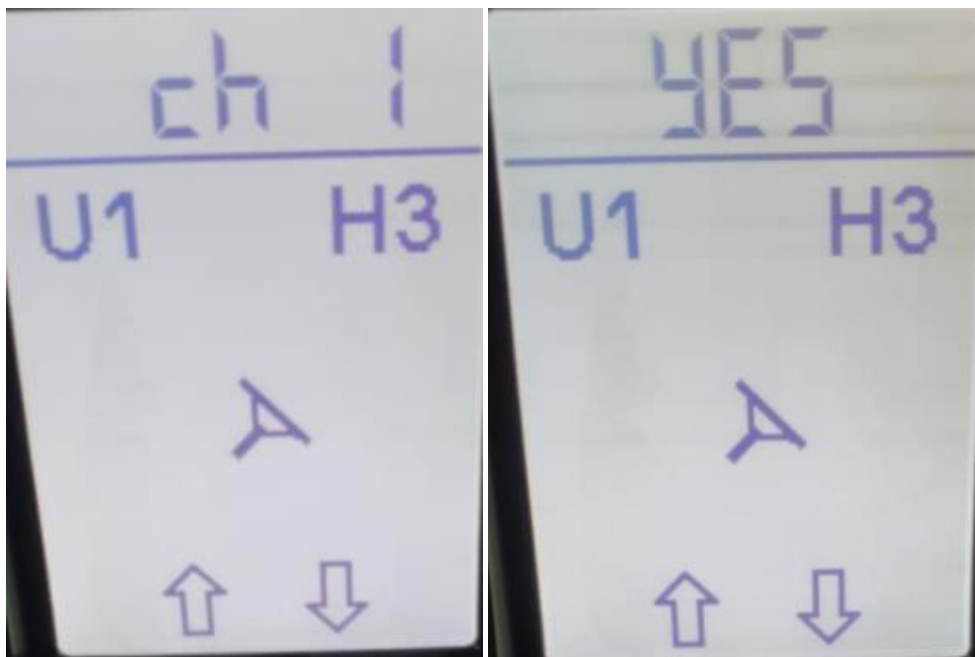

Now exit the HH menu and turn the ignition off.

Disconnect the bridge at diagnostic socket 1.

The autosteering mode should now set to ISO-STEER.