

GSPRO—Main Menu

- Driving Range / Practice—Select the Practice Menu
- Play Golf—Select Local Match
- Simulator Golf Tour (SGT) — If you have signed up with Simulator Golf Tour, please talk to Pete or Jeff to get your account configured to play in the online tournaments.
- Online Round is not enabled at this time



Exit Exit GSPRO

GSPRO

Enter Players or
Settings menu

Players Settings

Starts Local Match:

- 1-8 local players
- Hundreds of golf courses available

LOCAL MATCH

Starts Practice Mode:

- Driving Range
- On Course Practice
- Operation 36 & Skills Challenge

PRACTICE

Starts Tournament Round:

- 1-8 local players
- Hundreds of golf courses available

TOURNAMENTS

Starts Online Round:

- Join round online with other golfers

ONLINE MATCH



Search for a course using the filters
in the Select Course window...

GSPRO



Players



Settings

SELECT COURSE

Course Filters

- Search for a specific golf course by name, or location using the search box.
- Sort by course name, designer, date.
- Toggle favorites by checking/unchecking the star.



SEARCH

SORT BY

Name ↓



VIEW



Show All Courses



The Club at Ravenna

Location

Littleton, Colorado, USA

Designer

Mashie

Date Updated

2/16/2024

Version

1



Play the selected course

Play Course

Players

- Select player names for each golfer in the group.
- Use existing names or Player 1, Player 2 etc. or create new player below.
- Change the tees if not all players will play from the same tees set in Match Settings

PLAYERS

Player



Empty Slot



Empty Slot



Empty Slot



Empty Slot



Tee Box Settings:

- Set tee box for each player.
- If all players are playing from the same tee box, you can leave "Match Settings Tees and set the tee box under Match Settings.

Match Settings Tees



Team / Color:

- If playing team event (i.e. Scramble) all team members must be the same color.
- Select a team color for each team.
- Not required for individual stroke play.

Team / Color



Team / Color

Team / Color

Team / Color

Play Golf:

- If a Range is available on the golf course you may select Head to the Range to warm up.
- From the Range you will then be able to start your round.
- If no Range is available, select Play to start the match once all settings have been confirmed.

Invite Players



Create New Player



Head to the Range!

Play The Club at Ravenna!



Set game preferences in the MATCH SETTINGS window...

GSPRO

- Set Fairway, Green & Wind settings to your preference.
- Concede Score is the score you will record if you concede the hole.
- Putt Auto Aim will automatically aim putt line based on the break of the green.
- Recommend all other settings as shown below.

PLAYERS		MATCH SETTINGS	
Game Type	< Stroke Play >	Select stroke, scramble, match etc.	
Tee	< Black 7197yd >	Select match tee box, (player tee box overrides).	
Pins	< Thursday >	Select pin location (Thurs - Sun).	
Gimme/Auto Putt	< 20 >	Gimme circle radius if putting, else use AutoPutt	
Elevation	< Course (5400ft) >		
Stimp	< 10 >	Green Speed (Use 8 the first time putting on Sim).	
Putting	< Easy >	Putting (Use Easy the first time putting on Sim).	
Mulligan	< Yes >	Keep Mulligan set to "YES" in case of mis-read.	
Game Play	< Player Settings >	Keep Game Play set to "Player Settings".	
Fairway Firmness	< Normal >		
Green Firmness	< Normal >		
Wind	< No Wind >		
Concede Score	< Double Bogey >		
Auto Concede	<input type="checkbox"/>	Putt Auto Aim	<input type="checkbox"/>
Putting Assist	<input checked="" type="checkbox"/>		
Breakline	<input checked="" type="checkbox"/>		
HCP	<input type="checkbox"/>		

Play Golf:

- If a Range is available on the golf course you may select Head to the Range to warm up.
- From the Range you will then be able to start your round.
- If no Range is available, select Play to start the match once all settings have been confirmed.

Invite Players +

Course Recommended Settings

Head to the Range!

Play The Club at Ravenna!

LOFT
GOLF
STUDIOS

From a "course" range...

Play Golf:

- From the Range - go to the first tee to start your round.

Tee Off!

Driver

CLUB

RH

HAND




Tee

0.1° UP



0.4° RIGHT

GSPro—Game Play

- Use the mouse, keyboard or footswitch during game play. (Press TAB to bring up the list of keyboard shortcuts)
- To adjust target/aim point: Use the footswitch (black buttons), keyboard arrow keys or mouse on the mini-map in the lower right hand screen to set your target/aim point. Press "A" to clear and reset.

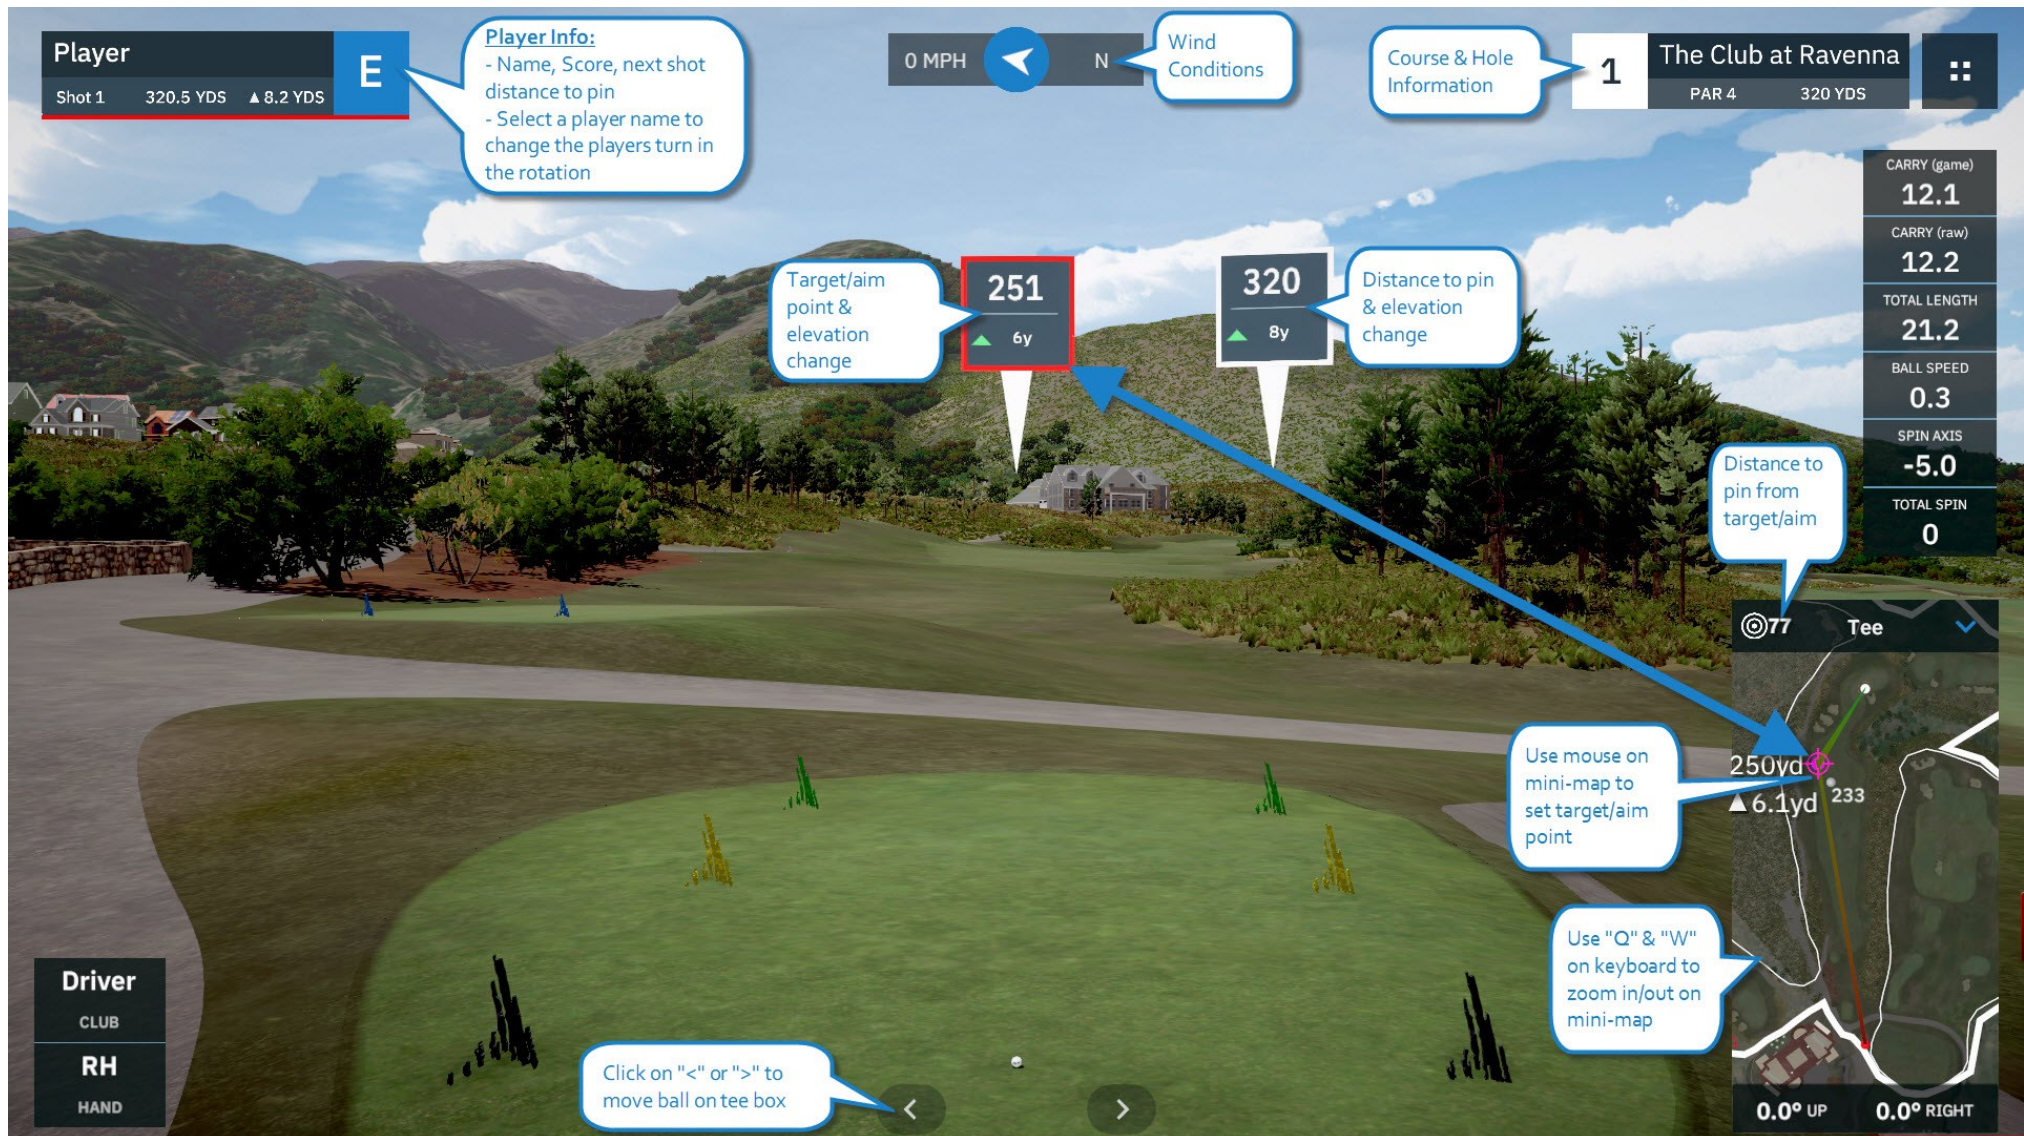

GSPro Keyboard Shortcuts and Key Game Tips

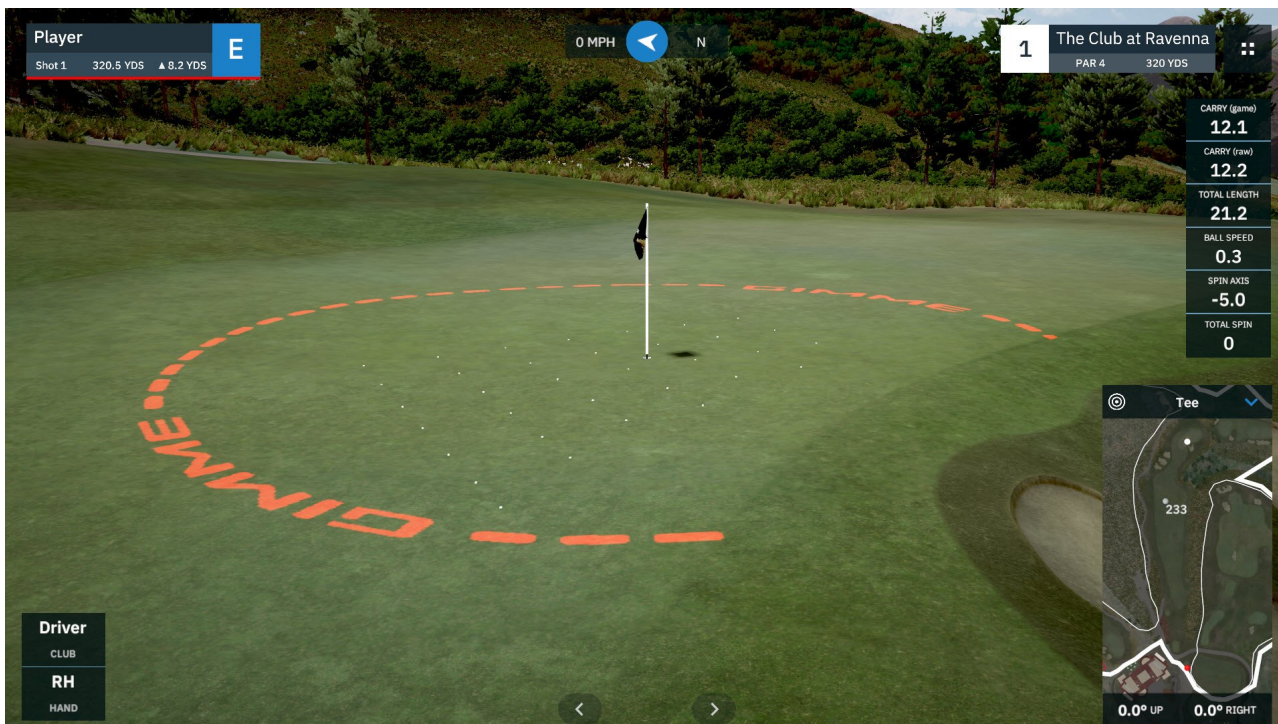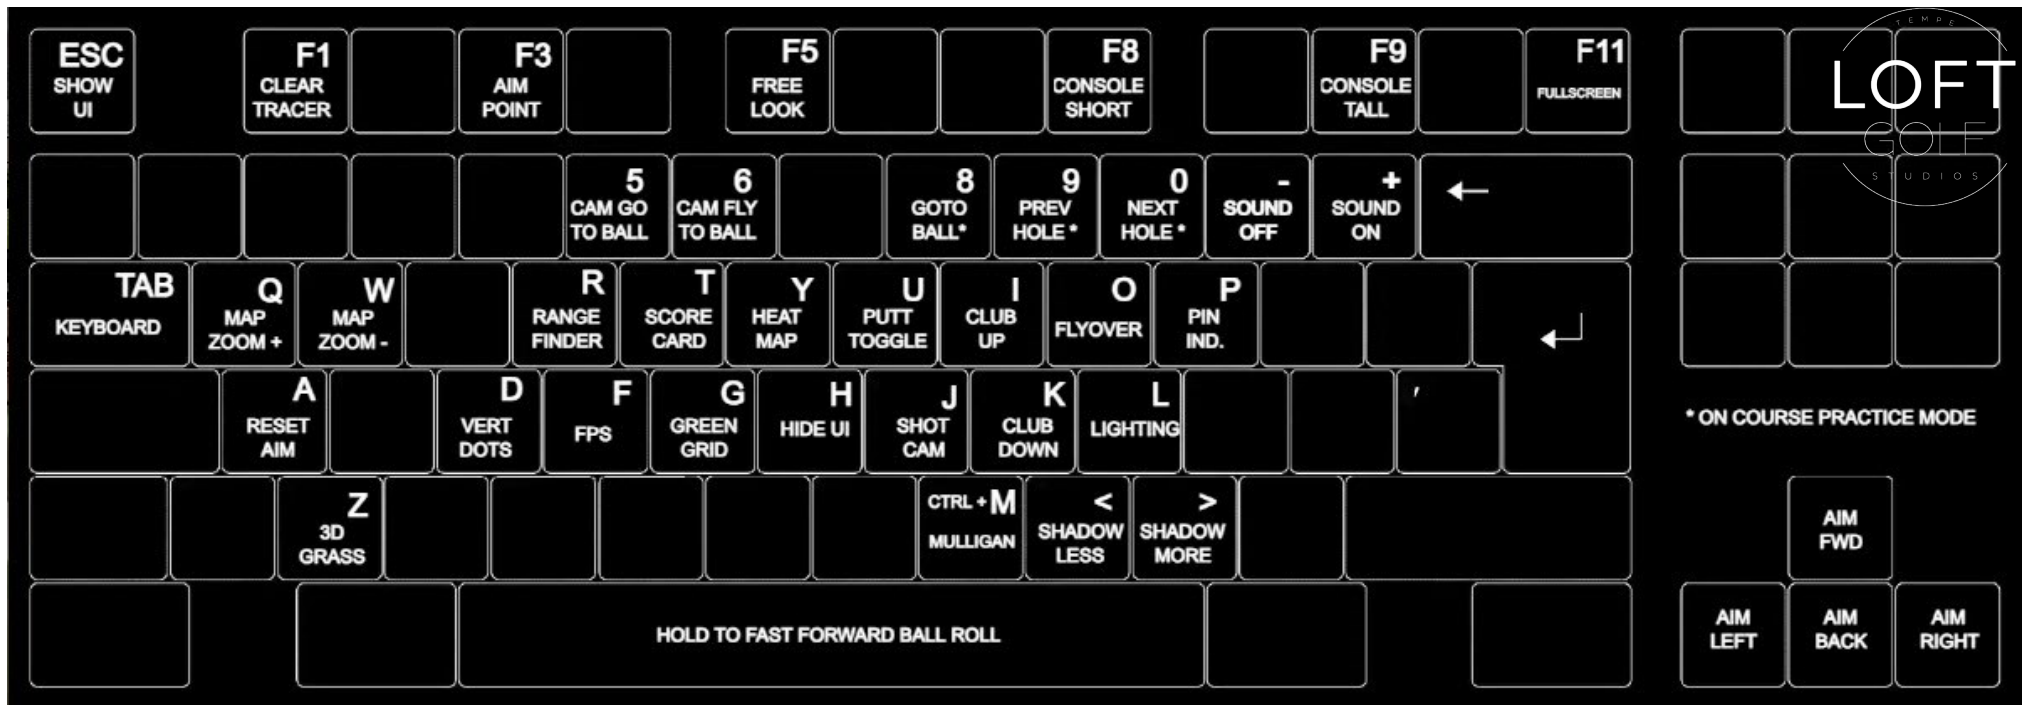


- **TAB**—brings up the keyboard shortcut reference.
- **F3** (keyboard) or **AIM POINT** (footswitch) - pin location with slope of green.
- **Y** (keyboard) or **HEAT MAP** (footswitch) - will display green break on mini map. High to low: RED-YELLOW-GREEN-BLUE



SHOT OPTIONS:

- **REHIT**—rehit with penalty
- **MULLIGAN**—rehit without penalty CTRL+M (keyboard) MULLIGAN (footswitch)
- **SIM DROP**—to drop out of an unhittable area for a one stroke penalty.
- **CONCEDE**—concede the hole and accept the score from the game settings.
- **REPLAY**—instant replay of the last shot.

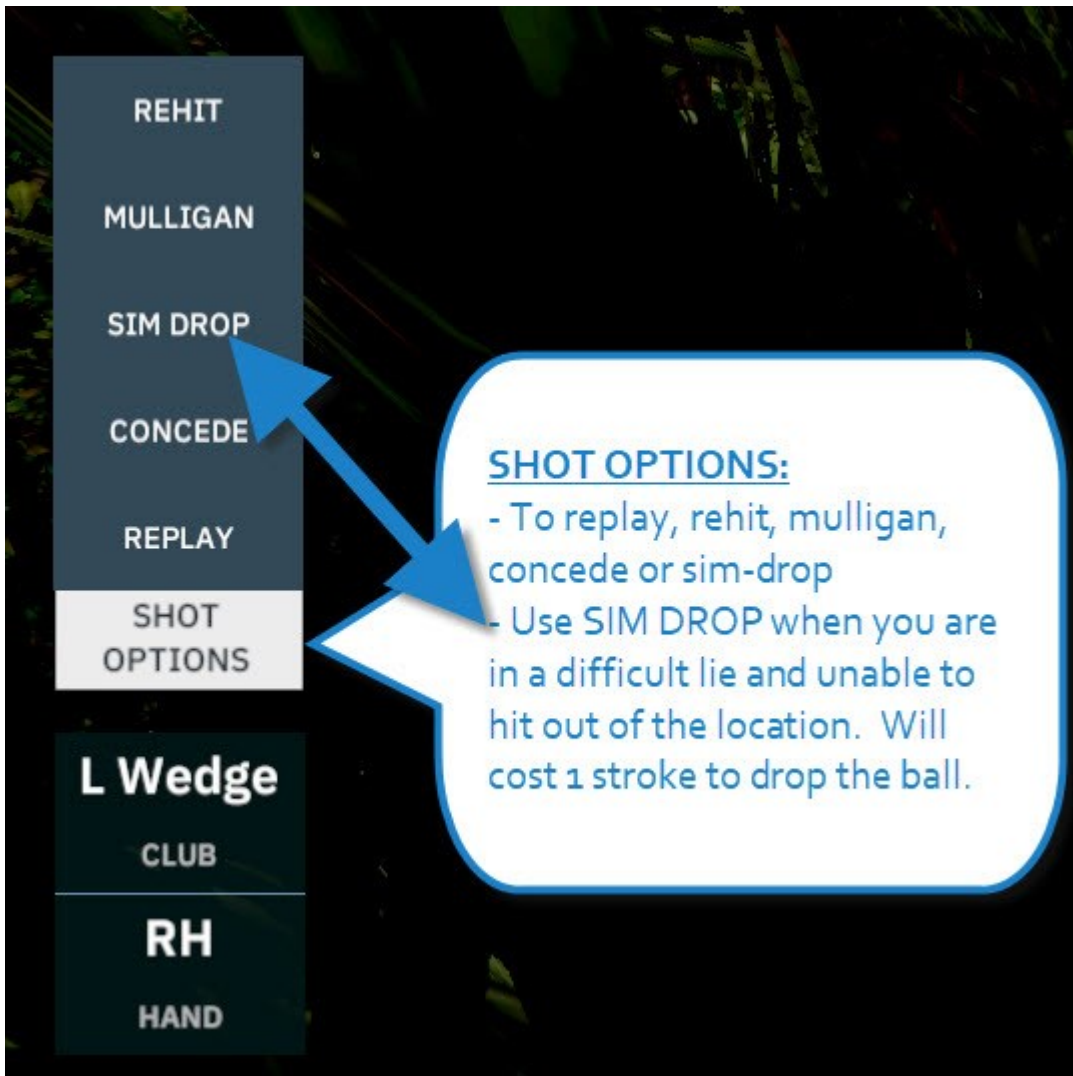


GSPro—Putting when not on the green

- Club selection is not required during normal game play.
- GSPro will automatically select a club based on the distance to the pin and the default bag mapping.
- If you wish to putt from off the green—you **MUST CHANGE THE CLUB TO THE PUTTER**.
- “U” (keyboard) or **PUTTER / CLUB** (footswitch)



GAME MENU

- Select the 4-dots in the box in the top right corner of the window to open the game menu.
- **SETTINGS**—will open up the game settings that can be adjusted during game play (i.e. putting settings). Note, some settings cannot be changed such as tee box location which require a restart of the round.
- **END ROUND**—to exit the current round and return to the main menu.
- **LIGHTING**—to adjust the visual appearance of the game which varies from course to course.
- Other menu options include: hole flyover (O), shot options, scorecard (T), shortcuts (TAB), show flag, putt mode.

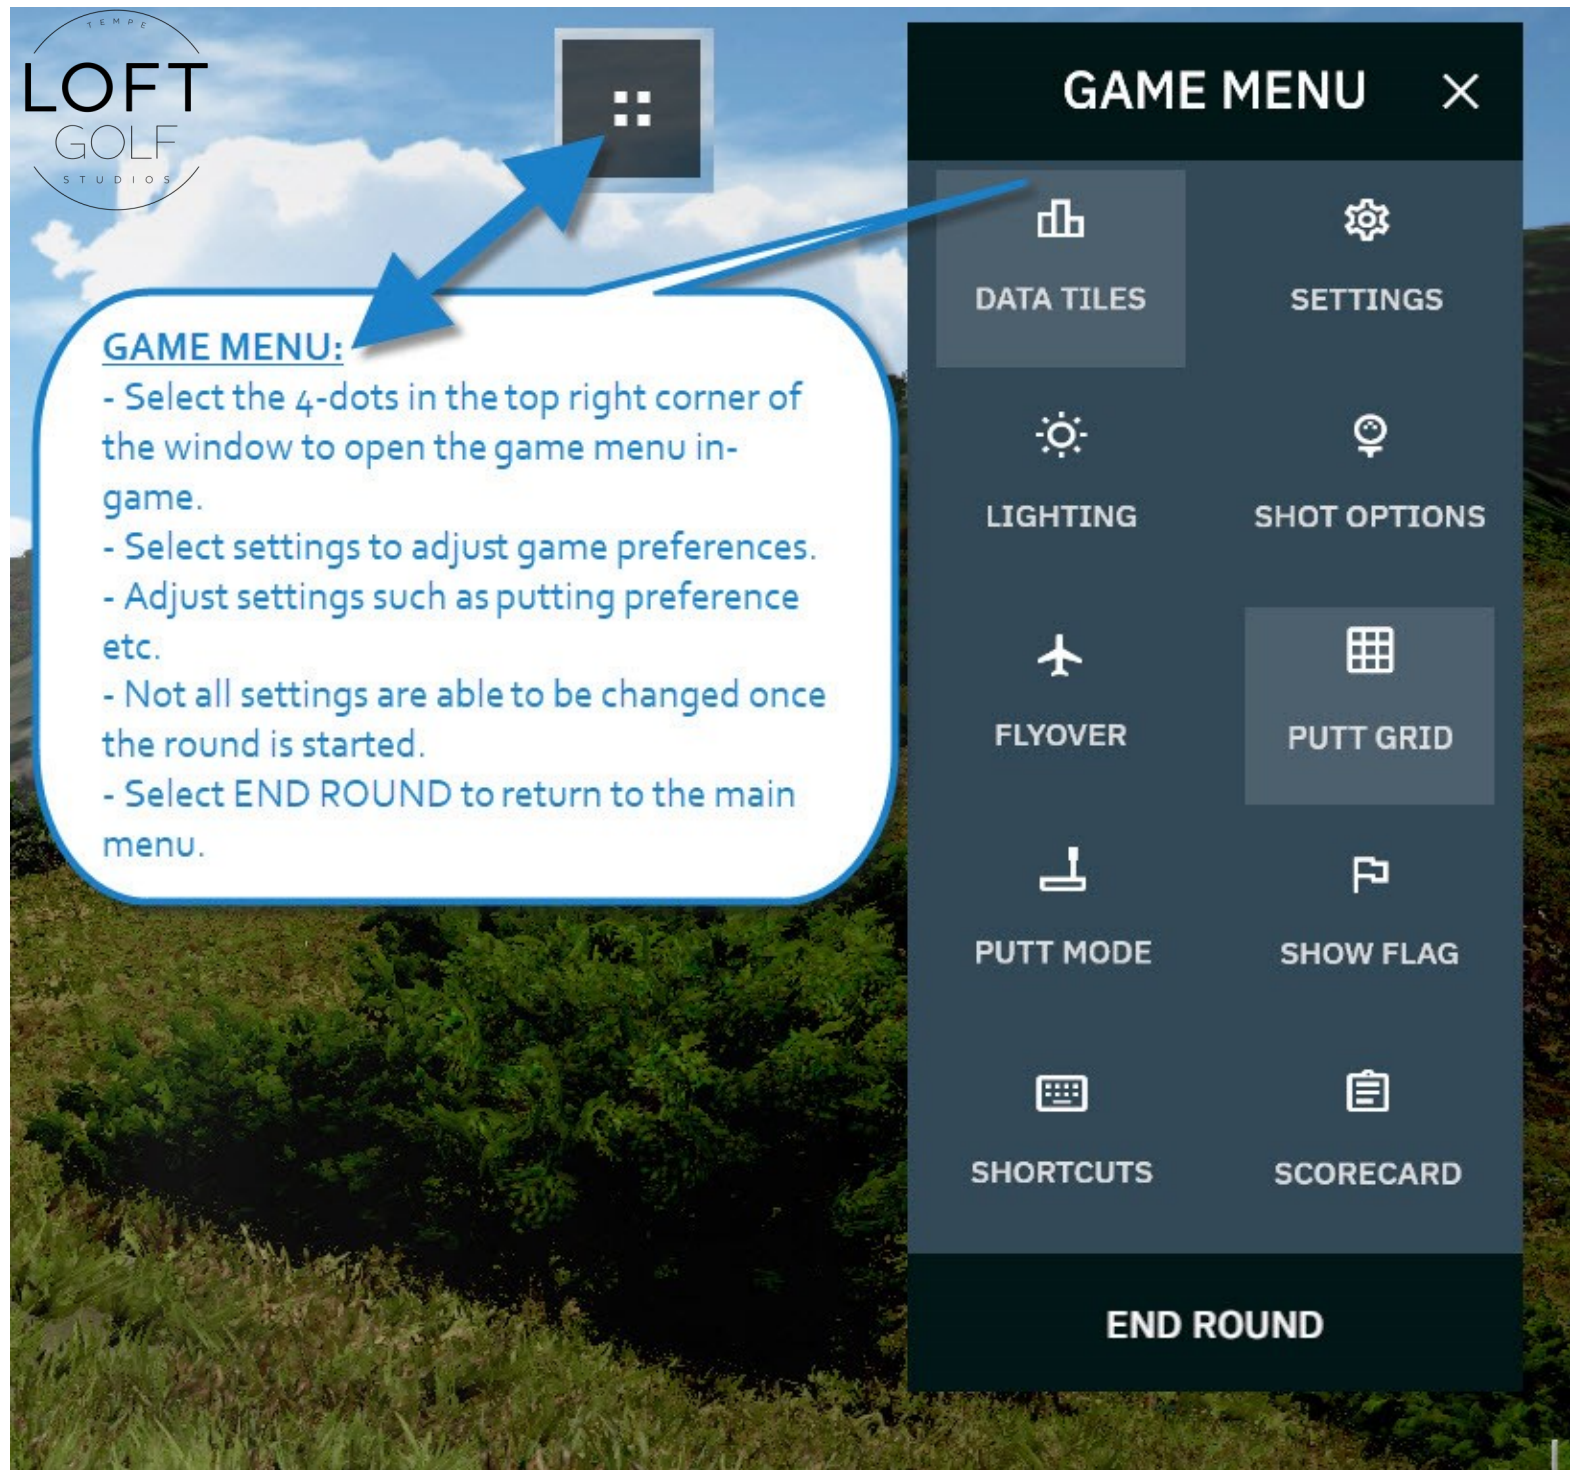

GSPRO—TROUBLESHOOTING



- If shots are not registering in GSPro but you see the shot in VIEW (side monitor): **RESET GSPRO CONNECT**.
- Select GSPro **SETTINGS** and select the **GAME** tab..
- Select **Reset GSPRO Connect** and let it cycle through the reconnect routine.
- **MINIMIZE** the *GSPro Uneekor Connect* window—**DO NOT CLOSE** or GSPro will not work.
- Select **SAVE** from the GSPro settings window and continue your round.

A screenshot of the GSPRO Settings application window. The window has a dark theme with a blue header bar containing the "GSPRO" logo and a "Settings" button with a gear icon. Below the header is a tabbed interface with four tabs: "GAME" (selected), "VISUAL SETTINGS", "ROUND SETTINGS", and "ROUND PLAYERS". The "GAME" tab contains several settings: "Units" (METRIC/IMPERIAL), "Use LM Carry" (checkbox), "Altitude" (0 ft), "Course Folder" (E:\GSPro\Courses), "MiniMap Location" (LEFT/RIGHT), "Control Type" (Simulator/Mouse), "Player Rotation" (Classic/Play Out Hole/Putt Out), and "Scorecard after Hole" (0 seconds). The "ROUND SETTINGS" tab is partially visible, showing "REALISM" and "Ball Shape / Curvature" settings. A white callout box with a blue border is overlaid on the "ROUND SETTINGS" tab, containing the text "Reset GSPro Connect:" followed by three bullet points: "- In the event of a Uneekor or GSPro software connection issue.", "- From the GAME tab in the settings menu, select 'Reset GSPro Connect'.", and "- The system will reconnect, minimize (do not close) the Uneekor Connect window.", and "- Select SAVE below.". Below the callout box are three buttons: "Clear Cache", "Reload Courses", and "Reset GSPro Connect". At the bottom of the window are three large blue buttons: "Close", "Save", and "End Round".

GSPPro—TROUBLESHOOTING



- In the event of a system or GSPPro restart, you can continue your round from the last recorded shot.
- Select the course you were playing from Local Match.
- From MATCH SETTINGS, check the **Resume Previous** box and select **Play**. No other settings or players need to be adjusted/added.
- All players and settings will be restored and you may continue your round.

[← Back](#)

GSPRO

[Settings](#)

PLAYERS		MATCH SETTINGS		HOLES	
Game Type	Stroke Play	Fairway Firmness	Normal		
Tee	Black 7197yd	Green Firmness	Normal		
Pins	Thursday	Wind	No Wind		
Gimme/Auto Putt	20	Concede Score	Double Bogey		
Elevation	Course (5400ft)	<div>Continue a round in GSPPro:<ul style="list-style-type: none">- In the event of a software or system issue that requires a program restart.- From the Local Match menu, select the same course that was in process and check the box "Resume Previous".- Select the PLAY button.- You do not need to configure any other player or game settings.- The previous round will resume from the last shot recorded.</div>			
Stimp	10				
Putting	Easy				
Mulligan	Yes				
Game Play	Player Settings	HCP			
		Resume Previous	<input checked="" type="checkbox"/>		

[Invite Players](#) +

Play The Club at Ravenna!