


PRODUCT
MANUAL

▶ ILLUSTRATION OF MODEL

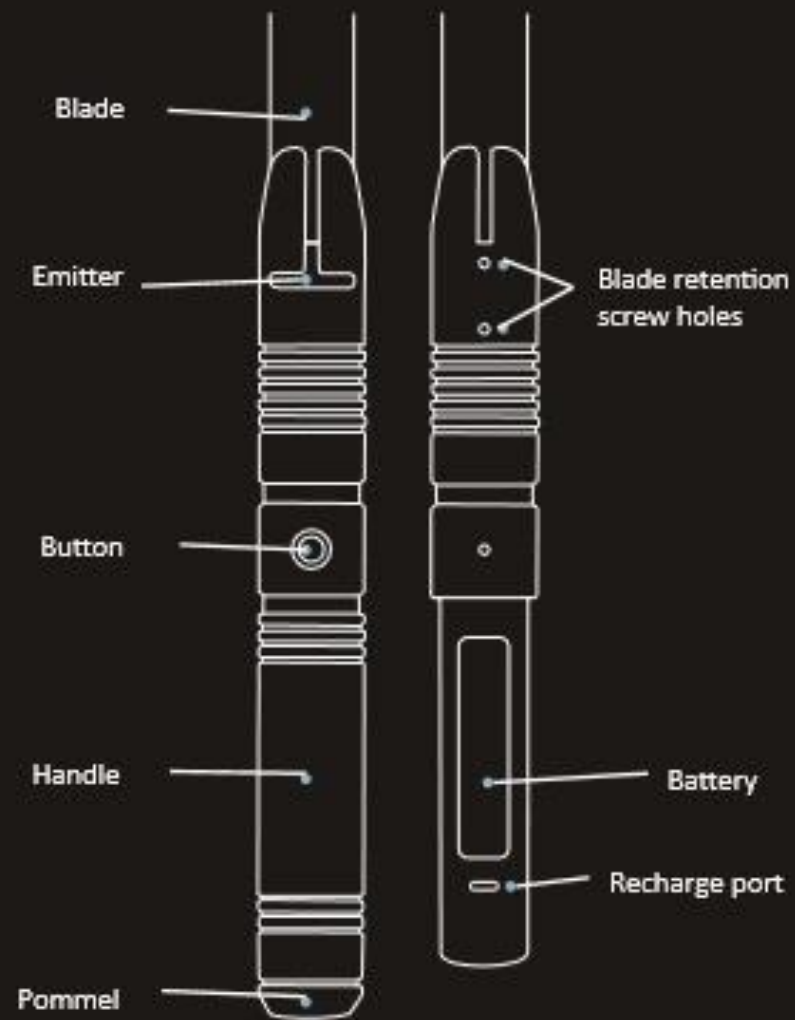

▶ DISMANTLING

Rotate and unscrew the lightsaber body



Unscrew the back screws of the handle



Push the switch button from the handle surface into the infrastructure



Pull down the inner structure



▶ CHARGING DIAGRAM

For models with an external charging port, please use the charging cable provided by the merchant to plug in and charge.



For models with built-in charging port, please unscrew the saber pommel or handle, and then use the charging cable provided by the merchant to plug in and charge.



For models without a charging port, please unscrew the saber handle, then take out the battery and use the charging box provided by the merchant to charge.



▶ THREE SABER ELECTRONIC VERSIONS

Type	RGB S16	S-RGB (upgrade model)	SN Pixel
Blade Length	82cm/92cm RGB Blade	82cm/92cm RGB Blade	82cm/92cm Pixel Blade
Blade Colors	12	12 (multi-color) Connecting With *	12 (multi-color) Connecting With *
Sound Fonts	16	27 (Customizable)	27 (Customizable)
Blade Style	Yes	Yes	Yes
Ignition Styles	Yes	Yes	Yes
Features	Flash on Clash / Gesture Ignition / Smooth swing / Lock-up Adjust colors / Removable battery and chassis		
Bluetooth	No	Yes *	Yes *
BGM	Yes	Yes	Yes
SD Card	Not Supported	32G	32G
Speaker	403W	403W	403W
Battery	2000mAh 18650	2000mAh 18650	3200mAh 18650

▶ OPERATING INSTRUCTIONS-RGBS16

Single Button Control

Standby mode	Button Operation
Enter standby mode	Hold the button until the button light is on.
Enter boot status	Tap the button after enter standby mode.
Volume adjust	Hold the button until the breath light flashes once then release.
Switch sound fonts	Hold the button until the breath light flashes twice then release.
Switch BGM	Hold the button until the breath light flashes Three times then release.
FOC on/off	Hold the button until the breath light flashes Four times then release.
Motion control on/off	Hold the button until the breath light flashes Five times then release.
Power off	Hold the button until the breathing light is off.
Power saving mode	No operation for 10 minutes
Boot Status	
Blaster	Tap the button.
Lock-up	Hold the button until the breath light flashes once then release.
Switch blade color	Hold the button until the breath light flashes twice then release, and then tap button. Exit this mode need Hold the button until the breath light flashes once then release.
Switch blade effects	Hold the button until the breath light flashes Three times then release.
Enter standby mode	Hold the button until the breath light flashes Four times then release.
Standby mode	Gesture Operation
Enter boot status	Twist the saber after enter standby mode.
Switch sound fonts	Point blade upward & hold button and twist the hilt.
Switch BGM	Point blade downward & hold button and twist the hilt.
Boot Status	
Switch blade effects	Point blade upward & hold button and twist the hilt.
Switch blade color	Point blade downward & hold button and twist the hilt.

FOC	Hit the saber.
Enter standby mode	Twist the saber.

2 Button Control

When buttons are distributed up and down:
Upper button is PWR button-Lower button is AUX button.
When the buttons are distributed left and right:
left button is PWR button-right button is AUX button.

Standby mode	Button Operation
Enter standby mode	Hold the PWR until hearing the prompt sound "power on"
Enter boot status	Tap the PWR after enter standby mode.
Switch sound fonts	Tap the AUX.
Adjust volume	Hold the PWR then release.
Power saving mode	No operation for 10 minutes
Boot Status	
Blaster	Tap the AUX
Lock-up	Hold the AUX then release.
FOC off/on	Hold the PWR then release
Enter standby mode	Tap the PWR
Boot Status	Gesture Operation
Enter boot status	Twist the saber after enter standby mode.
Switch sound fonts	When the blade is up, Hold the AUX button then twist saber.
Switch BGM	When the blade is down, Hold the AUX button then twist saber.
Boot Status	
Switch blade effects	When the blade is up, Hold the AUX button then twist saber.
Switch blade color	When the blade is down, Hold the AUX button then twist saber.
FOC	Hit the saber.
Enter standby mode	Twist the saber.

▶ SECURITY INFORMATION

Before using and operating the product, in order to ensure optimal product performance and avoid dangerous or illegal situations, please read and follow all safety information.

Operation and Safety

- Please fully charge before operation.
- Please use a 5V1A power adapter.
- Please keep small accessories safe and keep them out of reach of children to prevent them from accidentally swallowing.
- Please notice the anode and cathode of the battery.
- Please use this product within the temperature range of 0C~35C and store it in the range of -20C~+45C.
- Don't expose the battery to high temperatures or heat generating products, such as sunlight, heaters, microwaves, ovens, or water heaters. Overheating the battery may cause an explosion.
- Don't throw batteries into fire. It is prohibited to disassemble, drop, squeeze or modify batteries. Avoid foreign objects inserting, puncturing the battery, or immersing the battery in water or other liquids. Avoid external shocks and pressure on the battery. To prevent battery leakage, overheating, fire or explosion.
- Please dispose of batteries according to local regulations and don't dispose of them as household waste. Improper disposal of batteries may lead to battery explosions.
- When charging is complete or not charging, please disconnect the power adapter from the product and unplug the power adapter from the power socket.
- Don't use the power adapter in damp places (such as near sinks, bathtubs, or showers), and don't use wet hands to plug and unplug the power adapter.
- Using unauthorized or incompatible power sources, power adapters, or batteries may cause fire, explosion, or other hazards.
- [Warning] There is a risk of fire or explosion if the incorrect model of battery is replaced. For your personal safety and to ensure the normal operation of the product, we strongly recommend that you go to the Official store to replace the battery of this product.

Warning

- This product is not suitable for children under 14 years old.

▶ FAQ

The saber has no sound

Please confirm whether it is in mute mode, and you can adjust volume mode, or reinstall the battery.

The blade is easy to loosen

Make sure that the screws that secure the blade are tightened. In addition, it is normal for the screws and the blade to loosen during the fight. You can change the fixed position of the screw and tighten the screw.

Saber cannot be turned on

Please charge the saber first to make sure it is fully charged. If it still can't be solved, please remove the battery and reinstall it (pay attention to the positive and negative poles), and make sure the battery are contact well.

▶ WARRANTY

The product has a one-year warranty period.

Warranty covers original products and accessories that have not been modified.

Includes: light saber handle, electronic internal structure, and light saber blade.

▶ WARRANTY DISCLAIMER

Product malfunctions caused by self modification of electronic software programs or product hardware are not covered by the warranty.