



#### How to start & warm up the engine:

1. Before using, carefully and completely check the tractor will eliminate potential accident and avoid faults.
2. Check free play of the clutch pedal & breaking pedals. Make sure there is a free play otherwise it will wear the clutch & break discs quickly. \* Refer to how to adjust free play of clutch & breaking pedal.
3. Clean the front screen of the radiator every shift to avoid engine overheat.
4. Before starting, it should be carefully checked to ensure all parts are fitted tightly and stable, all operation mechanism functions are normal, all pipelines joints are fastened and no oil/water/air leaking.
5. Check oil level on dip stick for: engine, diff & transmission, hydraulics and grease points.
6. Check coolant water & diesel fuel.
7. Check tyre pressure.
8. After the engine is started, full-load running shall not be made immediately. It is necessary to run the engine idle at medium speed to preheat.
9. When coolant temperature is above 60°C then you can increase to the highest speed and operate at full load.
10. The engine rev and load should be slowly increased or decreased, especially for a newly starting engine. It is not allowed to run at high speed by sudden turning the oil throttle when engine is still cold.