


TR ANALYZER TONNAGE MEASURING DEVICE

1. PRODUCT CATALOGUE

R-2509

TR ANALYZER - Tonnage Measuring Device for measuring actual running tonnage capacity of Chiller and AHU equipment based on DP type flow measuring principle and monitoring the performance of the equipment with part load data, NPLV data, ISEER data and Energy Star Rating of machine.

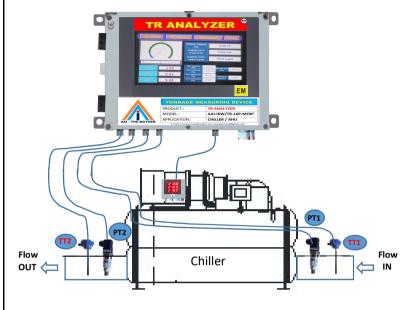

- ⇒ Actual Running Tonnage (TR) measuring with inline water flow sensing based on Inlet Outlet Pressure and Temperature.
- ⇒ Superior in water FLOW measuring without requirement of 5D/3D distance criteria.
- ⇒ Single Model to fit all pipe sizes and all tonnage capacity of Chiller / AHU from 0...4124 TR range.
- No Need to place extra flow switch or DP switch at chiller unit for water flow status contact.
- **⇒** Real time Delta T and Delta P monitoring.
- ➡ IKW/TR and COP measuring in line with AHRI / ASHRAE format.


 (for Advance 'IKW/TR' model)
- → Part Load Performance monitoring in line with AHRI / ASHRAE format. (for Advance 'IKW/TR' model)
- ⇒ ISEER, Star Rating & NPLV performance monitoring. (for Advance 'IKW/TR' model)
- Historical Data Logging upto 400 Days. (for Advance 'IKW/TR' model)

Product Name :	: TR ANALYZER				
Product Type :	: Running Capacity Tonnage Measuring Device				
Product Application :	: HVAC				
Application Medium :	: Water				
Measuring TR Range :	: 04124 TR				
Measuring Flow Range :	: 02498 m3/hr				
Accuracy - Water Flow :	ter Flow : : ± 0.5% of reading				
Accuracy - Running TR :	: ± 1% of FS				
Pipe Size :	: 5mm5000mm				
Operating Pressure :	: 020 bar (as per selected Model)				
Operating Temperature:	: -2055°C				
: Base TR Model = Running Capacity Tonnage (TR), Water Flow (usgpm), Water Flow Status (P.F.C.), Inlet/Outlet Presented Temperature. : Advance IKW / TR Model = In addition to base TR Model, IKW / TR, COP, EER, ISEER, NPLV, Part Load Performance of 100%,90%,75%,50%,25%, Power, Current, Voltage, Energy Star Rating from 1 Star to 5 Star					
Data Logging:	: Upto 400 Days (for Advance IKW/TR Model only)				
Weight (Overall) :	: Base TR Model = 3.5 Kg : Advance IKW/TR Model = 11 Kg				
Dimension (EM Device) :	: Base TR Model = 220mm (L) x 200mm (H) x 113 (D) : Advance IKW/TR Model = 336mm (L) x 258mm (H) x 113 (D)				
Power Supply :	: 100240 V +/- 10 % AC				
IP Protection:	: TT/PT - IP66, EM / IKW Meter - IP20				
* Chiller / AHU Design Selection sheet to be shared while placing order.					



1. PRODUCT CATALOGUE

R-2509

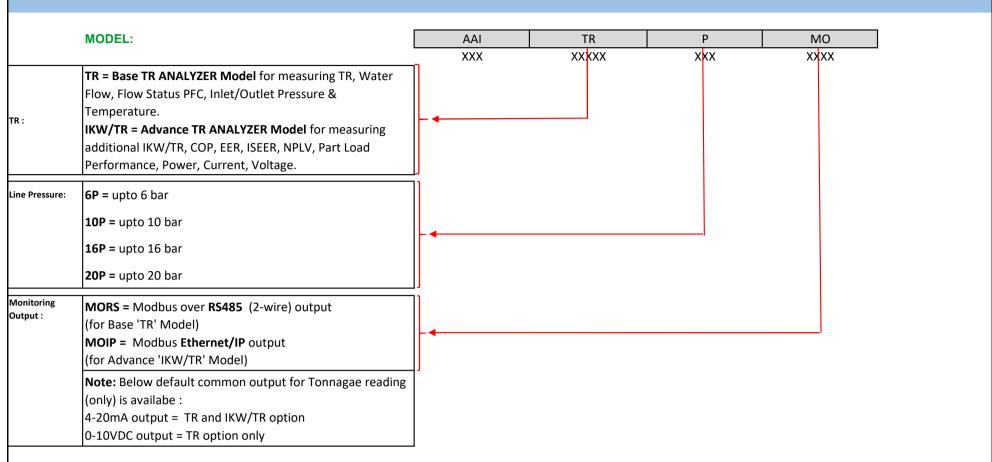

Sr. No.	Model No.	Modbus Output	Line Pressure	Output/s			
1)	AAI-TR-6P-MORS	RS485 (2-wire)	6 bar	Running Capacity Tonnage (TR), Water Flow (usgpm), Water Flow Status (P.F.C.), Inlet/Outlet Pressure & Temperature, (BTU optional)			
2)	AAI-TR-10P-MORS	RS485 (2-wire)	10 bar				
3)	AAI-TR-16P-MORS	RS485 (2-wire)	16 bar				
4)	AAI-TR-20P-MORS	RS485 (2-wire)	20 bar				
5)	AAI-IKW/TR-6P-MOIP	Ethernet / IP	6 bar	Running Capacity Tonnage (TR), Water Flow (usgpm), Water			
6)	AAI-IKW/TR-10P-MOIP	Ethernet / IP	10 bar	Flow Status (P.F.C.), Inlet/Outlet Pressure & Temperature, IKW/TR, COP, EER, ISEER, NPLV, Part Load Performance, Energy Star Rating (1 Star to 5 Star), Power, Current, Voltage.			
7)	AAI-IKW/TR-16P-MOIP	Ethernet / IP	16 bar				
8)	AAI-IKW/TR-20P-MOIP	Ethernet / IP	20 bar				

ACCESSORIES:


- 1) Ball Valve $G\frac{7}{4}$ A for each PT1 and PT2 = Total quantity 2 Nos
- 2) Coupling of 3/4" for TT1 and TT2 = Total 2 Nos
- 3) Mounting plate / stand on pipe for EM unit Near PT2

- 4) Kwh Meter, CT and It's cable is considered only for LT Panel. If it is HT Panel, then CT, VT and it's cable shall be in Client Scope.
- * Accessories are not part of this product. End buyer has to arrange locally.

For Base "TR" Model

INSTALLATION STEP:

Installation of TR ANALYZER :

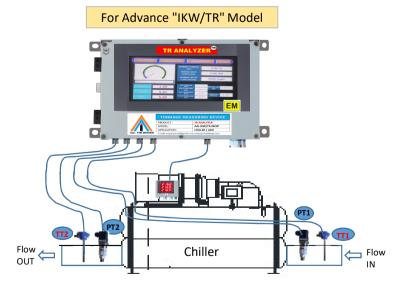


STEP-1: Part-1: INLET- PT1 & TT1 Installation:

Location = **Inlet Pipe** of the Chiller / AHU

Connection = G¼ A for PT and 2/3" well for TT into the Pipe

Direction = 45° angle opposite to the water flow

Position = 35% bottom side of the pipe

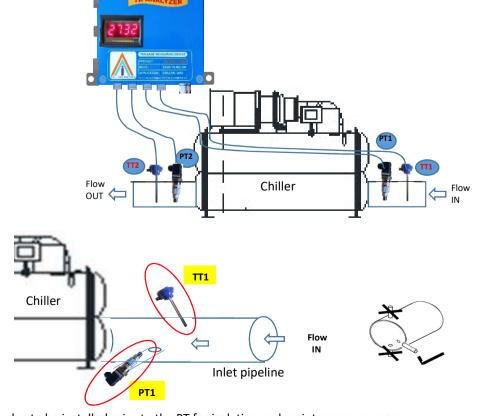

Description: Ensure PT1 pressure transmitter is installed at INLET line only. Ensure Ball valve to be installed prior to the PT for isolation and maintenance purpose.



1. PRODUCT CATALOGUE

R-2509

STEP-2: Part-2: OUTLET- PT2 & TT2 Installation:


Location = Outlet Pipe of the Chiller / AHU

Connection = $G\frac{1}{4}$ A for PT and $\frac{2}{3}$ " well for TT into the Pipe Direction = 45° angle opposite to the water flow

Position = 35% bottom side of the pipe

Flow OUT

100

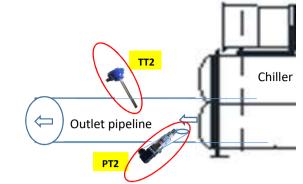



Description: Ensure PT2 pressure transmitter is installed at OUTLET line only. Ensure Ball valve to be installed prior to the PT for isolation and maintenance purpose.


STEP-3: Part-3: Electronic Module - EM Installation:

Connection = Mounting plate / Stand

Mounting plate / stand to be installed near PT2 @ 5 Meter distance

Flow OUT

Mounting of EM on plate / Stand

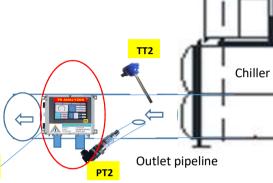

<u>Description</u>: Ensure EM module is installed near to PT2 at **OUTLET** line only within 5 Meter distance from PT/TT. Ensure Mounting Plate / Stand being installed.

(Note: Electronic Module for TR option will be of different size and it will not have Touch Panel Display)

STEP-4: Part-4: Kwh Meter & CT Installation (for Advance 'IKW/TR' Model only):

Location = Inside Chiller Panel


Installation of Kwh Meter = To be installed inside Chiller Panel.

Installation of CT = To be installed in each R phase, Y phase and B phase respectively.

Termination of Cable = Each Cable of Current & Voltage to be installed as per guideline.

Very Important = 1) All Kwh Meter, CT and Cable Termination To be installed by well trained Electrical Technical person only.

2) Supply of CT, VT and It's cable for HT Panel is in client scope.

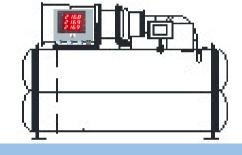

TERMINAL WIRING:

For Advance "IKW/TR" Model

100~230V AC	N	T10
100~230V AC	-DO1/19	T9
Output	-DO1/19	T8
Flow PFC Status	+DO1/16	T7
Output	-GND/12	T6
4-20mA TR	+AO5/5	T5
Output	-GND/12 +DO1/16 -DO1/19 L	T4
0-10V DC TR	+AO3/3	T3
(FOTOKE)	+RS/14	T2
(FUTURE)	-RS/13	T1



For Base "TR" Model

100~230V AC	N	T10
100~230V AC	L	Т9
Output	-DO1/19	T8
Flow PFC Status	+DO1/16	T7
Output	-GND/12	T6
4-20mA TR	+AO5/5	T5
Output	-GND/12	T4
0-10V DC TR	+AO3/3	T3
RS485	+RS/14	T2
MODBUS /	-RS/13	T1

SENSOR WIRING:







SENSOR WIRING:



DIMENSIONS (in MM):

EM Display Unit:

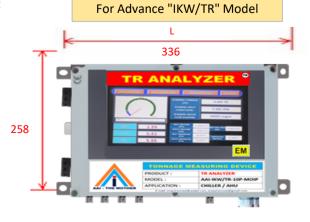

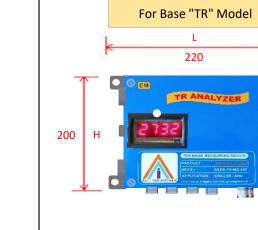

113 D




E-mail:



TR ANALYZER® TONNAGE MEASURING DEVICE

1. PRODUCT CATALOGUE

R-2509

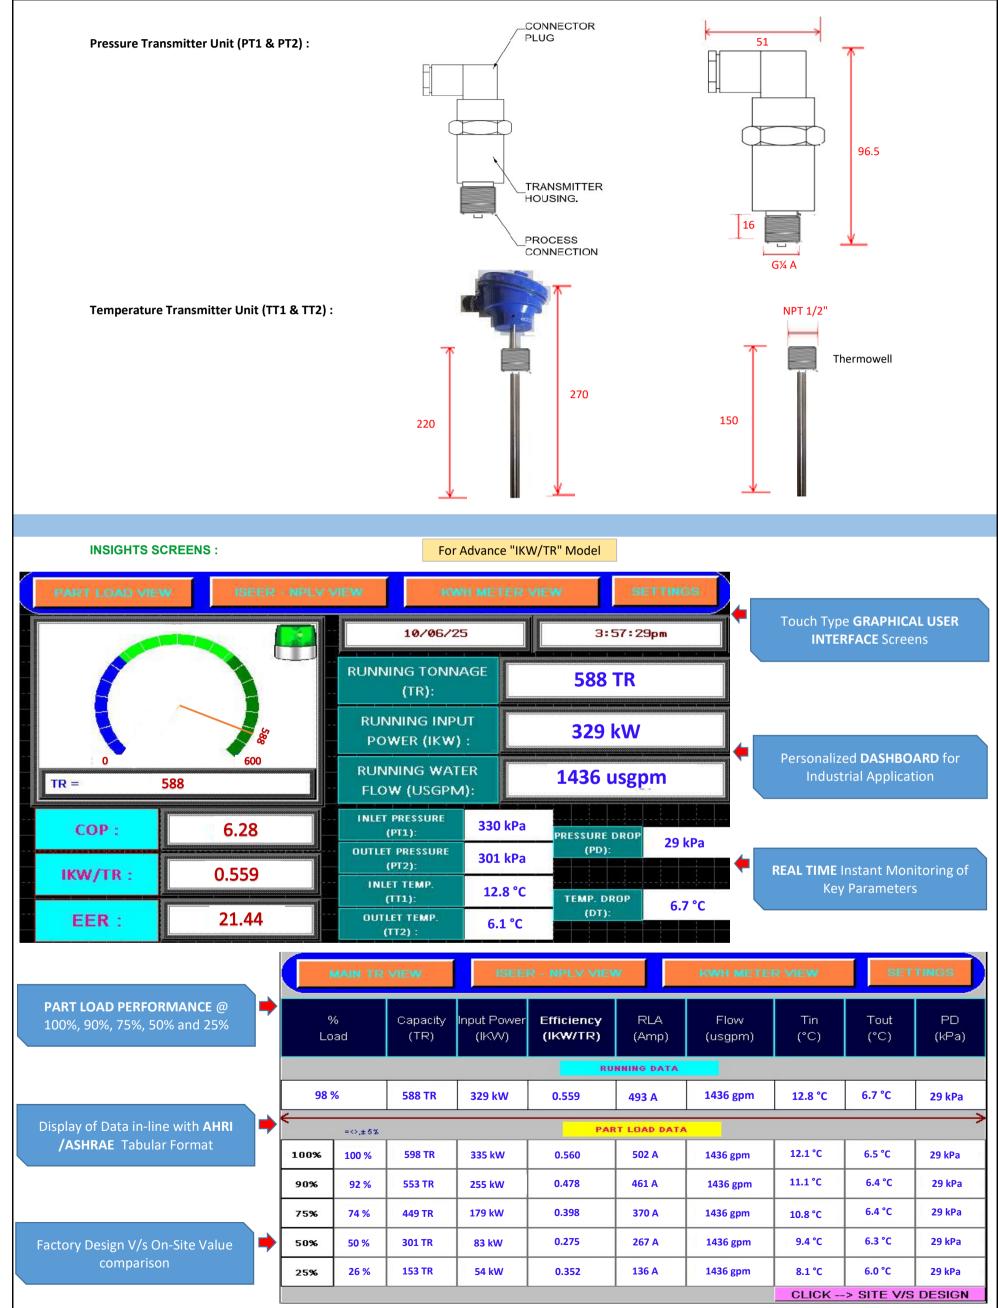



TR ANALYZER® TONNAGE MEASURING DEVICE

1. PRODUCT CATALOGUE

R-2509

