

CHILD WINDOW GUARD OPERATION

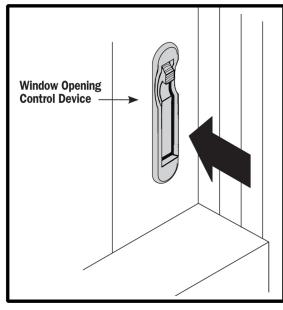

Safety Lock location

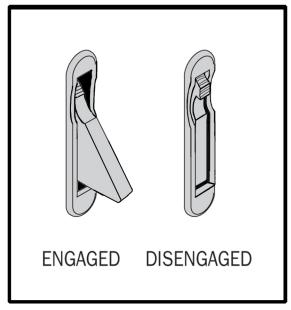

Safety Lock function

To Engage Window Opening Control Device



Push top ridged square in to reengage Window Opening Control device.



Raise bottom sash to make sure devices work properly. Window should not open more than 4 inches.

To Fully Open Window



Push in bottom of both Window Opening Control Devices.



Raise bottom sash past devices.



Window Opening Devices need to be reset to lock when bottom of sash is lowered. Devices do not automitically lock. Press top of device to reengage.

A WARNING

Blocks Escape in Fire and Emergency Unless Released

