



## Driver Wireless User Quick Guide

General Workflow from
Pickup to Delivery


#### From Main Menu Select Loads

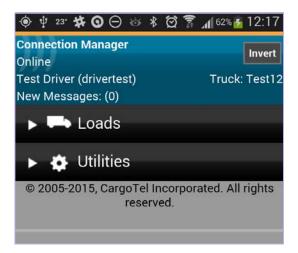


### Select Today's Loads

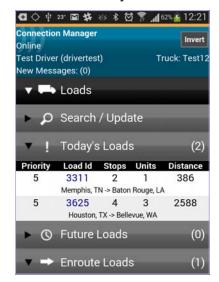

#### Select Load Number

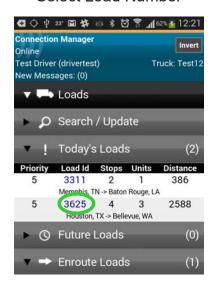

## Select Inspect

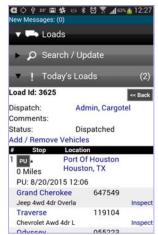


# Scan Barcode or type last 6 digits of VIN




# Capture Odometer reading, # of Keys, Weather



### If the Unit has no damage, Select "No Damage" & click on Submit

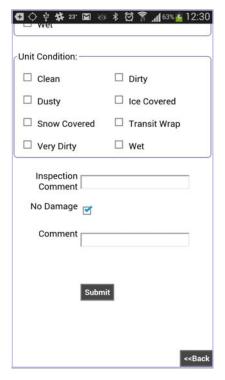

If their is Damage, Click on Inspect

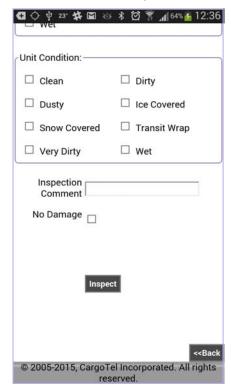

### Select from Menu Area of Vehicle were the Damage is located




# Select the Location of the Damage



### Then click on the Damage Type



Select the Damage Type

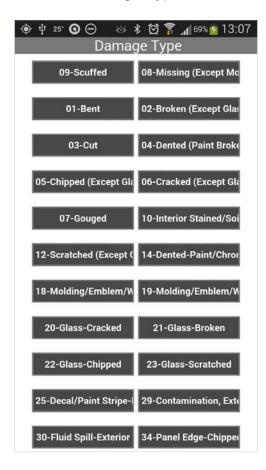

## Click on Severity



## Select Severity of Damage



You can Select to Take Picture



### Click in Submit and then On Done



## Continue Inspecting Other Units

30-Mirror-Outside Left 35-Rocker Panel / Out

11-Door-Left Rear

15-Quarter Panel/Pick


10-Door-Left Front

14-Fender-Left Front




### After All units have been Inspected click on PU

Green: No Damage Red: W/Damage
Blue: Not Inspected

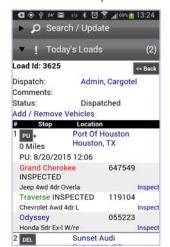

### Click PU & then "Pickup"

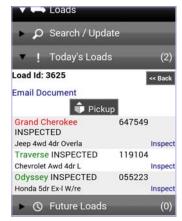


If Attended obtain name & signature and scroll
To the bottom of the page
To complete the Pick Up




#### **Loads En Route**

You can select the Load Number

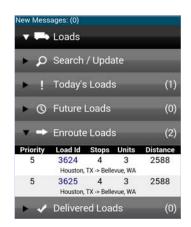


Clicking on Client's Link
You can Obtain
Detailed information
Of the Client including map
location

(Please note that gray area denotes Pick Up or Delivery completed)

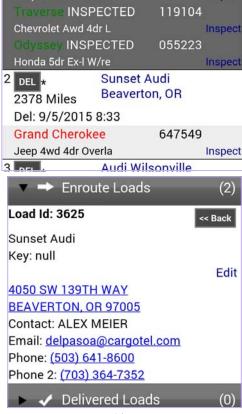


#### **Deliveries**


The process is basically the Same as in Pick Up Selecting Enroute Loads:

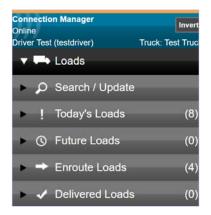

#### Select the Load Number

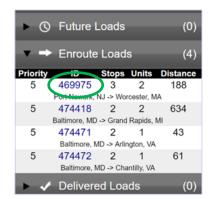


### Select Inspect

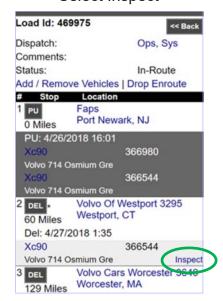


# Scan Barcode or type last 6 digits of VIN




### Capture Odometer reading, # of Keys, Weather Condition & of the Unit

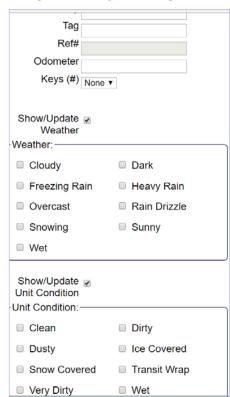


### If the Unit has no damage, Select "No Damage" & click on Submit

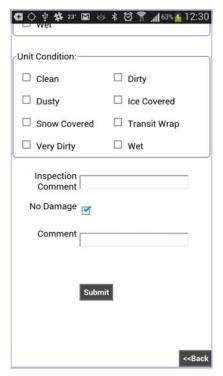


If their is Damage, Click on Inspect

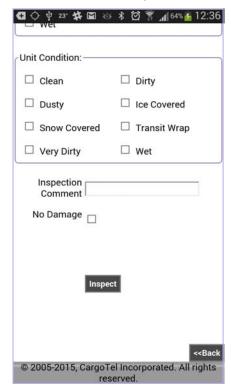

### Select from Menu Area of Vehicle were the Damage is located

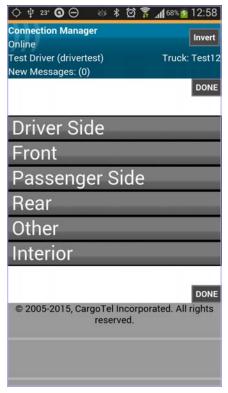


## Select the Location of the Damage

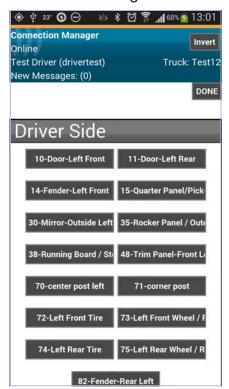

### Then click on the Damage Type



Select the Damage Type

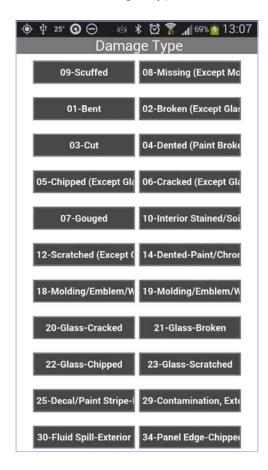

## Click on Severity




## Select Severity of Damage




You can Select to Take Picture



### Click in Submit and then On Done

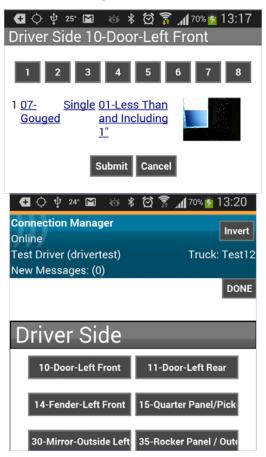

## Continue Inspecting Other Units

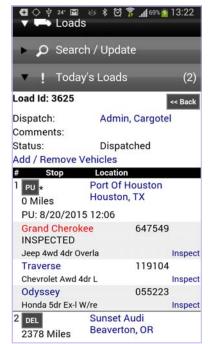


## After All units have been Inspected click on DEL

Green: No Damage Red: W/Damage
Blue: Not Inspected



#### Click Deliver

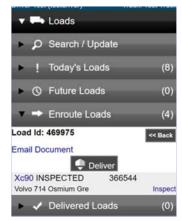

If Attended obtain name & signature and scroll
To the bottom of the page
To complete the Pick Up



## Search & Update

In the Loads we have the Search/Update Panel.
Here you can Search by Vin or Load Number.
Clicking on "Update Loads"
Allows Driver to force update from system which is not every minute.



### **Utilities**




In Utilities is where Driver captures and save his Signature. If using Printer can check what is queued, can also check to see if there any unsent Operations still to send from Pick Up or Delivery




## **Other Tips**


### Clicking on Dispatch Rep link

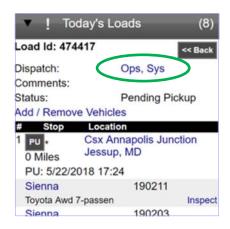


# Allows Driver to view Dispatcher information

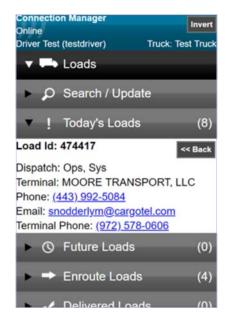


If a Vehicle is missing or damaged and will not be Transported, Driver can use the Add / Remove option

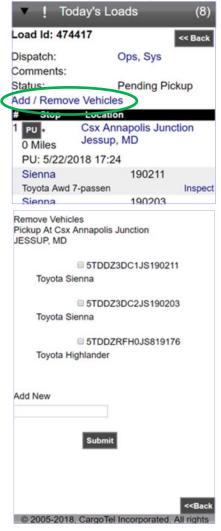


That Provides Driver option from Drop Down for Reason to remove

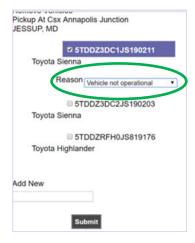

### Driver can click on Vehicle Model to obtain additional information

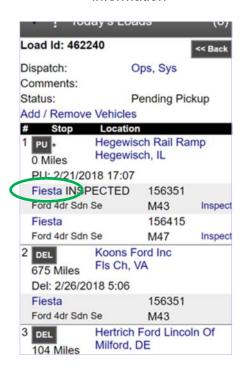

## That Includes Inspection Damages recorded

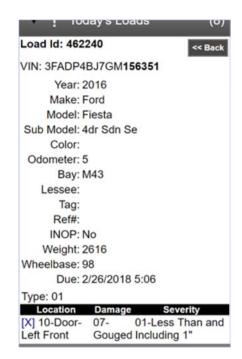



August 2018