 


Brew Your First Single Cup

1 Place Mug & Pod

Place a mug on the drip tray. If using a travel mug, remove the drip tray and place the mug on the drip tray base. Lift the handle and place a K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid.

High Altitude Brewing: While holding the brewer handle up, push down slowly on the K-Cup® pod in the pod holder until the bottom of the K-Cup® pod is punctured by the exit needle.

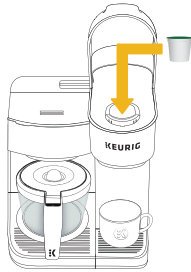

 
2 Brew & Enjoy!

Press the **POWER** button. The **POD** and **CARAFE** buttons will blink. Select **POD**, then select your brew size. Press the **BREW** button to initiate brewing. For a bolder coffee, press the **STRONG** button before pressing the **BREW** button.

Brewing is complete when the brew indicator light is no longer illuminated.

We recommend using a Keurig® Rinse Pod or running a cleansing brew immediately after brewing hot cocoa or other sweetened pods to keep the needles clean.

NOTE: After 5 minutes, the brewer will go into Auto Off mode. To reactivate, press the **POWER** button.

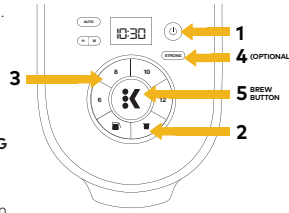

Brew Your First Carafe

 
1 Place Carafe & Fill Basket

Fill the water reservoir to the **MAX** fill line.

Lift the filter basket cover up and insert a 12 cup paper filter into the filter basket.

Add the desired amount of ground coffee (1 tablespoon of ground coffee per cup is recommended). Close the filter basket cover completely and make sure the carafe is on the heating plate.

NOTE: The maximum capacity for regular ground coffee is 15 tablespoons and 12 tablespoons for decaf. Exceeding this amount may cause overflow.

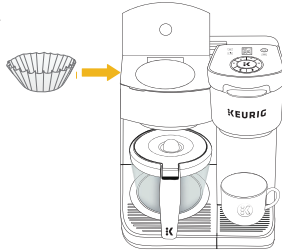


2 Brew & Enjoy!

Press the **POWER** button. The **POD** and **CARAFE** buttons will blink. Select **CARAFE**, then select your brew size. Press the **BREW** button to initiate brewing.

Once the brew is complete, the heating plate will automatically turn on and remain on for 2 hours - the **CARAFE** button will illuminate red. To turn off the heating plate, press and hold the **CARAFE** button until the light is no longer illuminated.

 If you accidentally shut the heating plate off, press and hold the **CARAFE** button until the red light illuminates to turn it back on.

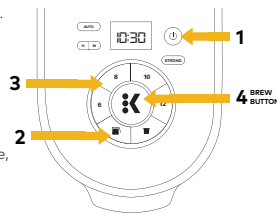

Brewer Features

Smart Start heats then brews in one simple process. No need to wait for the brewer to heat before selecting brew size. Power on your brewer, add coffee, select your brew type, then select your brew size. Press the **BREW** button. The brewer will heat, then automatically begin brewing.

Single Cup Auto Off automatically turns your brewer off 5 minutes after the last brew for energy savings.

Carafe Auto Off automatically turns your heating plate off 2 hours after the last brew for energy savings.

Auto Brew programs the carafe to brew at a specific time up to 24 hours in advance.

Strong Brew increases your coffee strength and intensity for a single cup. For bolder coffee, press the **STRONG** button.

High Altitude To ensure your brewer works properly at higher altitudes (5,000 feet), enable the High Altitude setting by pressing and holding the **POD** and **CARAFE** button for 3 seconds. When enabled, a mountain icon will appear on the display screen.

Pause & Pour a cup mid-brew while brewing a carafe using the 20 second automatic pause feature.

NOTE: Removing the carafe for more than 20 seconds may cause the filter basket to overflow.

Auto Brew Instructions

Fill the water reservoir to **MAX** fill line and load the paper filter and coffee grounds.

1. Press the **AUTO** button. Use the **H/M** buttons to set the time for auto brew to begin, press the blinking **BREW** button to confirm the time.
2. Choose your brew size, then press the blinking **BREW** button to confirm the size.

The AUTO brew setup is now complete.

A **clock icon** will appear on the screen and the **AUTO** button will be illuminated to signal AUTO is on.

Note: Once AUTO brew is enabled, you will only be able to brew a single cup. To disable AUTO brew, press the **AUTO** button once. The **clock icon** will disappear from the screen.

Caring For Your Brewer

Regular cleaning keeps your brewer running smoothly. Always be sure to turn off and unplug your brewer before cleaning. We recommend using a Keurig® Rinse Pod or running a cleansing brew immediately after brewing hot cocoa or other sweetened pods to keep the needles clean.

CAUTION: Parts are not dishwasher safe.

 
Brewer Exterior

Keep your Keurig® brewer looking its best by cleaning the exterior from time to time. Just clean with a damp, soapy, lint-free, non-abrasive cloth. Never immerse the brewer in water or other liquids.




Drip Tray

The drip tray can hold up to 8 ounces of overflow and should be emptied and cleaned occasionally. To remove, slide it toward you, keeping it level to avoid spilling. Clean with a damp, soapy, lint-free, non-abrasive cloth.



Carafe & Carafe Lid

 
The Carafe and Carafe Lid should be cleaned after each brew. Rinse and clean with a damp, soapy, lint-free, non-abrasive cloth.

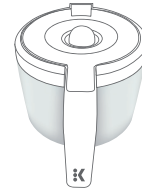

Heating Plate

Once the heating plate has cooled completely, gently wipe with a clean, damp cloth. Never use rough, abrasive materials or cleansers to clean the heating plate.

 NOTE: To turn off the heating plate you can either press the **POWER** button or press and hold the **CARAFE** button until the red light is no longer illuminated.

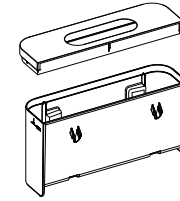

Water Reservoir & Reservoir Lid

The water reservoir lid and water reservoir should be cleaned periodically with a damp, soapy, non-abrasive cloth. Rinse the reservoir thoroughly after cleaning. This will ensure that no cleaning solutions remain in the area as they may contaminate the water supply. After rinsing, fill the reservoir with clean water and return it to the brewer. Do not dry the inside of the water reservoir with a cloth as lint may remain. The water reservoir lid and water reservoir should not be put into the dishwasher.

NOTE: If you are using a water filter inside the water reservoir, remove it before cleaning. The filter cartridge should be replaced regularly as needed per filter instructions.

Filter Basket

Remove the filter basket from the brewer. Remove and discard the paper filter and ground coffee. The filter basket should be washed thoroughly. Dry all parts after use.

NOTE: Coffee grounds should be discarded and the filter basket should be rinsed clean after brewing, or in part with the daily cleaning routine.

