


Handset Operation Instructions

LoHi-S, LoHi-2, and LoHi-3

1. Product Outline

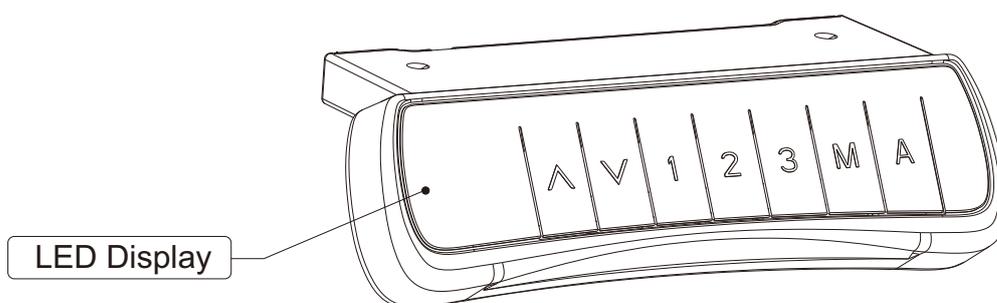

2. Product Specification

There are seven buttons "▲", "▼", "1", "2", "3", "M", "A"

- (1) "▲" : Adjust the desk upwards
- (2) "▼" : Adjust the desk downwards
- (3) "1" : Position 1, first height position saved by the user
- (4) "2" : Position 2, second height position saved by the user
- (5) "3" : Position 3, third height position saved by the user
- (6) "M" : Height memory function
- (7) "A" : Reminder Function

3. Operating Instructions

- Height Adjustable Function:
Press the "▲" or "▼" button to adjust the height. The LED display shows the current height.
- Height Memory Function:
 - a. Press UP or DOWN button and adjust the height to the desired height. Press "M" to save the height, and the screen will display "5-"; then press "1", "2", or "3" to save the height to the corresponding position 1 or 2 or 3, which will show in the display screen as "5-1", "5-2", or "5-3";
 - b. Press "1", "2" or "3" button to automatically adjust to the height saved.

● **Reminder Function:**

- a. Press REMINDER button "A" to activate the function. The LED display shows "00" or "on".
- b. Two seconds later, press the "▲" or "▼" button to adjust the reminder time when the display screen flashes. The default time of the reminder is 45 minutes, which is shown as "45". Then press any button to save the time setup, or wait 5 seconds and system will save the time setup automatically. During the countdown, any operation will lead to a repeat starting of the timer. When the countdown finishes, display screen will show "00" the buzzer will be active with a 10-second "DiDi...DiDi...DiDi..."tone.
- c. During the 10-second reminder buzz, press any button to reactivate the time countdown that is set up in (b) step. If no operation during the 10-second reminder buzz, there will be another reminder buzz after 5 minutes. No operation during the second buzz will turn off the Reminder Function.
- d. Press and hold the "A" button for three seconds to turn off the Reminder Function. The LED display shows "OFF" or "off".

● **Anti-collision sensitivity adjustment:**

- a. Press and hold both the "▲" and "▼" button for 5 seconds to switch the sensitivity setting:
 - "A-0", the anti-collision function is off.
 - "A-1", low sensitivity.
 - "A-2", medium sensitivity.
 - "A-3", high sensitivity (factory default).
- b. During height adjustment, when tabletop comes in contact with another object, it instantly stops and reverses to avoid damage.

● **Troubleshooting:**

- a. When the LED display shows "RSF" or "rSt", press and hold the down key "▼" until the standing desk moves to the lowest position and through the rebound until it stops and the display shows the height number. After the reset, the desk can be used normally;
- b. If there is an error code, press "▼" and hold until "RSF" or "rSt" appears and complete the reset operation as described in "a";
- c. If you perform the above operations, the desk still does not work properly, please contact customer service.

Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.