


Buttons and connections:

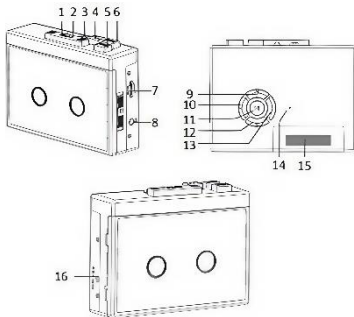

1. PLAY	2. DIR
3. PLAY MODE	4. F.F
5. STOP	6. REW
7. VOL	8. HEADPHONE JACK
9. FM	10. FM TUNING "+"
11. BLUETOOTH MODE (PLAY/STOP)	12. BLUETOOTH MODE
13. FM TUNING "-"	14. LED LIGHT
15. BATTERY COVER	16. DC ADAPTOR JACK

Product features:

- Use the portable cassette player to play music everywhere.
- Connect the music to other Bluetooth receivers, such as Bluetooth speakers and Bluetooth headphones.
- Includes an auto-reverse function.
- 3.5mm earphone jack
- FM mode can receive radio signals (requires 3.5mm headphone as an antenna)

Preparations:

- To Insert batteries:

Slide open the battery compartment lid, and insert two R6 (size AA) dry batteries with the correct polarity.

- To connect DC 5V POWER cord:

Plug the DC 5V power cord into the DC adaptor jack on the device.

Operation:

1. Plug in headphones or connect to Bluetooth speakers/Bluetooth headphones to play music.
2. When playing music, use the volume wheel to adjust the volume.
3. Press "DIR" button to auto-reverse the cassette.
4. Press "PLAY" button to play the cassette.
5. Play Mode: Select what the cassette does when it reaches the end of a side. When set to the "loop" icon, the cassette will automatically switch direction and begin playing the opposite side when one side has finished. When set to the single arrow icon, the cassette will simply stop when a side has finished.
6. Press "F.F" button to fast forward the cassette.
7. Press "REW" button to rewind the cassette.
8. Press the "STOP" button to stop playing the tape. The Bluetooth connection will also be disconnected.

How to Connect to Bluetooth Receiver?

Please make sure to turn on your Bluetooth receiver devices first.

Power supply: 2 AA batteries or any USB port power source.


1. Long press the Bluetooth button for 3 seconds to turn on the Bluetooth function. The LED white light will turn on and flash rapidly, indicating that it is searching and pairing with the Bluetooth receiver. Insert the tape and press the "PLAY" button. When the device successfully pairs with the Bluetooth receiver, the LED white light will remain steady. Do not insert earphones into the 3.5mm jack when Bluetooth is on.
2. Long press the Bluetooth button for 3 seconds to turn off the Bluetooth function. The LED white light and blue light will turn on and flash rapidly.
3. If no Bluetooth device is connected, the LED white light will flash rapidly for a while, and then Bluetooth will automatically turn off.

How to Use FM?

1. Plug earphones (or a speaker with a 3.5mm Aux male) into the earphone jack. Long press the Bluetooth button for 3 seconds to turn on the device, then press the FM button to search for radio stations. The LED light will turn blue and flash.
2. In FM mode, press the "+" or "-" button to adjust the channel.
3. To increase the volume in FM mode, instead of using the volume wheel, hold down the "+" or "-" button to raise or lower the volume.
4. When FM mode is on, we cannot play a cassette.

Majima

Operating Instructions

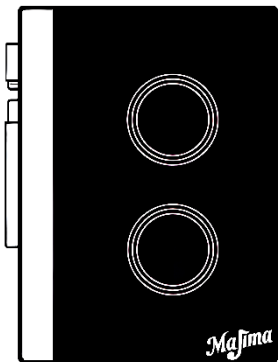

MAJIMA BLUETOOTH CASSETTE PLAYER K66

PLEASE READ THIS OPERATING MANUAL COMPLETELY
BEFORE OPERATING THIS UNIT AND RETAIN THIS
BOOKLET FOR FUTURE REFERENCE.